

 **FUJIFILM**

digital
Tools for the Imagination.

xD
xD-Picture Card™

Exif Print


PictBridge



DIGITAL CAMERA
FinePix F10

OWNER'S MANUAL

This manual will show you how to use your
FUJIFILM DIGITAL CAMERA FinePix F10 correctly.
Please follow the instructions carefully.

1 Getting Ready

2 Using
the Camera

3 Advanced
Features

4 Settings

5 Software
Installation

6 Viewing Images

WARNINGS

To reduce the risk of fire or electric shock, do not expose the AC power adapter to rain or moisture. The AC power adapter should not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, should be placed on the AC power adapter.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings, Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at

- plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personal. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

IMPORTANT

Be sure to read this page before using the Software.

NOTICE

BEFORE OPENING THE CD-ROM PROVIDED BY FUJI PHOTO FILM CO., LTD., PLEASE READ THIS END USER LICENSE AGREEMENT CAREFULLY. ONLY IF YOU AGREE WITH THIS AGREEMENT, SHOULD YOU USE THE SOFTWARE RECORDED ON THE CD-ROM. BY OPENING THE PACKAGE, YOU ACCEPT AND AGREE TO BE BOUND BY THIS AGREEMENT.

End User License Agreement

This End User License Agreement ("Agreement") is an agreement between Fuji Photo Film Co., Ltd. ("FUJIFILM") and you, which sets forth the terms and conditions of the license granted for you to use the software provided by FUJIFILM.

The CD-ROM contains third party software. In case a separate agreement is provided by a third party supplier for its software, the provisions of such separate agreement shall apply to the use of such third party software, prevailing over those of this Agreement.

- Definitions.**
 - "Media" means the CD-ROM titled "Software for FinePix CX" which is provided to you together with this Agreement.
 - "Software" means the software which is recorded on Media.
 - "Documentation" means the operation manuals of Software and other related written materials which are provided to you together with Media.
 - "Product" means Media (including Software) and Documentation collectively.
- Use of Software.**

FUJIFILM grants to you a nontransferable, nonexclusive license:

 - to install one copy of Software onto one computer in binary machine executable form;
 - to use Software on the computer onto which Software is installed; and
 - to make one backup copy of Software.
- Restrictions.**
 - You shall not distribute, rent, lease or otherwise transfer all or any part of Software, Media or Documentation to any third party without FUJIFILM's prior written consent. You also shall not sublicense, assign or otherwise transfer all or any part of the rights granted to you by FUJIFILM under this Agreement without FUJIFILM's prior written consent.
 - Except as expressly granted by FUJIFILM hereunder, you shall not copy or reproduce all or any part of Software or Documentation.
 - You shall not modify, adapt or translate Software or Documentation. You also shall not alter or remove copyright and other proprietary notices that appear on or in Software or Documentation.
 - You shall not, or shall not have any third party, reverse-engineer, decompile, or disassemble Software.

- Ownership.**

All copyrights and other proprietary rights to Software and Documentation are owned and retained by FUJIFILM or the third party suppliers as indicated on or in Software or Documentation. Nothing contained herein shall be construed, expressly or implicitly, as transferring or granting any right, license, or title to you other than those explicitly granted under this Agreement.
- Limited Warranty.**

FUJIFILM warrants to you that Media is free from any defect in material and workmanship under normal use for ninety (90) days from the date of your receipt of Media. Should Media not meet the foregoing warranty, FUJIFILM shall replace such defective Media with other Media bearing no defect. FUJIFILM's entire liability and your sole and exclusive remedy with regard to any defect in Media shall be expressly limited to such FUJIFILM's replacement of Media as provided herein.
- DISCLAIMER OF WARRANTY.**

EXCEPT AS PROVIDED IN SECTION 5 HEREIN, FUJIFILM PROVIDES PRODUCT "AS IS" AND WITHOUT WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED. FUJIFILM SHALL MAKE NO WARRANTY, EXPRESS, IMPLIED OR STATUTORY, AS TO ANY OTHER MATTERS, INCLUDING, BUT NOT LIMITED TO NON-INFRINGEMENT OF ANY COPYRIGHT, PATENT, TRADE SECRET, OR ANY OTHER PROPRIETARY RIGHTS OF ANY THIRD PARTY, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE.
- LIMITATION OF LIABILITY.**

IN NO EVENT SHALL FUJIFILM HAVE ANY LIABILITY FOR ANY GENERAL, SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL, INCIDENTAL, OR OTHER DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS OR LOST SAVINGS) INCURRED FROM THE USE OF OR INABILITY TO USE THE PRODUCT EVEN IF FUJIFILM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
- No export.**

You acknowledge that neither Software nor any part thereof, will be transferred, or exported to any country or used in any manner in violation of any export control laws and regulations to which Software is subject.
- Termination.**

In case you breach any of the terms and conditions hereof, FUJIFILM may immediately terminate this Agreement without any notice.
- Term.**

This Agreement is effective until the date when you cease to use Software, unless earlier terminated in accordance with Section 9 hereof.
- Obligation upon termination.**

Upon termination or expiration of this Agreement, you shall, at your own responsibility and expense, delete or destroy immediately all Software (including its copies), Media and Documentation.
- Governing Law.**

This Agreement shall be governed by and construed in accordance with laws of Japan.

Warning

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

For customers in the U.S.A.

**Tested To Comply
With FCC Standards
FOR HOME OR OFFICE USE**

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try

to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void the user's authority to operate the equipment.

Notes on the Grant:

To comply with Part 15 of the FCC rules, this product must be used with a Fujifilm-specified ferrite-core A/V cable, USB cable, Terminal adapter cable and DC supply cord.

For customers in Canada

CAUTION

This Class B digital apparatus complies with Canadian ICES-003.

Please read the Safety Notes (→P.118) and make sure you understand them before using the camera.

EC Declaration of Conformity

We

Name: Fuji Photo Film (Europe) G.m.b.H.
Address: Heesenstrasse 31
40549 Dusseldorf, Germany

declare that the product

Product Name: FUJIFILM DIGITAL CAMERA FinePix F10
Manufacturer's Name: Fuji Photo Film Co., Ltd.
Manufacturer's Address: 26-30, Nishiazabu 2-chome, Minato-ku,
Tokyo 106-8620, Japan

is in conformity with the following Standards

Safety: EN60065
EMC: EN55022: 1998 Classe B
EN55024: 1998
EN61000-3-2: 1995 + A1: 1998 + A2: 1998

following the provision of the EMC Directive (89/336/EEC, 92/31/EEC and 93/68/EEC) and Low Voltage Directive (73/23/EEC).



Dusseldorf, Germany

March 1, 2005

Place

Date

Signature/Managing Director



Bij dit product zijn batterijen geleverd. Wanneer deze leeg zijn, moet u ze niet weggooien maar inleveren als KCA

Contents

WARNINGS	2	Camera parts and features	8
IMPORTANT SAFETY INSTRUCTIONS	2	Attaching the strap	9
IMPORTANT	2	Using the strap	9
Warning	3	Example of LCD Monitor text display	9
EC Declaration of Conformity	3	■ Photography mode	9
Preface	6	■ Playback mode	9
Accessories included	7		

1 Getting Ready

LOADING THE BATTERY AND THE MEDIA	10
Compatible battery	10
Checking the battery charge	11
CHARGING THE BATTERY	12
TURNING ON AND OFF	14
SETTING THE DATE AND TIME	15
CORRECTING THE DATE AND TIME / CHANGING THE DATE ORDER	16
SELECTING THE LANGUAGE	18

2 Using the Camera

BASIC OPERATION GUIDE	19
PHOTOGRAPHY MODE	
TAKING PICTURES (AUTO AUTO MODE)	21
INDICATOR LAMP DISPLAY	23
AF-ASSIST ILLUMINATOR	23
NUMBER OF AVAILABLE FRAMES	23
■ Standard number of frames per xD-Picture Card	23
USING AF/AE LOCK	24
SHOOTING ASSISTANT FUNCTION	25
PLAYBACK MODE	
VIEWING THE IMAGES (▶ PLAYBACK)	26
Move to Photography mode or Playback mode	26
Single-frame playback / Selecting images	26
Multi-frame playback / Sorting by date	27
Playback zoom	29
ERASING IMAGE (ERASE FRAME)	30

3 Advanced Features

◆ STILL PHOTOGRAPHY	
PHOTOGRAPHY FUNCTIONS	
TAKING PICTURES — SELECTING THE CAMERA SETTINGS	32
AUTO AUTO / SP SCENE POSITION	34
M MANUAL	35
MACRO (CLOSE-UP)	36
FLASH	37
AUTO Auto flash (no icon)	37
Red-eye reduction	37
Forced flash	38
Suppressed flash	38
Slow synchro	38
Red-eye reduction + Slow synchro	38
SELF-TIMER	39
INCREASING MONITOR BRIGHTNESS	40
F PHOTO MODE PHOTOGRAPHY	
QUALITY MODE (NUMBER OF RECORDED PIXELS)	41
Quality settings in Photography mode	42
SENSITIVITY	43
FinePix COLOR	44
PHOTOGRAPHY MENU	
PHOTOGRAPHY MENU OPERATION	45
Changing the page number	46
PHOTOGRAPHY MENU	47
SCENE POSITION	47
LONG EXPOSURE	47
EXPOSURE COMPENSATION	49
PHOTOMETRY	50
WHITE BALANCE (SELECTING THE LIGHT SOURCE)	50
HIGH-SPEED SHOOTING	52
CONTINUOUS SHOOTING	52
Top 3-frame continuous shooting	53
Final 3-frame continuous shooting	53
Long-period continuous shooting	54

AF MODE	54
CENTER	54
MULTI	54
CONTINUOUS	55

◆ PLAYBACK	
PLAYBACK MENU	
ERASING SINGLE / ALL FRAMES	56
IMAGE ROTATE	58

F PHOTO MODE PLAYBACK	
HOW TO SPECIFY PRINT OPTIONS (DPOF)	59
DPOF SET FRAME	60

PLAYBACK MENU	
DPOF SET FRAME	62
DPOF ALL RESET	64
PROTECTING IMAGES: FRAME / SET ALL / RESET ALL	65
AUTOMATIC PLAYBACK	67
RECORDING VOICE MEMOS	68
PLAYING BACK VOICE MEMOS	70
Playing back voice memos	70
Adjusting volume of voice memos	71
TRIMMING	72

◆ MOVIE	
MOVIE MODE	
RECORDING MOVIES	74
Recording times per xD-Picture Card	75

F PHOTO MODE MOVIE	
QUALITY SETTINGS IN MOVIE MODE	76

PLAYBACK MODE	
PLAYING BACK MOVIES	77
Playing back movies	77
Adjusting volume of movies	78

4 Settings

SET-UP	79
USING THE SET-UP SCREEN	79
SET-UP menu options	81
PLAYBACK VOLUME	82
FRAME NO.	82
LCD BRIGHTNESS	83
DIGITAL ZOOM	83
LONG EXPOSURE	84
AUTO POWER OFF	84
LCD POWER SAVE	85
FORMAT	85
WORLD TIME (TIME DIFFERENCE)	86

5 Software Installation

5.1 INSTALLATION ON A Windows PC	88
5.2 INSTALLATION ON A Mac OS X	90

6 Viewing Images

6.1 CAMERA CONNECTION	93
6.1.1 Using the AC Power adapter	93
6.1.2 Connecting to a TV	94
6.2 CONNECTING THE CAMERA DIRECTLY TO THE PRINTER — PictBridge FUNCTION	95
6.2.1 Specifying images for printing on the camera	95
6.2.2 Specifying images for printing without using DPOF (single-frame printing)	97
6.3 CONNECTING TO A PC	99
6.3.1 Connecting to a PC	99
6.3.2 Disconnecting the camera	102
6.4 USING FinePixViewer	103
6.4.1 Mastering FinePixViewer	103
6.4.2 Uninstalling the software	103

System Expansion Options	105	Notes on the xD-Picture Card™	109
Accessories Guide	106	Warning Displays	110
Using Your Camera Correctly	107	Troubleshooting	112
Notes on the Power Supply	107	Specifications	114
Notes on the Battery (NP-120)	107	Explanation of Terms	117
AC Power Adapter	108	Safety Notes	118

Preface

■ Test Shots Prior to Photography

For important photographs (such as weddings and overseas trips), always take a test shot and view the image to make sure that the camera is working normally.

- Fuji Photo Film Co., Ltd. cannot accept liability for any incidental losses (such as the costs of photography or the loss of income from photography) incurred as a result of faults with this product.

■ Notes on Copyright

Images recorded using your digital camera system cannot be used in ways that infringe copyright laws without the consent of the owner, unless intended only for personal use. Note that some restrictions apply to the photographing of stage performances, entertainments and exhibits, even when intended purely for personal use. Users are also asked to note that the transfer of **xD-Picture Card** containing images or data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

■ Liquid Crystal

If the LCD monitor is damaged, take particular care with the liquid crystal in the monitor. If any of the following situations arise, take the urgent action indicated.

- If liquid crystal comes in contact with your skin
Wipe the area with a cloth and then wash thoroughly with soap and running water.
- If liquid crystal gets into your eye
Flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.
- If liquid crystal is swallowed
Flush your mouth thoroughly with water. Drink large quantities of water and induce vomiting. Then seek medical assistance.

■ Notes on Electrical Interference

If the camera is to be used in hospitals or aircrafts, please note that this camera may cause interference to other equipment in the hospital or aircraft. For details, please check with the applicable regulations.

■ Handling Your Digital Camera

This camera contains precision electronic components. To ensure that images are recorded correctly, do not subject the camera to impact or shock while an image is being recorded.

■ Trademark Information

- **xD** and **xD-Picture Card™** are trademarks of Fuji Photo Film Co., Ltd.
- IBM PC/AT is a registered trademark of International Business Machines Corp. of the U.S.A.
- Macintosh, Power Macintosh, iMac, PowerBook, iBook and Mac OS are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.
- Microsoft, Windows, and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries. Windows is an abbreviated term referring to the Microsoft® Windows® Operating System.
- * The "Designed for Microsoft® Windows® XP" logo refers to the camera and the driver only.
- Other company or product names are trademarks or registered trademarks of the respective companies.

■ Explanation of Color Television System

NTSC: National Television System Committee, color television telecasting specifications adopted mainly in the U.S.A., Canada and Japan.

PAL: Phase Alternation by Line, a color television system adopted mainly by European countries and China.

■ Exif Print (Exif ver. 2.2)

Exif Print Format is a newly revised digital camera file format that contains a variety of shooting information for optimal printing.

Accessories included

● NP-120 Rechargeable Battery (1)

Soft case included



● 16 MB, xD-Picture Card™ (1)


Anti-static case (1) included



● Strap (1)




● AC Power Adapter AC-5VW (1 set)

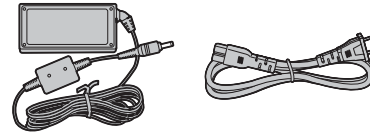


● A/V cable (1)


Approx. 1.2 m (3.9 ft.), plug (2.5 mm dia.) to pin-plug x2

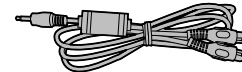

● USB cable (mini-B) (1)

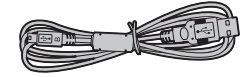

● Terminal Adapter (1)

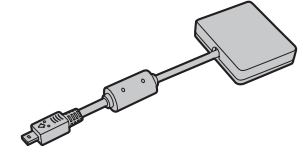

● CD-ROM (1)


Software for FinePix CX




● Owner's Manual (this manual) (1)

Camera parts and features

* Refer to the pages in parentheses for information on using the camera parts or features.

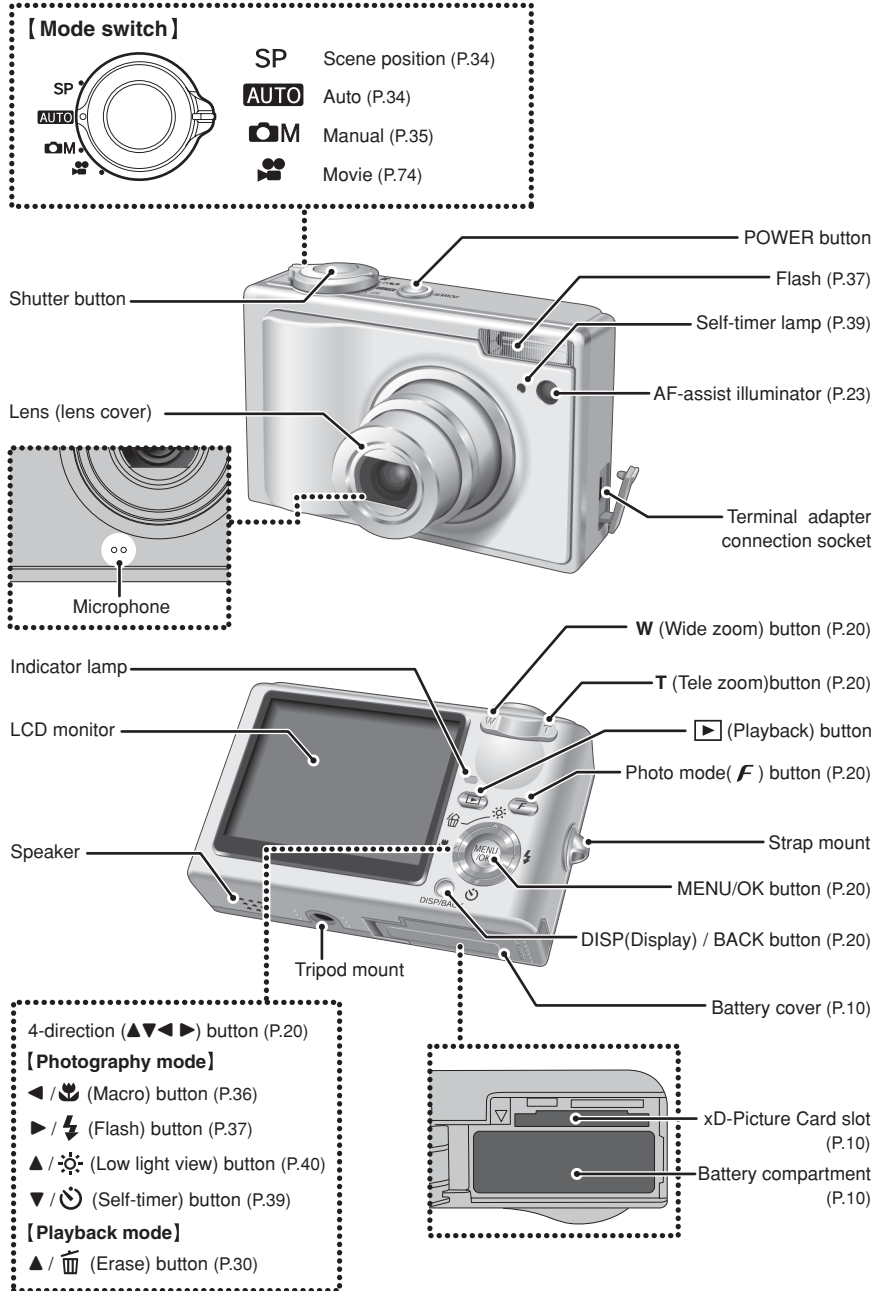


Attaching the strap

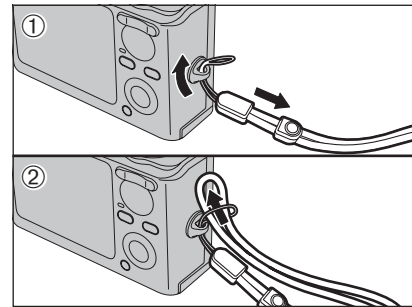

Attach the strap as shown in ① and ②. When attaching the strap, move the fastener to adjust the length and slightly away from the end of the strap, as shown in figure ①.


Using the strap

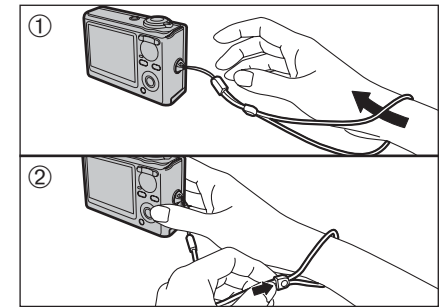


① Loop the strap over your wrist.
② To avoid dropping the camera, secure the strap around your wrist by sliding the fastener to adjust the length.

Example of LCD Monitor text display


Photography mode

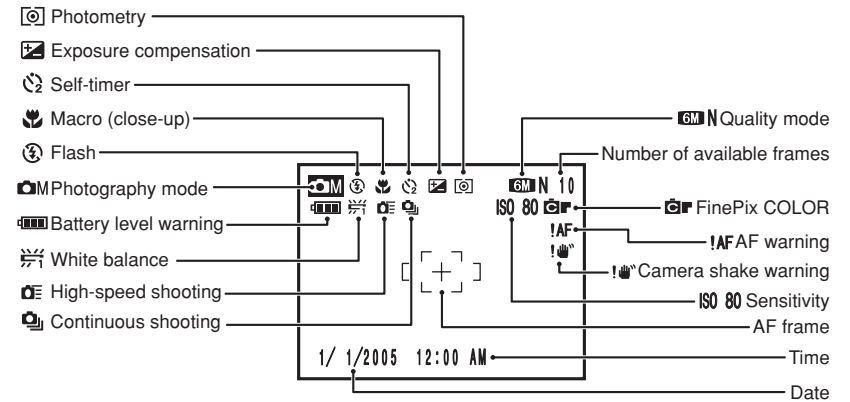

Playback mode

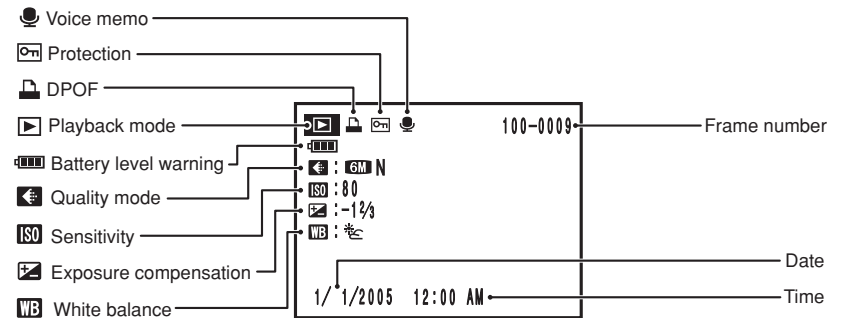

Compatible battery

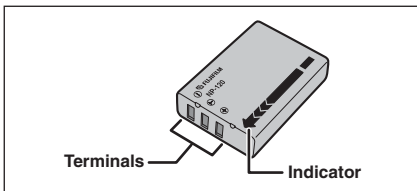


Always use the Rechargeable Battery NP-120 (included).

The use of other brands of rechargeable battery could cause faults or damage to the camera.

● Rechargeable Battery NP-120 1950 mAh (1)


- ⚠ The battery is not fully charged at shipment and must be fully charged before being used.
- ⚠ Do not stick labels onto the battery as this could cause the battery to become jammed inside the camera.
- ⚠ When removed from the camera, the battery should be stored and transported in the case provided. Any contact between the battery terminals could cause the battery to short-circuit and overheat.
- ⚠ See P.107-108 for information on the battery.

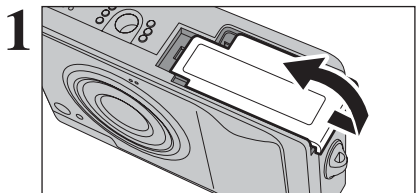

Check that the camera is turned off before opening the battery cover.


- ⚠ If opening the battery cover while the camera is still on, the camera will turn off.
- ⚠ Do not apply force to the battery cover.

Do not open the battery cover while the camera is on. This could damage the xD-Picture Card or ruin the image files on the xD-Picture Card.

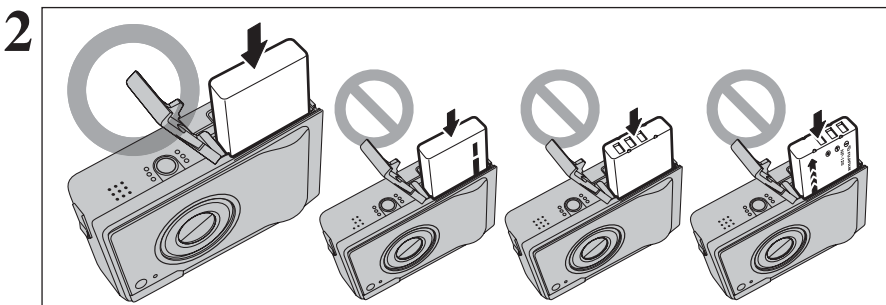


Hold the battery so that the indicators are aligned and load it.

Make sure that battery does not fall out when loading it.

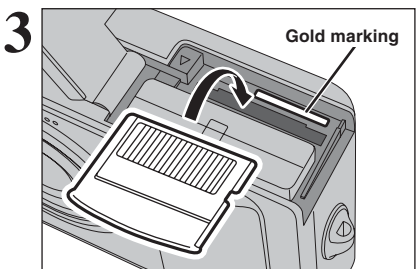

Align the gold marking on the xD-Picture Card slot with the gold contact area on the xD-Picture Card and push the card firmly all the way into the slot.


- ⚠ If the xD-Picture Card is oriented incorrectly, it will not go all the way into the slot. Do not apply force when inserting an xD-Picture Card.

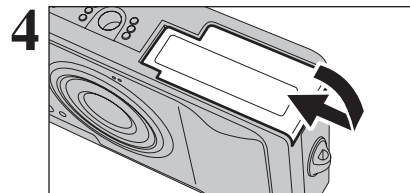

Close the battery cover.

Make sure that battery does not fall out when replacing it.

◆ How to replace the xD-Picture Card ◆

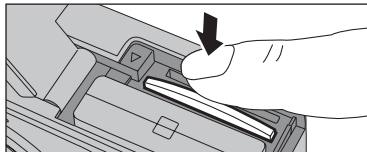


Push the xD-Picture Card into the slot and then slowly remove your finger. The lock is released and the xD-Picture Card is pushed out.

Checking the battery charge

Turn the camera on and check whether the battery level warning (, or) appears on the LCD monitor.


①		Lit white
②		Lit white
③		Lit red
④		Blinking red

- ① There is ample battery charge.
- ② The battery is almost half charged.
- ③ There is insufficient charge left in the battery. The battery will soon run out. Have a new battery ready.
- ④ The battery is depleted. The display will shortly go blank and the camera will stop working. Replace or recharge the battery.

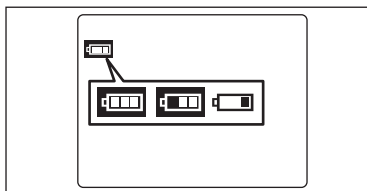

" ", " " or " " appears as a small icon on the left-hand side of the LCD monitor.

- ⚠ Depending on the camera mode, the transition from " " to " " may occur more quickly.
- ⚠ Due to the nature of the battery, the battery level warning may appear early when the camera is used in cold locations. This is normal. Try warming the battery in your pocket or a similar location before use.

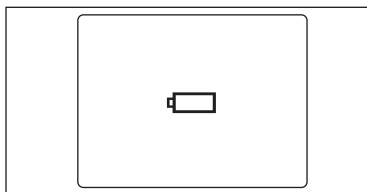


" " appears as a large icon in the center of the LCD monitor.

- ⚠ Battery with no remaining charge (blinking red) may cause camera faults such as the camera turning itself off without retracting the lens. Always load a new or fully charged battery.


◆ Auto power off function ◆

When this function is active, if the camera is left unused for 2 or 5 minutes, the Auto power off function turns the camera off. To turn the camera back on, press the "POWER" button. To play back images, hold down the " " button for about 1 second.


CHARGING THE BATTERY

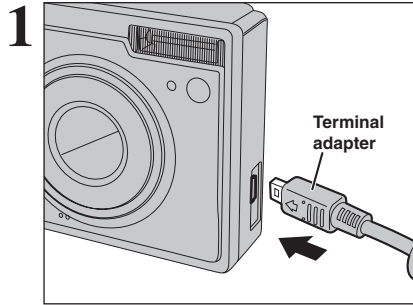


- ① Check that the camera is turned off.
- ② Plug the terminal adapter into the terminal adapter connection socket on the camera.

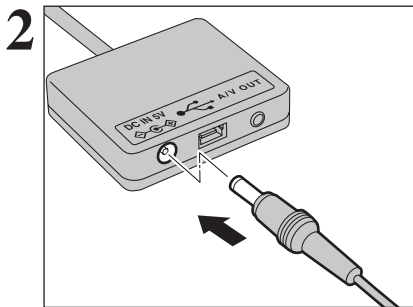

Plug the AC power adapter connector into "DC IN 5V" socket of the terminal adapter.

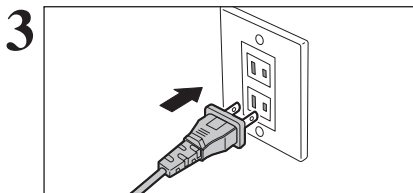

Plug the AC power adapter into the power outlet.

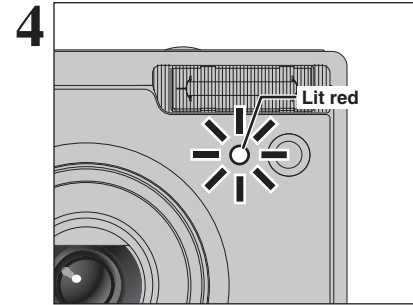

The self-timer lamp lights red and battery charging begins. When charging is completed, the self-timer lamp turns off.

● Full recharging times for completely depleted battery

At an ambient temperature of +21°C to +25°C (+70°F to +77°F)

NP-120: approx. 4 hours

- ⚠ Charging times increase at low temperatures.
- ⚠ If the self-timer lamp blinks during charging, a charging error has occurred and the battery cannot be charged. If this occurs, see P.112.
- ⚠ Turning the camera on during charging interrupts the charging.
- ⚠ Use the BC-65 Battery Charger (sold separately) to charge battery more quickly (⇒P.106).

◆ Charging the battery ◆

When you try to charge the battery immediately after the camera has been used continuously for a long period (e.g. shooting a movie or connected to a PC), charging may not begin soon (the self-timer lamp does not turn red).

This is not a camera fault, but is for protecting the battery from being charged while it is warm. Battery may degrade when charged at high temperatures.

Leave the camera connected to the AC power adapter, and charging will automatically begin within 30 minutes.

Using the AC power adapter

Use the AC power adapter to avoid losing power at inconvenient times, such as when downloading photographed images to your PC. You can take pictures and play back images without worrying about depleting the battery.


● Compatible AC power adapters

- AC-5VW (included)
- AC-5VX (sold separately)
- AC-5VH (sold separately)
- AC-5VHS (sold separately)

- ⚠ Always use the FUJIFILM products listed on the left.
- ⚠ See P.108 for notes on using the AC power adapter.
- ⚠ Only connect and disconnect the AC power adapter when the camera is off. Connecting or disconnecting the AC power adapter while the camera is on temporarily interrupts the power supply to the camera, so that images or movies being shot are not recorded. Failing to turn the camera off first can also result in damage to the **xD-Picture Card** or malfunctions during PC connection.
- ⚠ The socket-outlet shall be installed near the equipment and shall be easily accessible.
- ⚠ The shape of the plug and socket-outlet depends on the country of use.

TURNING ON AND OFF


Turn the camera on in Photography mode

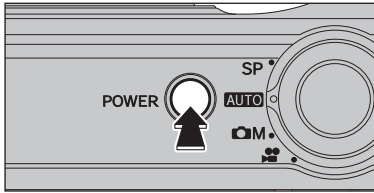

Press the "POWER" button to turn the camera on. Press the "POWER" button again to turn the camera off.


The lens moves when the camera is in Photography mode. Take care not to obstruct the lens. Obstructing the lens will cause damage and [FOCUS ERROR] or [ZOOM ERROR] will appear. Take care also not to get fingerprints on the camera lens as this will result in impaired image quality in your shots.

Turn the camera on in Playback mode

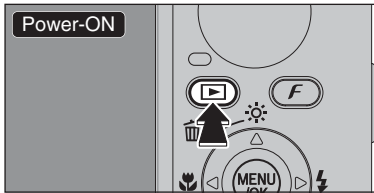

Press the "▶" (Playback) button for about 1 second to turn the camera on in Playback mode.

Move to Photography mode or Playback mode

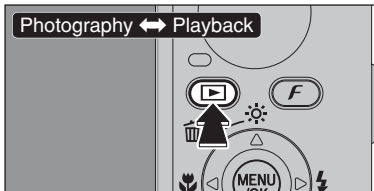


Press the "▶" (Playback) button during shooting to change to Playback mode. Press the "▶" (Playback) button again to return to Photography mode.

Press the shutter button or turn the mode switch to return to Photography mode.

SETTING THE DATE AND TIME

* Correcting the date and time (⇒P.16)


1

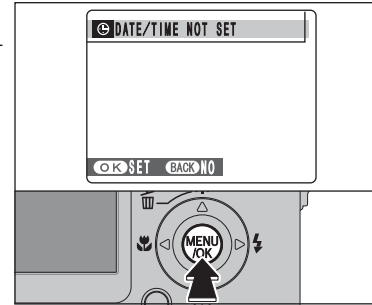

When using the camera for the first time after purchasing, the date and time are cleared. Press the "MENU/OK" button to set the date and time.

- The message also appears when the battery has been removed and the camera has been left for a long period.
- To set the date and time later, press the "DISP/BACK" button.
- If you do not set the date and time, this message will appear each time you turn the camera on.


2

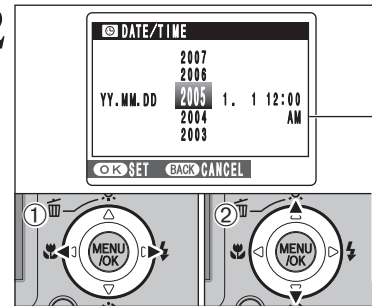

- ① Press "◀" or "▶" to select Year, Month, Day, Hour or Minute.
- ② Press "▲" or "▼" to correct the setting.

- Holding down "▲" or "▼" changes the numbers continuously.
- When the time displayed passes "12", the AM/PM setting changes.


3

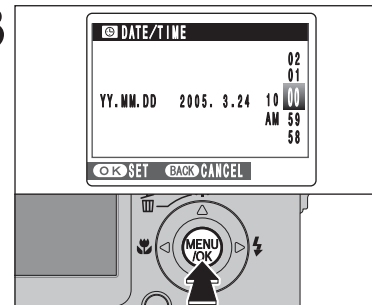


Once you have set the date and time, press the "MENU/OK" button. Pressing the "MENU/OK" button changes the camera to Photography or Playback mode.

- At the time of purchase and after leaving the camera for a long period with the battery removed, settings such as the date and time are cleared. Once the AC power adapter has been connected or the battery has been installed for 2 hours or more, the camera settings will be retained for roughly 6 hours even if both sources of power are removed.


CORRECTING THE DATE AND TIME / CHANGING THE DATE ORDER

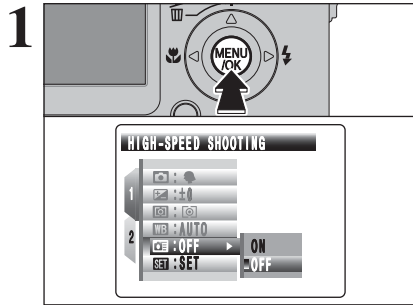


Press the "MENU/OK" button to display the menu on the LCD monitor.

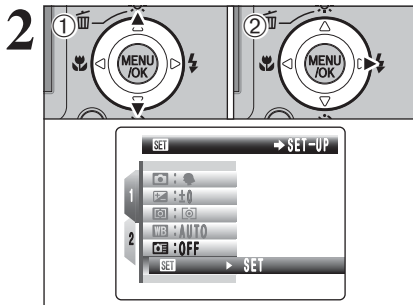


① Press "▲" or "▼" to select "SET" SET-UP.
② Press "▶".

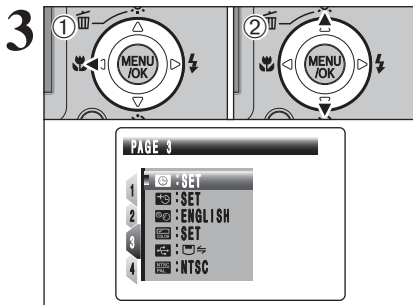

① Press "◀" to move to page number.
② Press "▲" or "▼" to select "PAGE 3".

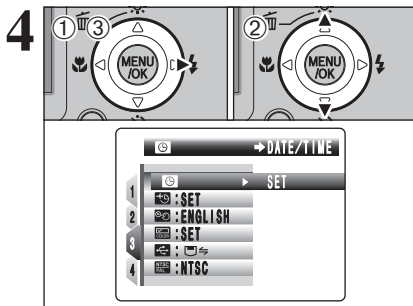


① Press "▶" to move to menu item.
② Press "▲" or "▼" to select "DATE/TIME".
③ Press "▶".

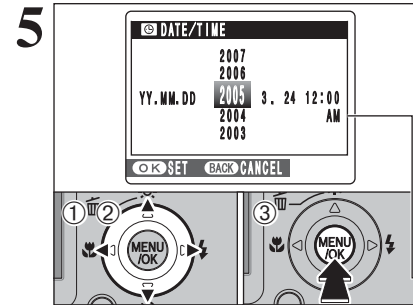

Correcting the date and time

- ① Press "◀" or "▶" to select Year, Month, Day, Hour or Minute.
- ② Press "▲" or "▼" to correct the setting.
- ③ Always press the "MENU/OK" button after the settings are completed.

⚡ Holding down "▲" or "▼" changes the numbers continuously.
⚡ When the time displayed passes "12", the AM/PM setting changes.

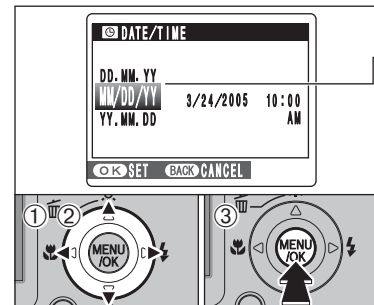


Changing the date order


- ① Press "◀" or "▶" to select the date order.
- ② Press "▲" or "▼" to set the order. Refer to the table below for details of the settings.
- ③ Always press the "MENU/OK" button after the settings are completed.

Date order	Explanation
YY.MM.DD	Displays the date in the "year. month. day" format.
MM/DD/YY	Displays the date in the "month / day / year" format.
DD.MM.YY	Displays the date in the "day. month. year" format.


SELECTING THE LANGUAGE

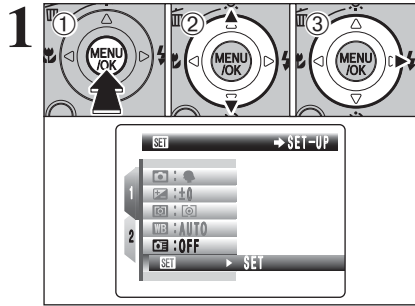

- ① Press the "MENU/OK" button to display the menu on the LCD monitor.
- ② Press "▲" or "▼" to select "SET" SET-UP.
- ③ Press "▶".

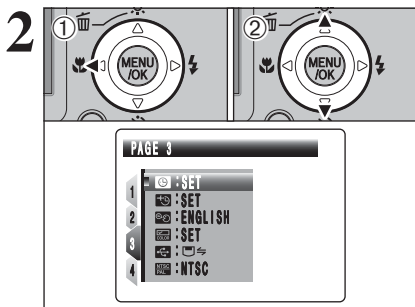


- ① Press "◀" to move to page number.
- ② Press "▲" or "▼" to select "PAGE 3".

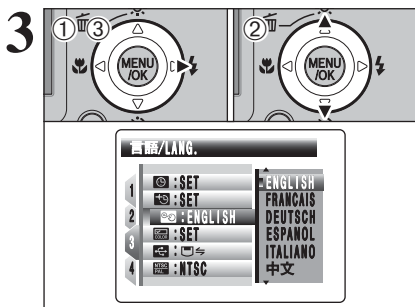

- ① Press "▶" to move to menu item.
- ② Press "▲" or "▼" to select "言語/LANG.".
- ③ Press "▶".

⚡ The screens in this manual are shown in English.
 ⚡ See P.81 for more information on the "SET" SET-UP menu.

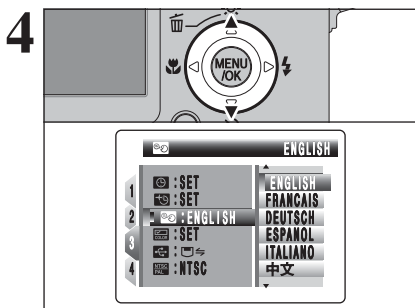

This section describes the camera's functions.

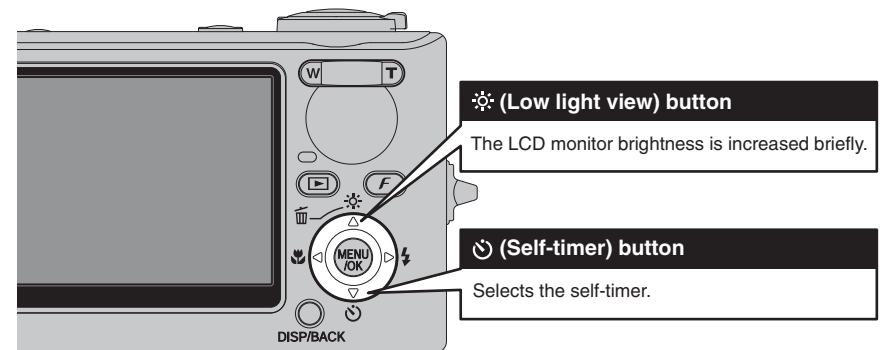
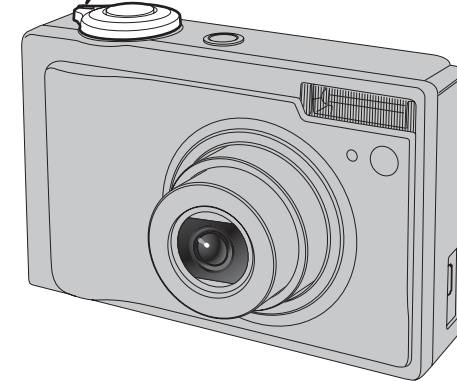
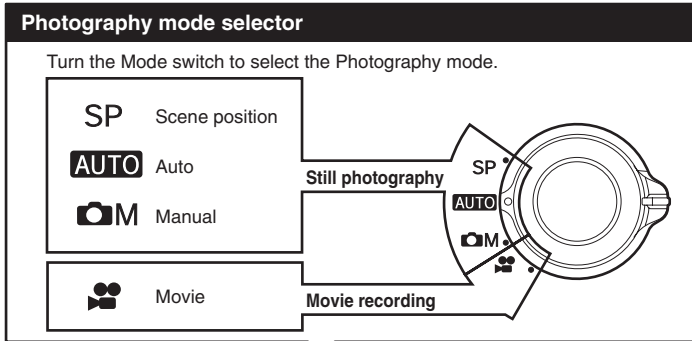


Photo mode *f* button

Photography: Select the quality mode, sensitivity and FinePix COLOR settings.
Playback: Specify the print order (DPOF) settings.

Zoom button

Photography: Press "T" to zoom in (telephoto). Press "W" to zoom out (wide-angle).
Playback: Press "T" to enlarge the image. Press "W" to revert to normal display.

◀▶ button

Photography: ◀ button Turns Macro (M) on and off. ▶ button Sets the Flash (F).
Playback: Change frame or movie frame advance.

DISP/BACK button


DISP: Press this button to select the LCD monitor display.
BACK: Press this button to stop a procedure midway through.

Using the Menus


① Displaying the menu.
 Press the "MENU/OK" button.




② Selecting a menu option.
 Press the up or down arrow on the 4-direction button.

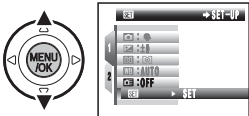

③ Selecting an option.
 Press the right arrow on the 4-direction button.

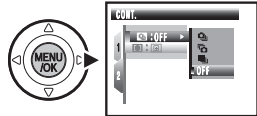

④ Selecting a setting.
 Press the up or down arrow on the 4-direction button.

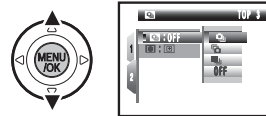

⑤ Confirming the setting.
 Press the "MENU/OK" button.




◆ Displaying the on-screen Help ◆

Instructions for the next step in the procedure appear at the bottom of the LCD monitor. Press the button indicated.
 Press the "MENU/OK" button to erase the displayed frame. To cancel erasing, press the "DISP/BACK" button.



1

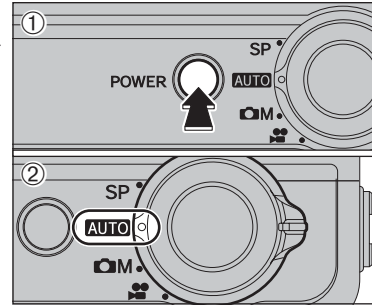

① Press the "POWER" button to turn the camera on.
 ② Set the Mode switch to "AUTO".

● **Focal range**
 Approx. 60 cm (2.0 ft.) to infinity

- Use Macro mode for subjects closer than 60 cm (2.0 ft.) (→P.36).
- When [CARD ERROR], [CARD NOT INITIALIZED], [CARD FULL] or [NO CARD] appears, see P.110.


2



Brace your elbows against your sides and hold the camera with both hands. Position your right thumb so that it is handy for using the zoom.

- Moving the camera while shooting gives a blurred picture (camera shake). Use a tripod to prevent camera shake, particularly for shots in the dark when the selected flash mode is Suppressed flash.
- There may be some uneven brightness at the lower edge of the LCD monitor. This is normal and does not affect the image.


3

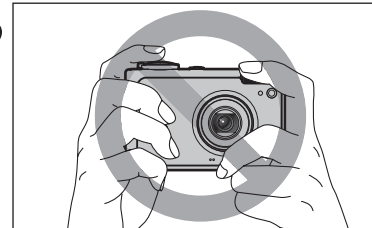

Hold the camera so that your fingers or the strap do not cover the lens, flash or AF-assist illuminator. If the lens, flash or AF-assist illuminator is obscured, the brightness (exposure) of your shot may be incorrect.

- Check that the lens is clean. If it is dirty, clean the lens as informed on P.107.
- If the flash is used in dusty conditions or when it is snowing, white dots may appear in the image due to flash reflecting off the dust particles or snowflakes. Use Suppressed flash mode to fix the problem.


4

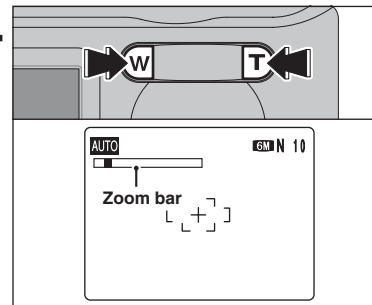

Press "T" (telephoto) button to zoom in. Press "W" (wide-angle) button to zoom out. A zoom bar appears on the LCD monitor.


● **Optical zoom focal length (35 mm camera equivalent)**
 Approx. 36 mm to 108 mm
 (3:2): Approx. 37 mm to 111 mm
 Max. zoom scale: 3x

- See P.83 for information on procedures for using Digital zoom.

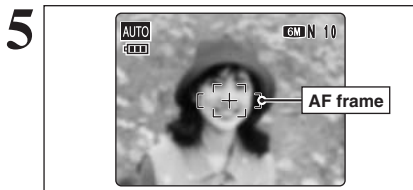

Use the LCD monitor to frame the shot so that the subject fills the entire AF (Autofocus) frame.


- The image shown on the LCD monitor before the picture is taken may differ in brightness, color, etc. from the image actually recorded. Play back the recorded image to check it (⇒P.26).

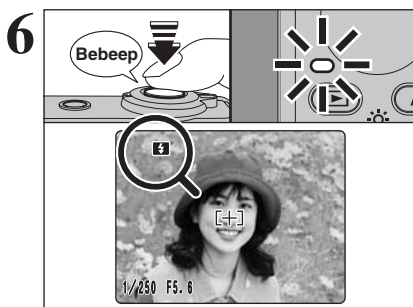

Press the shutter button down halfway. When a short double-beep is heard, the camera focuses on your subject. The AF frame on the LCD monitor becomes smaller and the camera sets the shutter speed and aperture. The indicator lamp (green) changes from blinking to lit.

- When a short double-beep is not heard and "B" appears on the LCD monitor, the camera cannot focus.
- Pressing the shutter button down halfway freezes the image on the LCD monitor briefly. This image is not the recorded image.
- When "B" appears on the LCD monitor (e.g. the shot is too dark for the camera to focus), try standing about 2 m (6.6 ft.) from the subject to take the picture.

Before the flash fires, "B" appears on the LCD monitor. When selecting a slow shutter speed will cause camera shake, "B" appears on the LCD monitor. Use the flash to take pictures. According to the scene or mode being shot, use a tripod.

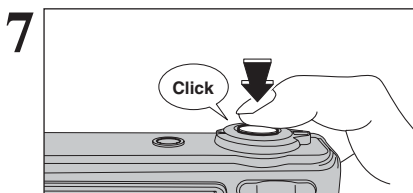

Press the shutter button down fully. When a clicking sound is heard, the camera records the image.

- There is a slight delay between the shutter button being pressed and the picture being taken. Play back the shot to check the image.
- When pressing the shutter button down fully in one motion, the camera takes the picture without the AF frame changing.
- When the camera takes the picture, the indicator lamp lights orange (shooting disabled).
- When taking a picture using the flash, the image may disappear and go dark briefly due to flash charging. The indicator lamp blinks orange during charging.
- See P.110-111 for information on the warning displays.

◆ **Subjects not suitable for autofocus** ◆

The FinePix F10 uses a high-precision autofocus mechanism. However, it may have difficulty focusing on the following:

- Very shiny subjects such as a mirror or car body
- Subjects photographed through glass
- Subjects that do not reflect well, such as hair or fur
- Subjects with no substance, such as smoke or flames
- Dark subjects
- Fast moving subjects
- Subjects with little or no contrast between the subject and the background (such as white walls or subjects dressed in the same color as the background)
- Shots where another high-contrast object (not the subject) is close to the AF frame and is either closer or further away than your subject (such as a shot of someone against a background with strongly contrasting elements)


For such subjects use AF/AE lock (⇒P.24).

INDICATOR LAMP DISPLAY

Display	Status
Lit green	Locking the focus
Blinking green	AF/AE in progress, camera shake warning or AF warning (ready to shoot)
Blinking green and orange alternately	Recording to xD-Picture Card (ready to shoot)
Lit orange	Recording to xD-Picture Card (not ready)
Blinking orange	Charging the flash (flash will not fire)
Blinking red	<ul style="list-style-type: none"> • xD-Picture Card Warnings No card inserted, card not formatted, incorrect format, card full and xD-Picture Card error • Lens operation error

* Detailed warning messages appear on the LCD monitor (⇒P.110-111).


AF-ASSIST ILLUMINATOR

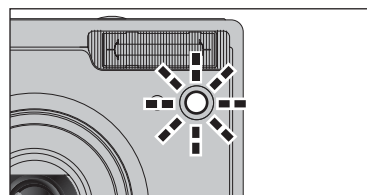

Press the shutter button down halfway in dimly lit conditions. The camera fires the AF-assist illuminator (green) to allow easier focusing. Note that the effective range decreases for telephoto shots.

- Even when the AF-assist illuminator fires, the camera may have difficulty focusing in some conditions.
- Even though there is no danger to safety, do not expose it directly in someone's eyes from a short distance.
- The camera focuses most easily when a picture is taken at a distance of around 4 m (13.1 ft.) with wide-angle and 2.3 m (7.5 ft.) with telephoto.
- See P.81 for information on turning the AF-assist illuminator off.

NUMBER OF AVAILABLE FRAMES

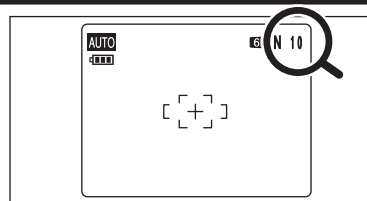

The number of available frames appears on the LCD monitor.


- See P.41 for information on changing the quality setting.
- The default quality "N" set at shipment is "6M N".

■ **Standard number of frames per xD-Picture Card**


The table below shows the standard number of frames for a new **xD-Picture Card** formatted on the camera. The larger the **xD-Picture Card** capacity, the bigger the difference between the actual number of frames and the number shown here. Also, the size of an image file varies depending on the subject. So the number of remaining shots may decrease by 2 or may remain the same. For this reason, the number displayed may not show the actual number of frames.

Quality setting	6M F	6M N	3:2	3M	2M	03M
Number of recorded pixels	2848 × 2136					
DPC-16 (16 MB)	5	10	10	19	25	122
DPC-32 (32 MB)	10	20	20	40	50	247
DPC-64 (64 MB)	21	42	42	81	101	497
DPC-128 (128 MB)	42	84	84	162	204	997
DPC-256 (256 MB)	85	169	169	325	409	1997
DPC-512/M512 (512 MB)	170	339	339	651	818	3993
DPC-M1GB (1 GB)	341	680	680	1305	1639	7995


USING AF/AE LOCK

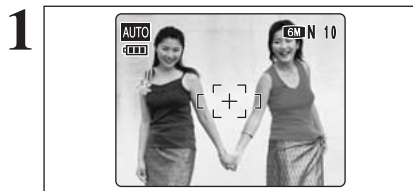


In this shot, the subjects (two people in this case) are not in the AF frame. Taking the picture at this point will result in the subjects being out of focus.

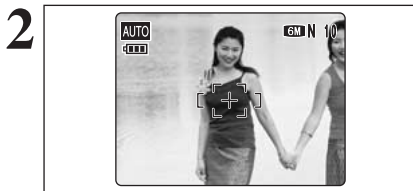

Move the camera slightly so that one of the subjects is in the AF frame.

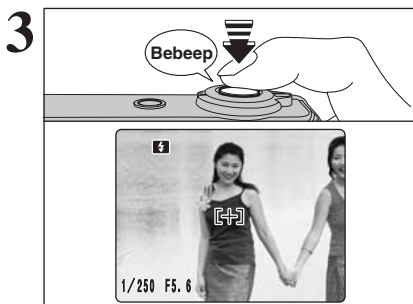

Press the shutter button down halfway (AF/AE lock). When a short double-beep is heard, the camera focuses on your subject. The AF frame on the LCD monitor becomes smaller and the camera sets the shutter speed and aperture. The indicator lamp (green) changes from blinking to lit.

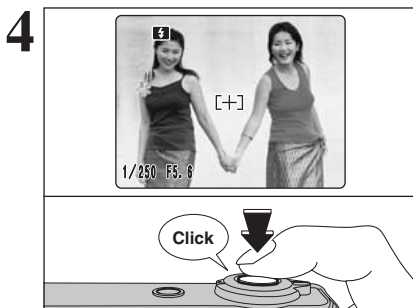


Continue to hold the shutter button down halfway. Move the camera back to the original image and press the shutter button fully.

- AF/AE lock can be applied repeatedly before the shutter is released.
- Use AF/AE lock in all Photography modes to guarantee excellent results.

◆ AF (Autofocus)/AE (Auto-exposure) lock ◆

On the FinePix F10, pressing the shutter button down halfway locks the focus and exposure settings (AF/AE lock). To focus on a subject that is off to one side or to set the exposure before composing the final shot, lock the AF and AE settings. Then take the picture to get the best result.

SHOOTING ASSISTANT FUNCTION

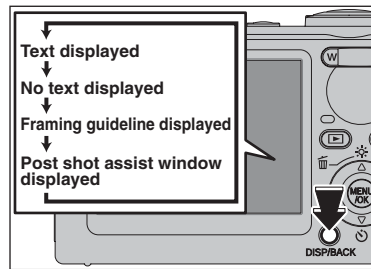


Select the framing guideline and post shot assist window in Photography mode. Pressing the “DISP/BACK” button changes the LCD monitor display.

◆ Important ◆

Always use AF/AE lock when composing a shot. The image may be out of focus if AF/AE lock is not used.

BEST FRAMING

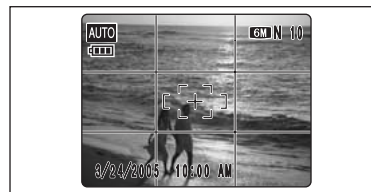

The framing guideline display consists of horizontal and vertical lines that divide the image on the LCD monitor into 9 frames.

Scene	
	Position the main subject at the intersection of two lines in this frame or align one of the horizontal lines with the horizon. Use this frame as a guide to the subject's size and the balance of the shot while composing a shot.
<ul style="list-style-type: none"> • The framing guideline is not recorded on the image. • The lines in the scene frame divide the image into 3 roughly equal parts horizontally and vertically. The resulting printed image may be shifted slightly from the scene frame. 	

POST SHOT ASSIST WINDOW



When using the post shot assist window, the last photographed image appears as a thumbnail in the bottom left corner of the LCD monitor (post shot assist window). Up to the last 3 photographed images appear on the post shot assist window. This serves as a guide for taking other shots with similar compositions.

- Any of the following clears the image in the post shot assist window:
 - Setting the camera to Playback mode
 - Turning the camera off
 - Using the PictBridge function
 - Using the DSC mode

PLAYBACK MODE VIEWING THE IMAGES (▶ PLAYBACK)

Move to Photography mode or Playback mode




Press the "▶" button for about 1 second to turn the camera on in Playback mode.



Press the "▶" button during shooting to change to Playback mode. Press the "▶" button again to return to Photography mode.

◆ Auto power off function ◆


When this function is active, if the camera is left unused for 2 or 5 minutes, the Auto power off function turns the camera off (→P.84). To turn the camera back on, press the "POWER" button. To play back images, hold down the "▶" button for about 1 second.

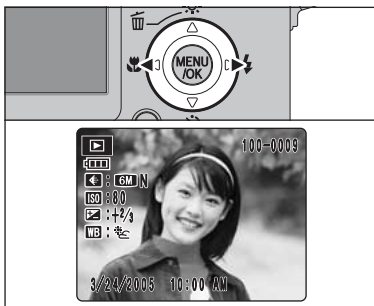

Single-frame playback

Press "▶" to scan forward through the images. Press "◀" to scan backwards.

- When the camera is set to Playback mode, the last image shot appears on the LCD monitor.
- When the lens is extended during playback, the lens retracts as a protective measure if the camera is not used for about 6 seconds.

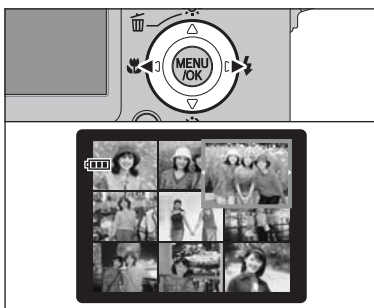

Selecting images



To select images on the thumbnail lists screen, hold down "◀" or "▶" for 1 second during playback.

◆ Still images viewable on the FinePix F10 ◆


This camera will display still images recorded on the FinePix F10 or still images (excluding some uncompressed images) recorded on any FUJIFILM digital camera that supports xD-Picture Cards. Clear playback or playback zooming may not be possible for still images shot on cameras other than the FinePix F10.

Multi-frame playback

In Playback mode, press the "DISP/BACK" button to change the display shown on the LCD monitor. Press the "DISP/BACK" button until the multi-frame playback screen (9 frames) appears.

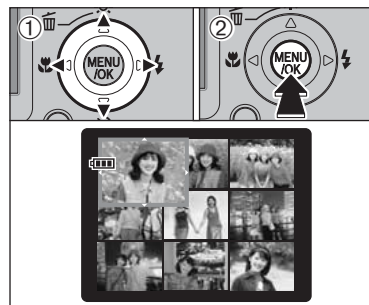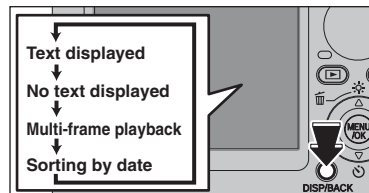


- Press "▲", "▼", "◀" or "▶" to move the cursor (colored frame) to the selecting frame. Press "▲" or "▼" repeatedly to jump to the next page.
- Press the "MENU/OK" button again to enlarge the image.

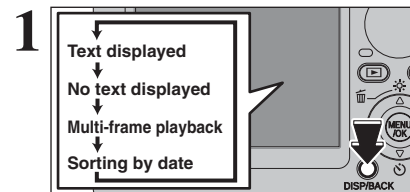


Sorting by date

In Playback mode, press the "DISP/BACK" button to change the display shown on the LCD monitor. Press the "DISP/BACK" button until the sorting by date screen appears.


- Large number of images may take longer to appear.

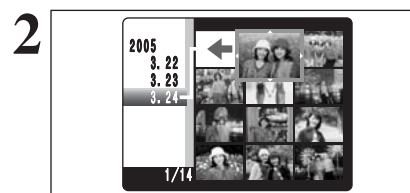

Changing to Sorting by date mode displays the images taken on the same day as the image selected in Multi-frame playback mode.

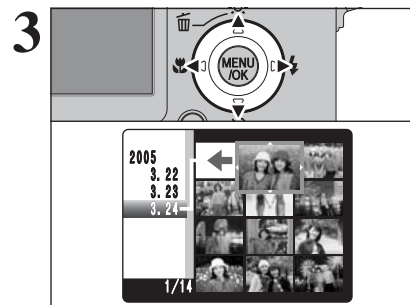


Press "▲", "▼", "◀" or "▶" to move the cursor (colored frame) to the selecting frame.

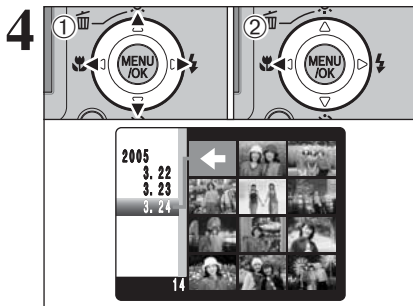


To select the date:


- ① Press "▲", "▼", "◀" or "▶" to move the cursor (colored frame) to "◀" on the upper left frame.
- ② Press "◀" to display the selecting date.

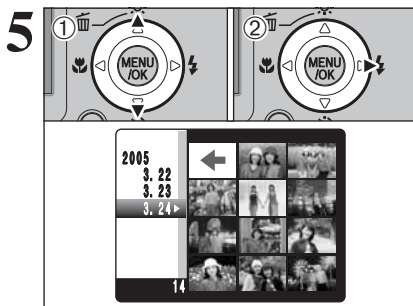


- ① Press "▲" or "▼" to move the cursor (colored frame) to select the date. Pressing "▲" or "▼" repeatedly changes to the next page.
- ② Press "▶" to select the first frame taken on the date.

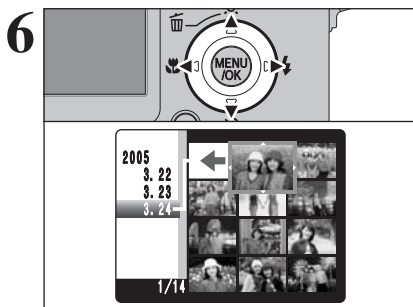

Press "▲", "▼", "◀" or "▶" to move the cursor (colored frame) to the selecting frame.

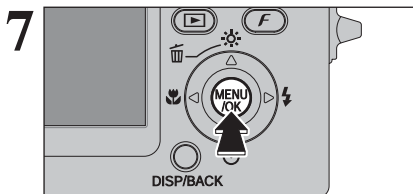


Press the "MENU/OK" button to enlarge the selected image.

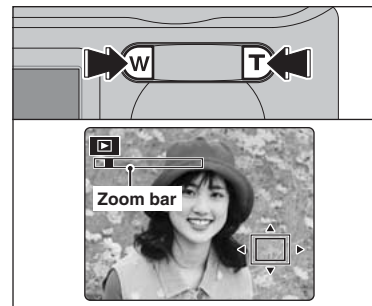

Playback zoom

Press the "T" or "W" button during single-frame playback to zoom the image. A zoom bar appears on the LCD monitor.

- ▶ Press the "DISP/BACK" button to cancel playback zoom.
- ▶ Playback zoom cannot be used with multi-frame playback.

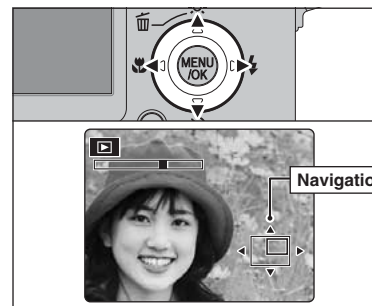

Press "▲", "▼", "◀" or "▶" to display another part of the image. The current displayed image appears on the navigation screen.

- ▶ Press the "DISP/BACK" button to cancel playback zoom.

Zoom scales

Quality mode	Max. zoom scale
6M (2848 × 2136 pixels)	Approx. 4.5×
3:2 (3024 × 2016 pixels)	Approx. 4.7×
3M (2048 × 1536 pixels)	Approx. 3.2×
2M (1600 × 1200 pixels)	Approx. 2.5×

Specify the camera settings for taking pictures to get the best result. A general guide is given below.

1 Select the Photography mode (⇒P.34-35, 74).

- AUTO** Auto Specifies all settings other than Quality, Sensitivity and FinePix COLOR on the camera.
- SP** Scene position Selects the best Scene position setting for the scene being shot.
- M** Manual Sets the “Exposure compensation”, “Photometry”, “White balance” and “AF mode” to manual to easily control yourself.
- MV** Movie Records a movie.

2 Specify the photography settings (⇒P.36-39).

- M** Macro Used for close-up shots.
- ⚡** Flash Used for shots in dark locations or for backlit subjects, etc.
- ⌚** Self-timer Used in situations such as group shots where the photographer is included in the shot.

3 Take the pictures (check the exposure and focus ⇒ adjust the shot composition ⇒ press the shutter button down fully).

★ You can use the menus for more detailed settings (⇒P.41-44, 49-55).

The table below provides a number of sample settings. Use the settings effectively.

To achieve this result	Sample settings
To prevent the image from having a red or blue cast due to the light source	Change the “White balance” setting in the photography menu.
To avoid missing snapshot opportunities	Take pictures in AUTO mode (see “Using the Camera”). Shoot with HIGH-SPEED SHOOTING.
To prevent the subject from being overexposed or underexposed and to show the substance and textures of the subject clearly.	Use exposure compensation. Select (+) if the background is pale and (-) if the background is dark.

■ List of functions available in each mode

Function	Photography mode	SP							M	MV	
		AUTO	NATURAL LIGHT	PORTRAIT	LANDSCAPE	SPORT	NIGHT	LONG EXPOSURE			
Macro	P.36	YES	YES	NO	NO	NO	NO	NO	YES	NO	
Flash	AUTO Auto flash	P.37	YES	NO	YES	NO	YES	NO	NO	YES	NO
	Red-eye reduction	P.37	YES	NO	YES	NO	NO	NO	YES	YES	NO
	Forced flash	P.38	YES	NO	YES	NO	YES	NO	YES	YES	NO
	Suppressed flash	P.38	YES	YES	YES	YES	YES	YES	YES	YES	NO
	Slow synchro	P.38	NO	NO	YES	NO	NO	NO	YES	NO	YES
Red-eye reduction + Slow synchro	P.38	NO	NO	YES	NO	NO	YES	NO	YES	NO	
Self-timer	P.39	YES	YES	YES	YES	YES	YES	YES	YES	NO	

■ List of menu options available in each mode

Menu options	Factory default	SP							M	MV
		AUTO	N	Portrait/Landscape/Sport	Night	Long Exposure	M			
FinePix Photo mode										
Quality	P.41	GM N	YES	YES	YES	YES	YES	YES	YES	YES*1
ISO	P.43	-	YES	YES*2	YES	YES	YES	YES*3	YES	NO
FinePix COLOR	P.44	F-STANDARD	YES	YES	YES	YES	YES	YES	YES	NO
Photometry	Exposure compensation	P.49	±0	NO	NO	NO	NO	NO	YES	NO
	Multi	P.50		NO	NO	NO	NO	NO	YES	NO
		Spot	P.50	Multi	NO	NO	NO	NO	NO	YES
Average	P.50		NO	NO	NO	NO	NO	YES	NO	
White balance	P.50	AUTO	NO	NO	NO	NO	NO	NO	YES	NO
High-speed shooting	P.52	OFF	YES	YES	YES	YES	YES	NO	YES	NO
Continuous shooting selections	Top 3-frame	P.53	OFF	YES	YES	YES	YES	NO	YES	NO
	Final 3-frame	P.53		YES	YES	YES	YES	NO	YES	NO
	Long-period (up to 40 frames)	P.54		YES	YES	YES	YES	NO	YES	NO
AF mode	CENTER	P.54	CENTER	YES	YES	YES	YES	YES	YES	NO
	MULTI	P.54		NO	NO	NO	NO	NO	YES	NO
	CONTINUOUS	P.55		NO	NO	NO	NO	NO	YES	NO

*1 The factory default resolution for Movie mode is 640 × 480 pixels.
 *2 AUTO only
 *3 Except for AUTO


When the camera does not obtain the correct exposure.

When the image is too bright
 Lower the ISO sensitivity setting.

When the image is too dark
 Raise the ISO sensitivity setting.
 Use flash.

AUTO AUTO / SP SCENE POSITION / **M** MANUAL


AUTO AUTO

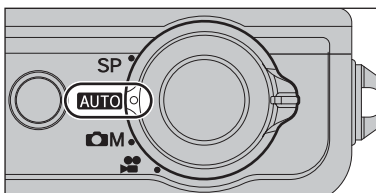

Set the Mode switch to "AUTO". This is the easiest mode to use and can be used for most types of shots.


See P.33 for information on available flashes.

SP SCENE POSITION

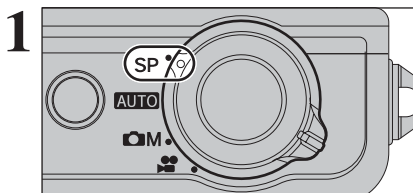


Set the Mode switch to "SP". This mode provides the best Scene position setting for the scene being shot. Choose from 5 types of scene (N, P, L, S, or C).

"P", "L", "S", "C" and "M" cannot be selected Macro mode.

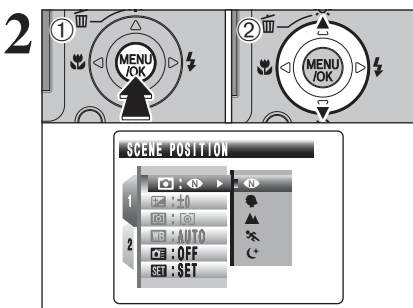


1 Press the "MENU/OK" button to display the menu on the LCD monitor.
2 Press "▲" or "▼" to select "M" SCENE POSITION.

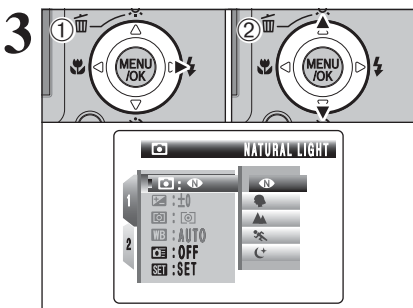

1 Press "▶".
2 Press "▲" or "▼" to select the setting.

4

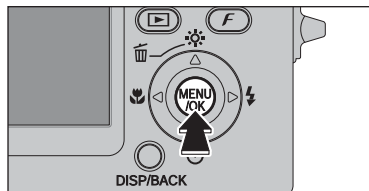


Press the "MENU/OK" button to confirm the setting.

Scene position settings	Explanation	Available flash modes
N NATURAL LIGHT	This mode produces beautiful images that retain the natural ambience when shots are taken in low-light conditions. This mode is also ideal for situations where the flash cannot be used. Sample uses: • Portraits of sleeping children, pets and birthday cakes • Candlelit services (weddings, etc.) and school concerts • Restaurants, aquariums, museums and churches	Flash not available
P PORTRAIT	Used for photography getting beautiful skin tones and soft overall tone.	AUTO / / / / / / /
L LANDSCAPE	Used for shooting scenery in daylight and provides crisp, clear shots of scenery such as buildings and mountains.	Flash not available
S SPORT	Used for shooting sporting events. This mode gives priority to faster shutter speeds.	AUTO / /
C NIGHT	Used for shooting evening and night scenes. This mode allows you to take shots where priority is given to slow shutter speeds of up to 3 seconds. To prevent camera shake, always use a tripod.	/ /
M LONG EXPOSURE	This mode allows you to select shutter speeds from 3 to 15 seconds.	/ /

* "P", "L", "S", "C" and "M" cannot be selected Macro mode.
* You can use "M" LONG EXPOSURE when "C" NIGHT mode is set. (⇒P.47)


M MANUAL

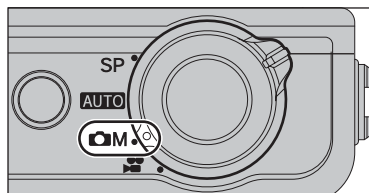

Set the Mode switch to "M". Sets the "Exposure compensation" (⇒P.49), "Photometry" (⇒P.50), "White balance" (⇒P.50) and "AF mode" (⇒P.54) to manual to easily control yourself.

MACRO (CLOSE-UP)

Available Photography modes:

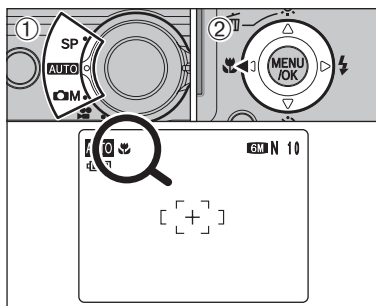AUTO, SP (only **N**), **AM**


Select Macro mode to take close-up shots.

- Set the Mode switch to Photography mode.
- Press the “**MENU/OK**” button. The “**M**” appears on the LCD monitor indicating that you can take close-up shots.

To cancel Macro mode, press the “**MENU/OK**” button again.

● Focal range

Approx. 7.5 cm to 80 cm (3.0 in. to 2.6 ft.) (wide-angle)

Approx. 30 cm to 80 cm (1.0 ft. to 2.6 ft.) (telephoto)


● Effective flash range

Approx. 30 cm to 80 cm (1.0 ft. to 2.6 ft.)

- Any of the following cancels Macro mode:
 - Changing the Mode switch setting
 - Turning the camera off
- Use a tripod to prevent camera shake when shooting in the dark (when “**!**” appears).
- Selecting MULTI, the focusing position remains near the center of the LCD monitor.

FLASH

Available Photography modes:

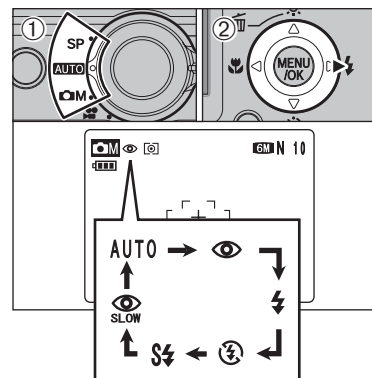AUTO, SP, **AM**


Choose from 6 flash modes according to the type of shot.

- Set the Mode switch to Photography mode.
- The flash setting changes each time you press the “**FLASH**” button. The last displayed setting is the selected mode.

● Effective flash range (**AUTO**)

Wide-angle: approx. 30 cm to 6.5 m
(1.0 ft. to 21.3 ft.)

Telephoto: approx. 30 cm to 4 m
(1.0 ft. to 13.1 ft.)

- If the flash is used in dusty conditions or when it is snowing, white dots may appear in the image due to flash reflecting off dust particles or snowflakes. Use Suppressed flash mode to fix the problem.
- The flash charging time may increase when the battery is low on charge.
- When taking a picture using the flash, the image may disappear and go dark briefly due to flash charging. The indicator lamp blinks orange during charging.
- The available flash modes are limited depending on the Photography menu selected (→P.33).
- The flash fires several times (pre-flashes and the main flash).

Press the shutter button down halfway. “**!**” appears on the LCD monitor when the flash is used.



AUTO Auto flash (no icon)

Use this mode for ordinary photography. The flash fires as required by the shooting conditions.

- If pressing the shutter button while the flash is charging, the picture will be taken without the flash.



Red-eye reduction

Use this mode to guarantee that the subject's eyes appear normal when taking pictures of people in low-light conditions. The flash fires a pre-flash just before the picture is taken and then fires again to take the actual picture. The flash fires as required by the shooting conditions.

- If pressing the shutter button while the flash is charging, the picture will be taken without the flash.

◆ Red-eye effect ◆

When using the flash to take a picture of people in low-light conditions, their eyes sometimes appear red in the picture. This is caused by the light of the flash reflecting off the inside of the eye. Use Red-eye reduction flash to minimize the likelihood of this effect.

Take the following measures to make Red-eye reduction more effective:

- Get the subjects to look at the camera.
- Get as close as possible to the subjects.



⚡ Forced flash

Use this mode in backlit scenes, such as a subject against a window or in the shade of a tree, or to get the correct colors when taking a picture under bright lighting. In this mode, the flash fires in bright as well as dark conditions.



🔇 Suppressed flash

Use this mode for taking pictures using indoor lighting, for shots taken through glass, and for photography in places such as theaters or at indoor sporting events where the distance is too great for the flash to be effective. When you use Suppressed flash, the selected white balance function (➡P.50) operates so that natural colors are captured along with the ambience of the available light.

- 🔧 Use a tripod to prevent camera shake when shooting in Suppressed flash mode in the dark condition.
- 🔧 See P.23, 110 for information on the camera shake warning.



⚡ Slow synchro

This is a flash mode that uses a slow shutter speed. This allows you to take pictures of people at night that clearly show both your subjects and the night time backdrop. To prevent camera shake, always use a tripod.


- **Slowest shutter speed**
“⌚” NIGHT: up to 3 sec.

📷 Red-eye reduction + Slow synchro

Use this mode for Slow synchro shots with Red-eye reduction.

- 🔧 The image may be overexposed when shooting bright scenes.

To take a picture of a main subject at night with the background brightly lit, use the “⌚” (NIGHT) setting in Photography mode (➡P.34).

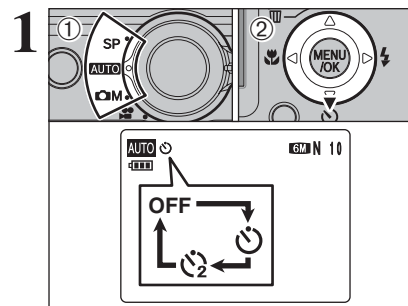

The self-timer is used in situations where the photographer is included in the shot. When photographer is away from the camera, use a tripod to prevent camera fall.


- ① Set the Mode switch to Photography mode.
- ② The self-timer setting changes each time you press the “⏸ (▼)” button. The last displayed setting is the selected mode.

- ⏸: The picture is taken after 10 seconds.
- ⏸: The picture is taken after 2 seconds.

- 🔧 Any of the following cancels the self-timer setting:
 - Completing the shooting
 - Changing the Mode switch setting
 - Setting the camera to Playback mode
 - Turning the camera off


◆ Using the 2-second self-timer ◆

This is useful when you have the camera on a tripod and you want to prevent camera shake.

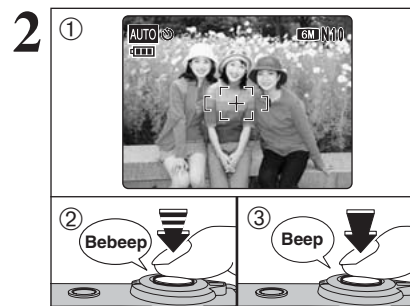


- ① Position the AF frame over the subject.
- ② Press the shutter button down halfway to focus on the subject.
- ③ Without releasing the shutter button, press the button all the way down (fully pressed) to start the self-timer.

- 🔧 The AF/AE lock can be used (➡P.24).
- 🔧 Take care not to stand in front of the lens when pressing the shutter button as this can prevent the correct focus or brightness (exposure) from being achieved.

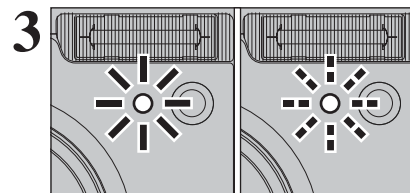

The self-timer lamp lights and then starts blinking until the picture is taken.

- 🔧 To stop the self-timer, once it has started running, press the “DISP/BACK” button.

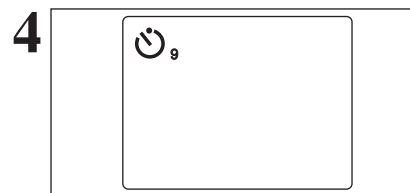


A countdown appears on the LCD monitor indicating the time remaining until the picture is taken. Self-timer mode is cancelled after each shot.


☀ INCREASING MONITOR BRIGHTNESS

Available Photography modes: **AUTO**, SP, **CM**

This is useful when checking the shot composition for dark scenes (Slow synchro shots, etc.).

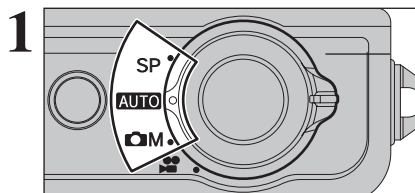


Set the Mode switch to Photography mode.

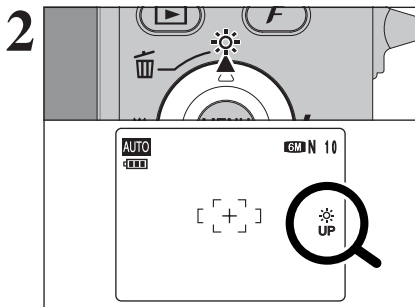

Press the “☀ (▲)” button.
 “☀” appears on the LCD monitor and the subject is displayed brightly.
 To cancel increased brightness:
 Press the “☀ (▲)” button again.
 This function is automatically cancelled after each shot.


- ☛ This function is purely for checking the composition of your shot. It does not increase the brightness of the image.
- ☛ Even if you increase the brightness in low-light conditions, you cannot check the subject.

☰ QUALITY MODE (NUMBER OF RECORDED PIXELS)

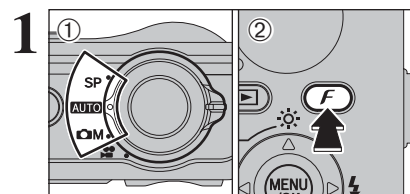


- ① Set the Mode switch to Photography mode.
- ② Press the “F” button to display the menu on the LCD monitor.

The quality setting is retained even when the camera is off or the mode setting is changed.

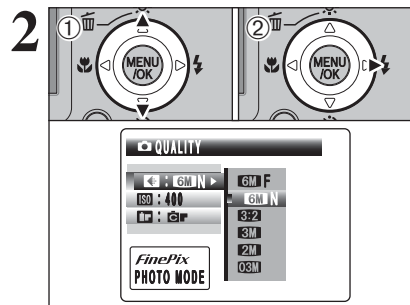

- ① Press “▲” or “▼” to select “☰” QUALITY.
- ② Press “▶”.

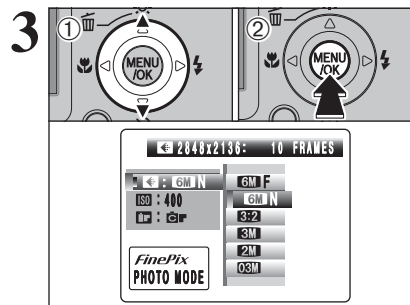

- ① Press “▲” or “▼” to change the setting.
- ② Press the “MENU/OK” button to confirm the setting.

- ☛ The numbers to the right of setting show the number of available frames.
- ☛ When changing the quality setting, the number of available frames also changes (→P.23).


QUALITY MODE (NUMBER OF RECORDED PIXELS)

Quality settings in Photography mode

Quality mode	Sample uses
6M F (2848 × 2136)	Printing at up to 10R (25.4 × 30.5 cm) / A4 size
6M N (2848 × 2136)	For better quality, select "6M F"
3:2 (3024 × 2016)	
3M (2048 × 1536)	Printing at up to 6R (15.2 × 20.3 cm) / A5 size
2M (1600 × 1200)	Printing at up to 4R (10.2 × 15.2 cm) / A6 size
03M (640 × 480)	To use for e-mail or web site

◆ Area shot and quality setting ◆

Area shot excluding "3:2"

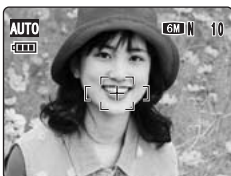


Area shot with "3:2"



Normal shooting provides an aspect ratio of 4:3 and "3:2" shooting provides an aspect ratio of 3:2 (same aspect ratio as 35 mm film and post card).


ISO SENSITIVITY

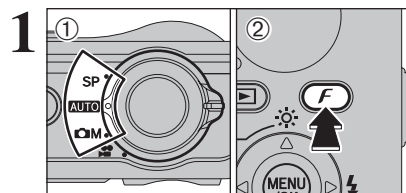


- 1 Set the Mode switch to Photography mode.
- 2 Press the "F" button to display the menu on the LCD monitor.

In "M" Movie mode, do not set the "ISO" (sensitivity) setting.

Sensitivity is retained even when the camera is off or the mode setting is changed.

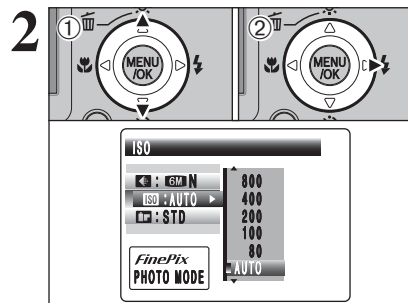

- 1 Press "▲" or "▼" to select "ISO" (sensitivity).
- 2 Press "▶".

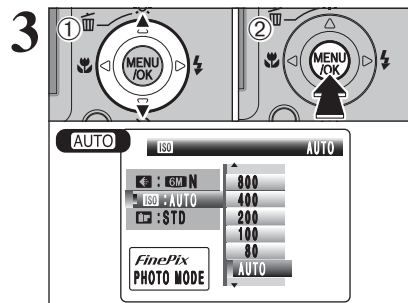

- 1 Press "▲" or "▼" to change the setting.
- 2 Press the "MENU/OK" button to confirm the setting.

● Settings

AUTO /80/100/200/400/800/1600


Although higher sensitivity settings will allow you to take pictures in darker locations, they will also increase the amount of speckling in your images. Streaking may also be visible in shots of scenes such as the night sky.

Choose the sensitivity setting that best suits the conditions.


When selecting "N" NATURAL LIGHT in "SCENE POSITION", only AUTO can be selected in the "ISO" (sensitivity) setting.

When selecting "M" LONG EXPOSURE in "SCENE POSITION", AUTO cannot be selected in the "ISO" (sensitivity) setting.

Selecting AUTO as the sensitivity setting, the camera selects the best sensitivity setting for the subject's brightness.

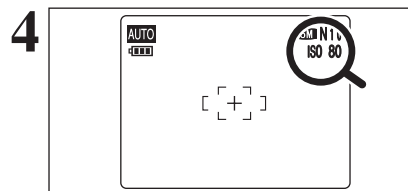


When the sensitivity is set to "80", "100", "200", "400", "800" or "1600", the selected sensitivity setting appears on the LCD monitor.

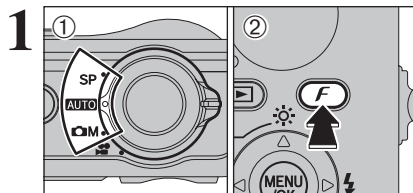


- ① Set the Mode switch to Photography mode.
- ② Press the “F” button to display the menu on the LCD monitor.

In “Movie” mode, do not set the “” FinePix COLOR setting.

The FinePix COLOR setting is retained even when the camera is off or the mode setting is changed.

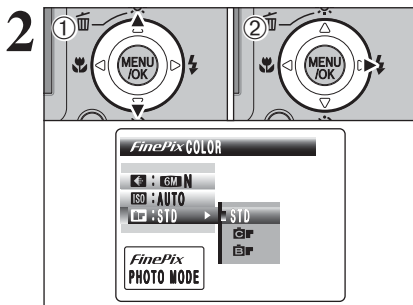


- ① Press “▲” or “▼” to select “” FinePix COLOR.
- ② Press “▶”.

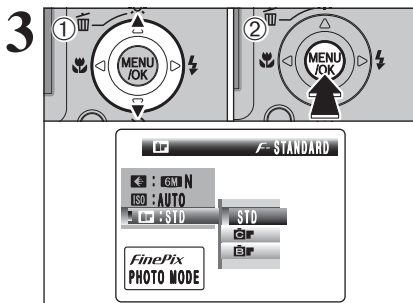

- ① Press “▲” or “▼” to change the setting.
- ② Press the “MENU/OK” button to confirm the setting.

- F-CHROME may have little visible effect with some subjects, such as close-up shots of people (portraits).
- Because the effects on the image differ depending on the scene being shot in F-CHROME mode, take pictures in F-STANDARD mode as well as this mode. Note that you may not be able to see any difference on the LCD monitor.
- For shots taken in F-CHROME mode or F-B&W mode, automatic quality adjustment will be suppressed on Exif Print compliant printers.


F-STANDARD	The contrast and color saturation are set to standard. Use this mode for normal photography.
F-CHROME	The contrast and color saturation are set to high. This feature is effective for taking more vivid shots of subjects such as scenery (blue sky and greenery) and flowers.
F-B&W	This setting converts the colors in the photographed image to black and white.

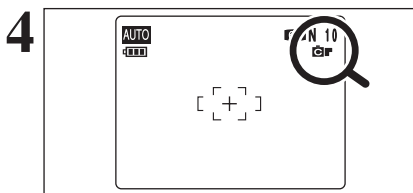


When setting F-CHROME or F-B&W, the icon appears on the LCD monitor.

F-CHROME:

F-B&W:

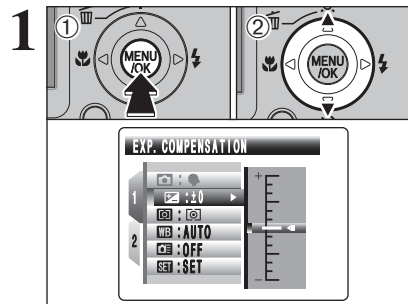


- ① Press the “MENU/OK” button to display the menu on the LCD monitor.
- ② Press “▲” or “▼” to select the menu.

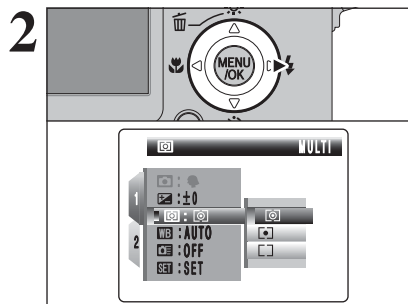


Press “▶”.

When the top or bottom of the menu item is selected, press “▲” or “▼” to change the page.

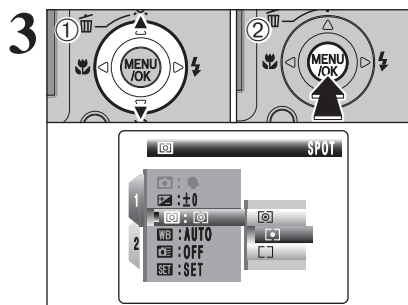


- ① Press “▲” or “▼” to change the setting.
- ② Press the “MENU/OK” button to confirm the setting.


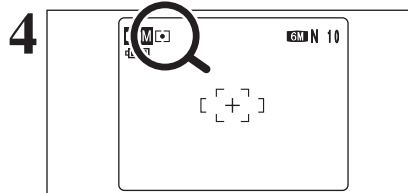



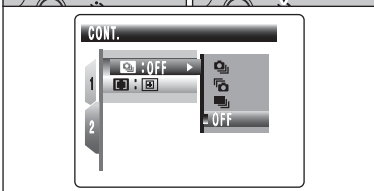
When you enable the setting, an icon appears in the top-left corner of the LCD monitor.

The settings available in the menu screen vary depending on the Photography mode.

Changing the page number

1  Press the "MENU/OK" button to display the menu on the LCD monitor.

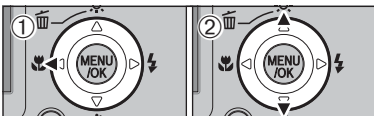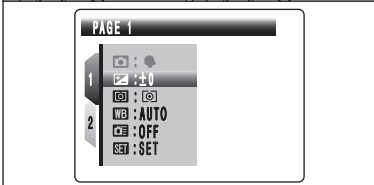2 
 ① Press "◀" to move to page number.
 ② Press "▲" or "▼" to select the page.


3 
 ① Press "▶" to move to menu item.
 ② Press "▲" or "▼" to select the menu item.


Scene position →P.47

Specify "NL" NATURAL LIGHT, "P" PORTRAIT, "L" LANDSCAPE, "S" SPORT or "C" NIGHT.

Exposure compensation →P.49

Use this setting when the correct exposure cannot be obtained.

Photometry →P.50

Use this setting for scenes where the brightness of the subject and background differ markedly so that the MULTI setting is unlikely to achieve the desired results.

White balance →P.50

Change this setting to take a picture with the white balance fixed for the surroundings and lighting.

High-speed shooting →P.52

Use this setting to focus the shot quickly.


Continuous shooting →P.52

Use this setting for taking pictures in Continuous shooting mode.

AF mode →P.54

Set the focusing method.

SCENE POSITION Available Photography mode: SP

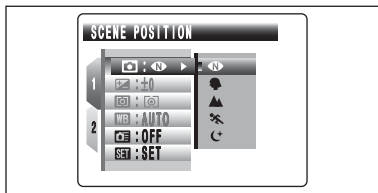


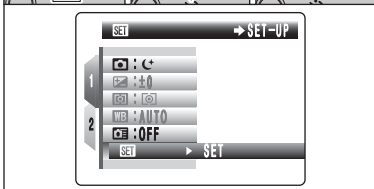
Choose from 5 types of Scene position setting for the scene being shot. You can use "CM" LONG EXPOSURE when "C" NIGHT mode is selected.


Scene position settings	Explanation	Available flash modes
NATURAL LIGHT	This mode produces beautiful images that retain the natural ambience when shots are taken in low-light conditions. This mode is also ideal for situations where the flash cannot be used. Sample uses: • Portraits of sleeping children, pets and birthday cakes • Candlelit services (weddings, etc.) and school concerts • Restaurants, aquariums, museums and churches	Flash not available
PORTRAIT	Used for photography getting beautiful skin tones and soft overall tone.	AUTO / / / / /
LANDSCAPE	Used for shooting scenery in daylight and provides crisp, clear shots of scenery such as buildings and mountains.	Flash not available
SPORT	Used for shooting sporting events. This mode gives priority to faster shutter speeds.	AUTO / /
NIGHT	Used for shooting evening and night scenes. This mode allows you to take shots where priority is given to slow shutter speeds of up to 3 seconds. To prevent camera shake, always use a tripod.	/ /
CM LONG EXPOSURE	This mode allows you to select shutter speeds from 3 to 15 seconds.	/ /

* "P", "L", "S", "C" and "CM" cannot be selected Macro mode.
* You can use "CM" LONG EXPOSURE when "C" NIGHT mode is set.


CM LONG EXPOSURE

Use this setting to take a picture of a main subject in low-light condition. Long exposure can be used in only the "C" NIGHT mode.

1 
 ① Press the "MENU/OK" button to display the menu on the LCD monitor.
 ② Press "▲" or "▼" to select "SET" SET-UP.
 ③ Press "▶".

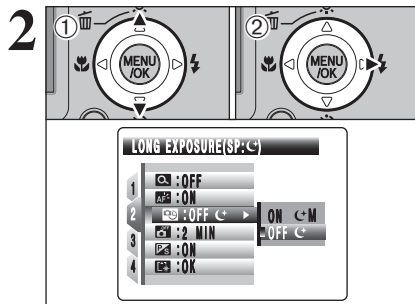
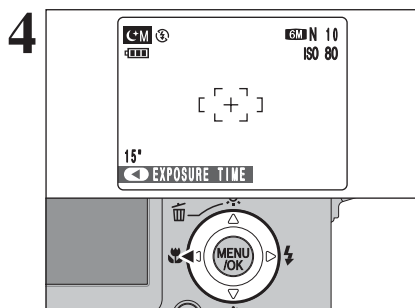


- ① Press “▲” or “▼” to select “ON” LONG EXPOSURE.
- ② Press “▶”.

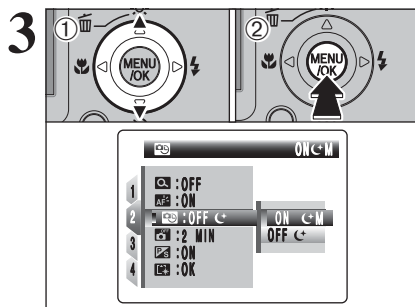


- ① Press “▲” or “▼” to select “ON CM”.
- ② Press the “MENU/OK” button.


⚡ When selecting the long exposure setting, flash mode is changed to “CM”. The flash mode cannot be selected other than “CM”, “F” or “OFF”.




Press “◀”.

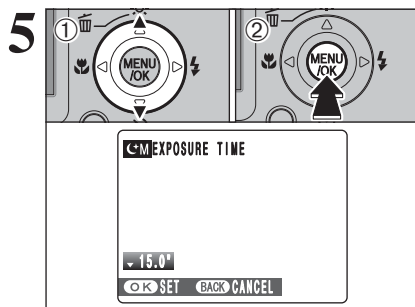

- ① Press “▲” or “▼” to select the shutter speed.
- ② Press the “MENU/OK” button to confirm the setting.

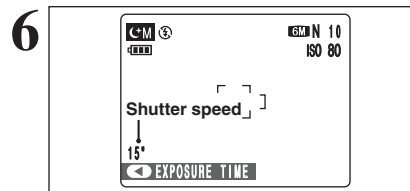


Selected shutter speed appears on the LCD monitor.

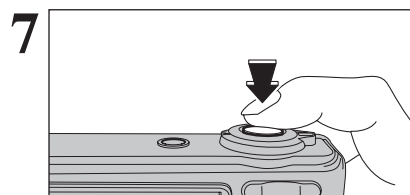

Press the shutter button to take pictures.

EXPOSURE COMPENSATION

Available Photography mode:

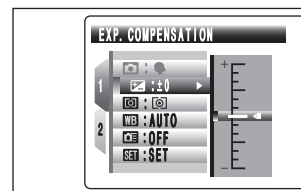

Use this function for shots to get the correct brightness (exposure), such as shots with extremely high contrast between the subject and the background.

- **Compensation range**
-2 EV to +2 EV (13 steps in 1/3 EV increments)
See P.117 for more information on EV.

⚡ Any of the following disables exposure compensation:

- Using the flash in Auto or Red-eye reduction mode
- Shooting dark scenes in Forced flash mode

◆ To obtain the optimum brightness ◆

Adjust the exposure compensation according to the level of brightness or darkness in the image.


- When the subject appears too bright
Try a negative (-) compensation setting.
This will make the overall image darker.
- When the subject appears too dark
Try a positive (+) compensation setting.
This will make the overall image brighter.

■ Guide to compensation

- Backlit portraits: +2 steps to +4 steps (+ $\frac{2}{3}$ EV to +1 $\frac{1}{3}$ EV)
- Very bright scenes (such as snowfields) and highly reflective subjects: +3 steps (+1 EV)
- Shots made up predominantly of sky: +3 steps (+1 EV)
- Spotlight subjects, particularly against dark backgrounds: -2 steps (- $\frac{2}{3}$ EV)
- Scenes with low reflectivity, such as shots of pine trees or dark foliage: -2 steps (- $\frac{2}{3}$ EV)

PHOTOMETRY

Available Photography mode:

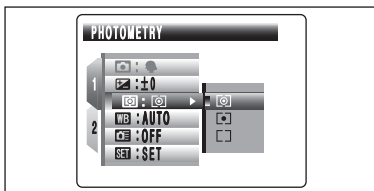

Use this mode for scenes where the brightness of the subject and background differ markedly so that the MULTI setting is unlikely to achieve the desired results.

- MULTI (Pattern):** Light metering where the camera assesses the scene and selects the correct exposure.
- SPOT:** Light metering where the exposure is optimized for the center of the image.
- AVERAGE:** Light metering where an average value for the entire image is used.


In the "AUTO", "SP" and "AF" modes, light metering is fixed at the MULTI setting and cannot be changed.

◆ The photometry modes are effective for the following subjects ◆

- **MULTI**
In this mode, the camera uses automatic scene recognition to analyze the subject and provide optimum exposure in a wide range of shooting conditions. This mode should be used for everyday photography.
- **SPOT**
This mode is useful for subjects with strongly contrasting light and dark areas where you want to achieve the correct exposure for a particular feature.
- **AVERAGE**
The advantage of this mode is that the exposure tends not to change for different compositions or subjects. This mode is particularly effective for shots of people wearing black or white clothing and shots of scenery.

WB WHITE BALANCE (SELECTING THE LIGHT SOURCE)

Available Photography mode:

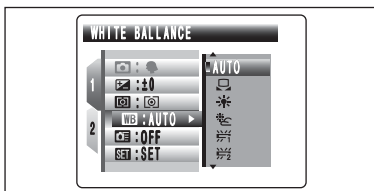


Change the white balance setting to take a picture with the white balance fixed for the surroundings and lighting.

In AUTO mode, the correct white balance may not be achieved for subjects such as close-ups of people's faces and pictures taken under a special light source. Select the correct white balance for the light source. See P.117 for more information on the white balance.

- | | |
|--|---|
| AUTO: Automatic adjustment (shooting to show the ambience of the light source) | : Shooting under "Daylight" fluorescent lamps |
| : Custom white balance | : Shooting under "Warm White" fluorescent lamps |
| : Shooting outdoors in good weather | : Shooting under "Cool White" fluorescent lamps |
| : Shooting in shade | : Shooting in incandescent light |

* When the flash fires, the white balance setting (excluding custom white balance) for the flash is used. Consequently, to achieve a particular effect, the flash mode should be set to Suppressed flash (→P.38).


The color tones may vary depending on the shooting conditions (light source, etc.).

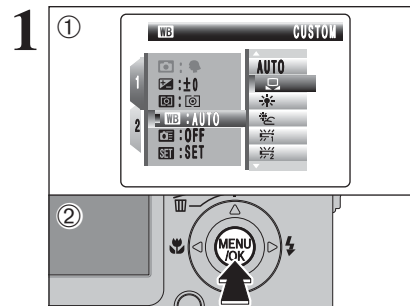

Custom white balance

Use this setting to set the white balance for the ambient natural or artificial lighting in images. Use this setting to achieve special effects also.


- ① Select "CUSTOM" custom white balance.
- ② Press the "MENU/OK" button.

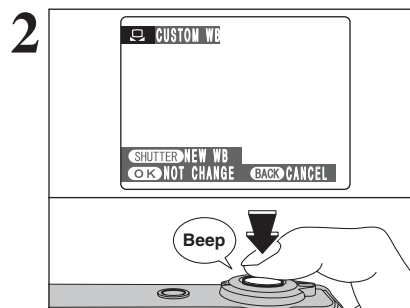

Hold a piece of white paper under the light source for setting the white balance, so that it fills entire the LCD monitor. Then press the shutter button to set the white balance.


The white balance setting does not affect the image shown on the LCD monitor.

To use the white balance set previously, press the "MENU/OK" button without pressing the shutter button.

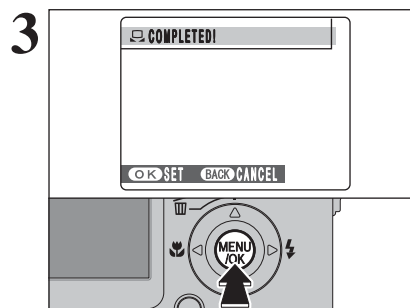

When the correct exposure is measured, "COMPLETED!" appears. Press the "MENU/OK" button to confirm the setting.

The specified custom white balance is retained until it is reset. This setting is retained even if the battery is removed.
 After taking the picture, check the color (white balance) setting for the image.

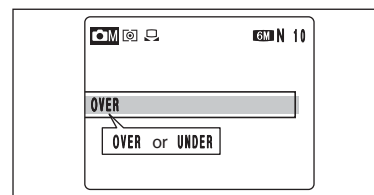


When [OVER] or [UNDER] appears, the white balance was not measured at the correct exposure. Set the exposure compensation again, using a negative value (-) when [OVER] appears and a positive value (+) when [UNDER] appears.

◆ Example ◆

You can change the white balance for a photographed image by using colored paper instead of white paper.

HIGH-SPEED SHOOTING

Available Photography modes: **AUTO**, **SP**, **CM**

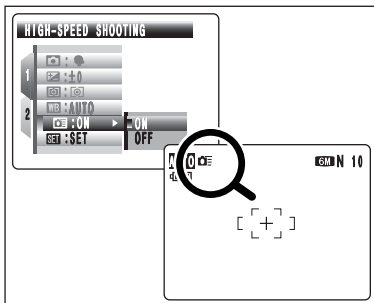


High-speed shooting mode reduces the time required for focusing when pressing the shutter button down halfway. The available shooting distance is from approx. 1 m to infinity.

When taking pictures while the High-speed shooting mode is set to "ON", the battery will run down more quickly.


CONTINUOUS SHOOTING

1

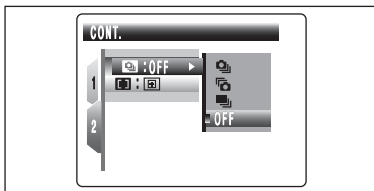

Select the Continuous shooting mode in the Photography mode. Select the required Continuous shooting mode.

2

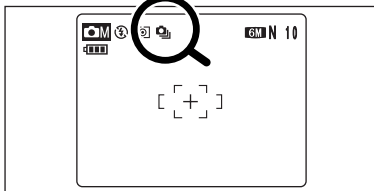

When setting the Continuous shooting mode (except for "OFF"), the selected mode appears on the LCD monitor.


- : Top 3-frame continuous shooting
- : Final 3-frame continuous shooting
- : Long-period continuous shooting

Notes on using the Continuous shooting modes

- Shooting continues as long as holding the shutter button down.
- Number of available frames is limited depending on the available space on the **xD-Picture Card**.
- In Top 3-frame and Final 3-frame continuous shooting mode, the focus is determined in the first frame and cannot be changed in mid-sequence.
- The exposure is determined in the first frame, but in Long-period continuous shooting the exposure is adjusted for the scene being shot.
- The speed of continuous shooting varies depending on the shutter speed.
- The flash cannot be used as the flash mode is set to Suppressed flash.
- For top 3-frame continuous shooting and final 3-frame continuous shooting, the results are always displayed after you shoot. Note that pictures taken using Long-period continuous shooting are recorded without displaying the results.
- Continuous shooting cannot be selected in "CM" long exposure setting.

Top 3-frame continuous shooting

Available Photography modes: **AUTO**, **SP** (except for **CM**), **CM**

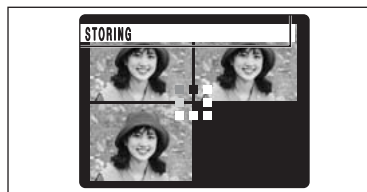


This mode shoots up to 3 frames (max. 2.2 frames/sec.). When taking the pictures, the images appear and are recorded.

The maximum file recording time using the continuous shooting is 7 seconds when recording in **xD-Picture Card**.

Final 3-frame continuous shooting

Available Photography modes: **AUTO**, **SP** (except for **CM**), **CM**

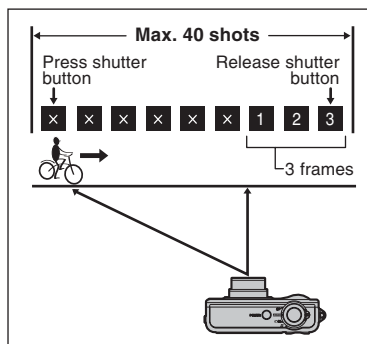


This mode allows you to release the shutter up to 40 times (max. 2.2 frames/sec.) and record the last 3 frames. If you take your finger off the shutter button before 40 shots have been taken, the camera records the final 3 frames shot before you released the shutter button.

If there is insufficient space on the **xD-Picture Card**, the camera records as many of the shots taken just before the shutter button was released as will fit on the **xD-Picture Card**.

Up to 1 frame can be shot when using the Long-period continuous shooting mode and Self-timer mode together.


Focusing on a moving subject

If you press the shutter button down halfway to focus on the subject at the starting point **A**, the subject may no longer be in focus when it reaches point **B** where you want to take the shot. In such situations, focus on point **B** beforehand and then lock the focus so that it does not shift. This feature is also useful for photographing fast-moving subjects that are difficult to focus on.

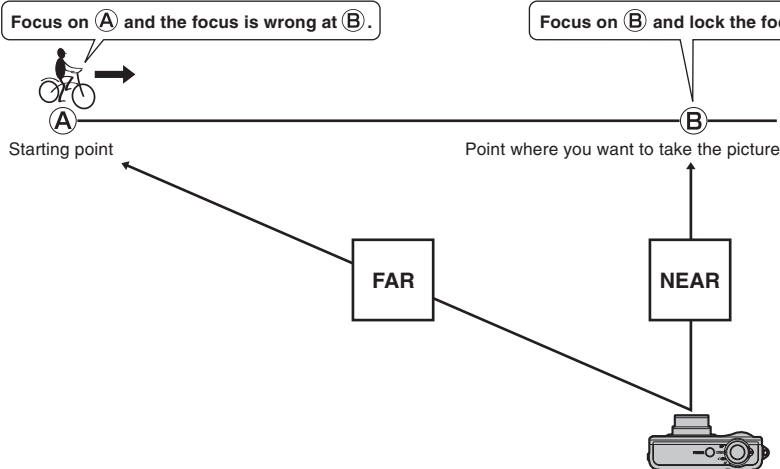

Long-period continuous shooting

Available Photography modes: **AUTO**, SP (except for C M),

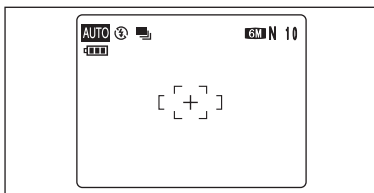


Shooting continues as long as holding the shutter button down. This mode shoots up to 40 frames.

◆ Flash ◆

When a Continuous shooting mode is selected, the flash mode is forcibly set to “” Suppressed flash. However, when the mode is changed back to normal photography, the flash setting specified before continuous shooting was selected is restored.

AF MODE


Available Photography mode:

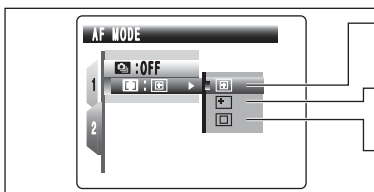

CENTER

MULTI

CONTINUOUS

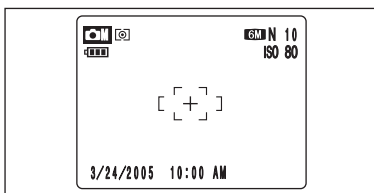

CENTER


The camera focuses on the center of the LCD monitor. Use this setting when taking pictures using AF/AE lock (⇒P.24).



MULTI


Press the shutter button down halfway. The camera recognizes any strongly contrasting subject near the center of the LCD monitor and displays the AF frame over subject in focus.

When taking pictures in Macro mode, the camera focuses on the center of the LCD monitor.

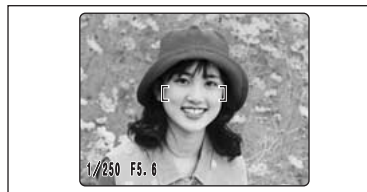


For a high-contrast subject in the center of the LCD monitor

Press the shutter button down halfway. The AF frame appears positioned on the high-contrast subject near the center of the image.

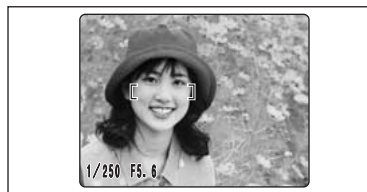

When there is no high-contrast subject in the center of the LCD monitor

When the camera has difficulty focusing on the subject in “MULTI” mode, set the AF mode to “CENTER” and use AF/AE Lock (⇒P.24).

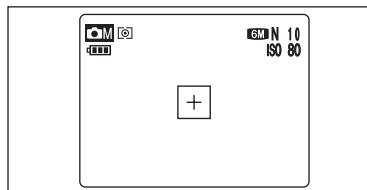


CONTINUOUS

The camera continues to focus on the main subject in the AF frame. Use this mode to take pictures of a moving subject.

◆ Notes on continuous AF ◆


Because the camera focuses continuously without pressing the shutter button, note the following:

- The battery level (power consumption) increases because data is being overwritten in the camera's internal memory.
- If the Auto power off function is set to “OFF”, particular attention must be given to the battery level.

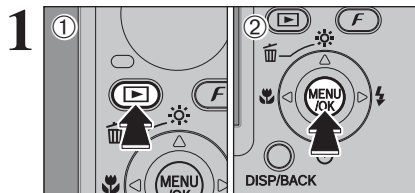


- ① Press the “” button to turn the camera on in Playback mode.
- ② Press the “MENU/OK” button to display the menu on the LCD monitor.

Erased frames (files) cannot be recovered. Back up important frames (files) onto your PC or another media.

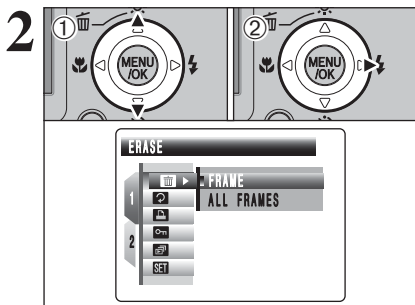

- ① Press “” or “” to select “” ERASE.
- ② Press “”.

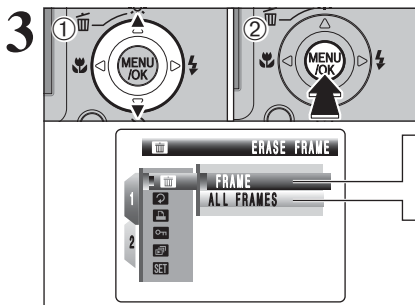


- ① Press “” or “” to select “FRAME” or “ALL FRAMES”.
- ② Press the “MENU/OK” button.

FRAME

Erases only the selected frame (file).

ALL FRAMES

Erases all unprotected frames (files). Back up important frames (files) onto your PC or another media.

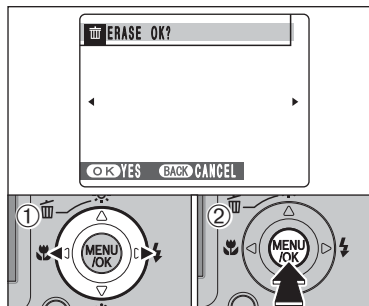


FRAME

- ① Press “” or “” to select the erasing frame (file).
 - ② Press the “MENU/OK” button to erase the currently displayed frame (file).
- To erase another frame (file), repeat steps ① and ②.

When erasing frames (files) is completed, press the “DISP/BACK” button.

- ⚠ Pressing the “MENU/OK” button repeatedly erases consecutive frames (files). Take care not to erase a frame (file) by mistake.
- ⚠ Protected frames (files) cannot be erased. Unprotect the frames (files) before erasing them (⇒P.65).

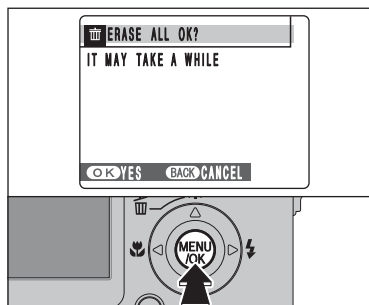


ALL FRAMES

Pressing the “MENU/OK” button erases all the frames (files).

- ⚠ Protected frames (files) cannot be erased. Unprotect the frames (files) before erasing them (⇒P.65).


If “DPOF SPECIFIED. ERASE OK ?” or “DPOF SPECIFIED. ERASE ALL OK ?” appears, press the “MENU/OK” button again to erase the frames (files).

◆ To stop the procedure midway ◆

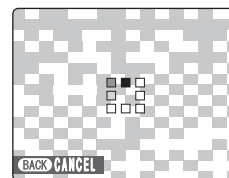


Press the “DISP/BACK” button to cancel erasing of all the frames (files). Some unprotected frames (files) will be left unerased.

- ⚠ Even if you stop the procedure immediately, some frames (files) will be erased.

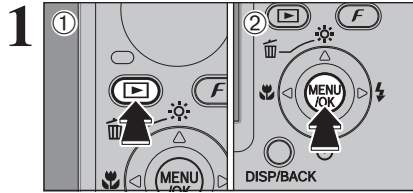


Use this mode to rotate an image.


- ① Press the "F" button to turn the camera on in Playback mode.
- ② Press the "MENU/OK" button to display the menu on the LCD monitor.

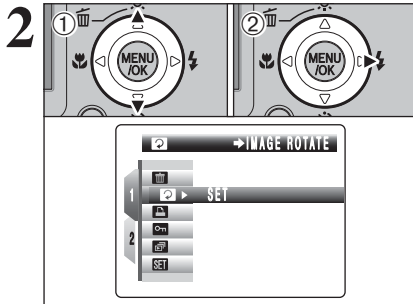

- ① Press "▲" or "▼" to select "2" IMAGE ROTATE.
- ② Press "▶".

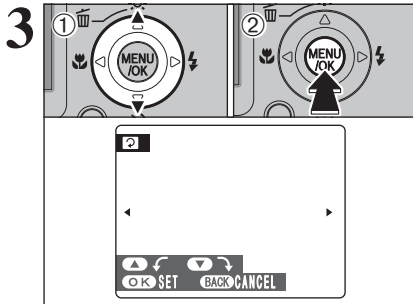

- ① Press "▲" or "▼" to rotate and display the image.
- ② Press the "MENU/OK" button to confirm your selection. Press the "DISP/BACK" button to cancel rotating the image.

 An image can be rotated only when playing back using FinePix F10.

◆ Images that can be rotated ◆

You may not be able to rotate images that were shot with a camera other than the FinePix F10.



DPOF stands for Digital Print Order Format and refers to a format that is used for recording printing specifications for images shot using a digital camera on media such as an **xD-Picture Card**. The recorded specifications include information on which frames are to be printed.

This section gives a detailed description of how to order your prints with the FinePix F10.

* Some printers do not support date and time imprinting or specification of the number of prints.

* The warnings shown below may appear while specifying the prints.

"DPOF SPECIFIED. ERASE OK ?"

"DPOF SPECIFIED. ERASE ALL OK ?" (⇒P.57)


When erasing the image, the DPOF setting for that image is deleted at the same time.

"RESET DPOF OK ?" (⇒P.60)


When inserting an **xD-Picture Card** that contains images specified for printing by another camera, those print specifications are all reset and replaced by the new print specifications.

[DPOF FILE ERROR] (⇒P.111)


Up to 999 images can be specified on the same **xD-Picture Card**.

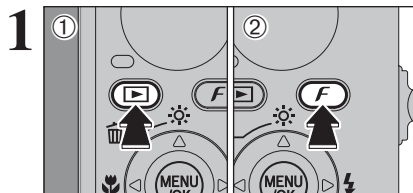

- ① Press the “F” button to turn the camera on in Playback mode.
 - ② Press the “F” button to display the menu on the LCD monitor.
- “WITH DATE” is selected at factory default setting. See P.62 for information on selecting “WITH DATE” or “WITHOUT DATE”.

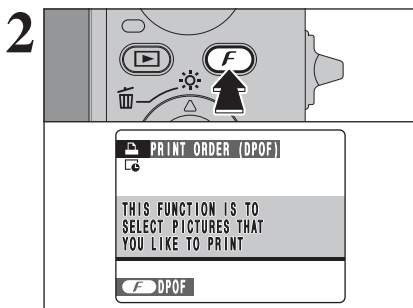

Press the “F” button. If there were previous DPOF settings, perform step 3.

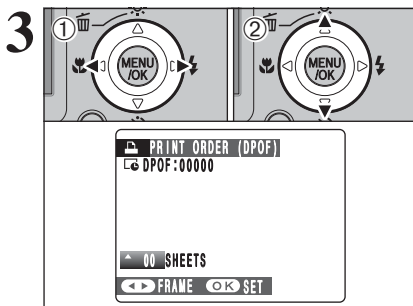


- ① Press “◀” or “▶” to display the frame (file) for specifying DPOF settings.
- ② Press “▲” or “▼” to set a value up to 99 as the number of copies of the frame (file) to be printed. For frames (files) that you do not want printed, set the number of prints to 0 (zero).

To specify more DPOF settings, repeat steps ① and ②.

- Prints of up to 999 frames (files) can be ordered on the same xD-Picture Card.
- DPOF settings cannot be specified for movie.


Pressing the “DISP/BACK” button while choosing settings will cancel all current settings. If there were previous DPOF settings, only the modifications are cancelled.

◆ **When DPOF settings were specified on another camera** ◆

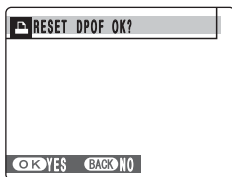


When the data includes a frame (file) with DPOF settings that were specified on another camera, “RESET DPOF OK ?” appears. Pressing the “MENU/OK” button erases all of the DPOF settings already specified for each frame (file). Specify the DPOF setting for each frame (file) again.

- Press the “DISP/BACK” button to leave the previous settings unchanged.

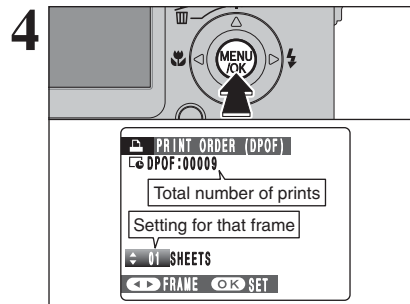

Always press the “MENU/OK” button after the settings are completed.
Pressing the “DISP/BACK” button cancels those settings.

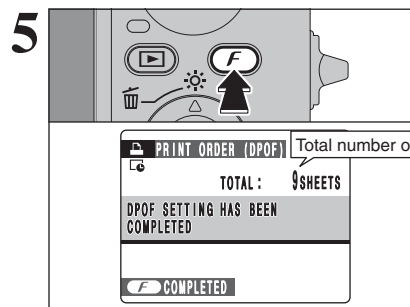

Total number of prints appears on the LCD monitor. Press the “F” button.


◆ **Canceling DPOF setting** ◆

To cancel the DPOF setting for a specified frame (file), perform steps 1 to 3 and then:


- ① Press “◀” or “▶” to select the frame (file) with the DPOF setting you want to cancel.
 - ② Set the number of prints to 0 (zero).
- To cancel the DPOF setting for another frame (file), repeat steps ① and ②.


- Press the “MENU/OK” button to complete the settings.



- DPOF ALL RESET (→P.64).

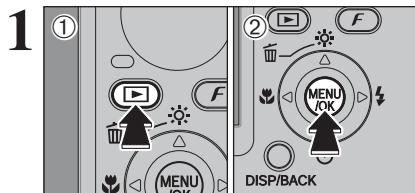

- ① Press the “F” button to turn the camera on in Playback mode.
- ② Press the “MENU/OK” button to display the menu on the LCD monitor.

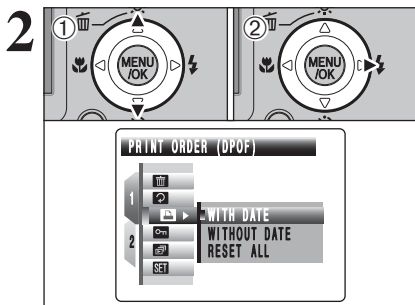


- ① Press “▲” or “▼” to select “” PRINT ORDER (DPOF).
- ② Press “▶”.

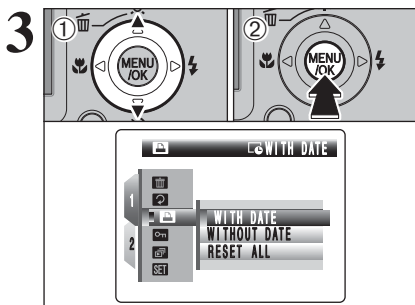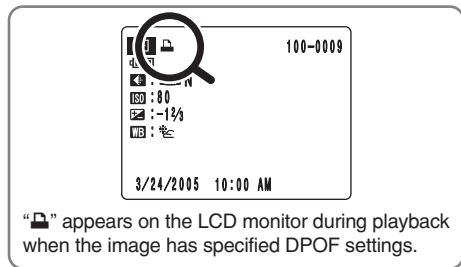

- ① Press “▲” or “▼” to select “WITH DATE” or “WITHOUT DATE”. Selecting “WITH DATE” will cause the date to be imprinted on your prints.
- ② Press the “MENU/OK” button.


⚠ When selecting the “WITH DATE” setting, the date is imprinted on your shots using the Print Service or a DPOF-compatible printer (depending on the printer specifications, the date may not be printed in some cases).

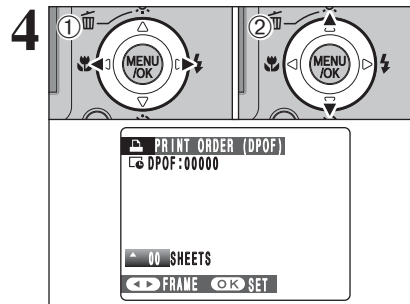


- ① Press “◀” or “▶” to display the frame (file) for specifying DPOF settings.
 - ② Press “▲” or “▼” to set a value up to 99 as the number of copies of the frame (file) to be printed. For frames (files) that you do not want printed, set the number of prints to 0 (zero).
- To specify more DPOF settings, repeat steps ① and ②.

⚠ Prints of up to 999 frames (files) can be ordered on the same xD-Picture Card.
⚠ DPOF settings cannot be specified for movie.

Pressing the “DISP/BACK” button while choosing settings will cancel all current settings. If there were previous DPOF settings, only the modifications are cancelled.

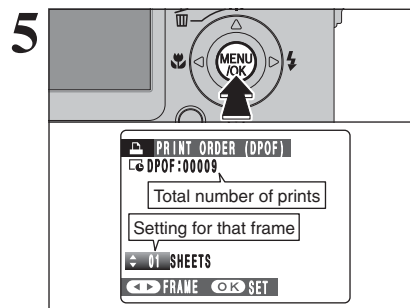

Always press the “MENU/OK” button after the settings are completed.
Pressing the “DISP/BACK” button cancels those settings.

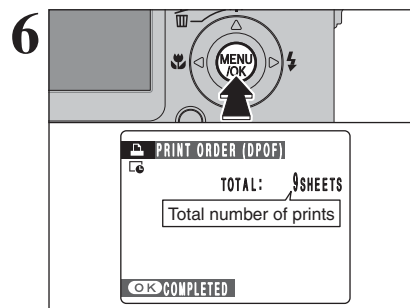


Total number of prints appears on the LCD monitor. Press the “MENU/OK” button.

◆ **Canceling DPOF setting** ◆


- To cancel the DPOF setting for a specified frame (file), perform steps 1 to 3 and then:
- ① Press “◀” or “▶” to select the frame (file) with the DPOF setting you want to cancel.
 - ② Set the number of prints to 0 (zero).
- To cancel the DPOF setting for another frame (file), repeat steps ① and ②. Press the “MENU/OK” button to complete the settings.

● DPOF ALL RESET (⇒P.64).



DPOF ALL RESET

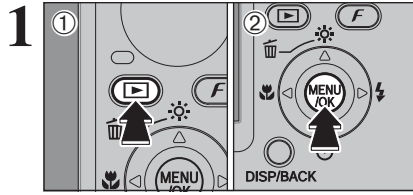


- 1 Press the "MENU/OK" button to turn the camera on in Playback mode.
- 2 Press the "MENU/OK" button to display the menu on the LCD monitor.

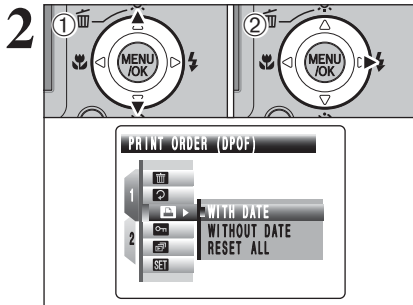

- 1 Press "▲" or "▼" to select "PRINT ORDER (DPOF)".
- 2 Press "▶".

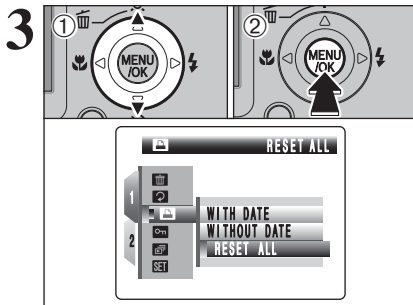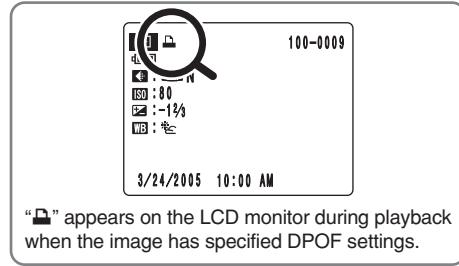


- 1 Press "▲" or "▼" to select "RESET ALL".
- 2 Press the "MENU/OK" button.

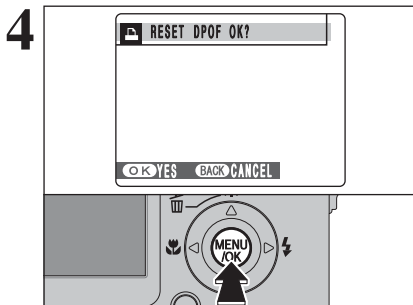


A message appears on the LCD monitor. To reset all the DPOF settings, press the "MENU/OK" button.

PROTECTING IMAGES: FRAME / SET ALL / RESET ALL

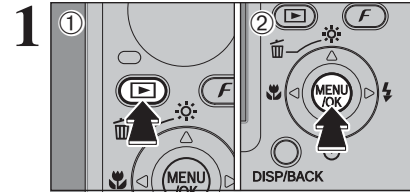


- 1 Press the "MENU/OK" button to turn the camera on in Playback mode.
- 2 Press the "MENU/OK" button to display the menu on the LCD monitor.

Protection is a setting that prevents frames (files) from being accidentally erased. However, the "FORMAT" function erases all the frames (files), including protected frames (files) (→P.85).

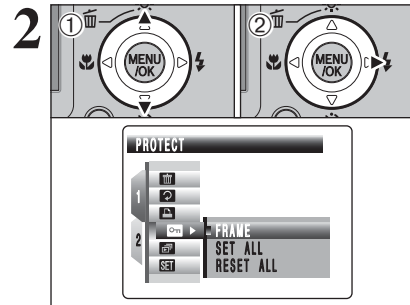


- 1 Press "▲" or "▼" to select "PROTECT".
- 2 Press "▶".

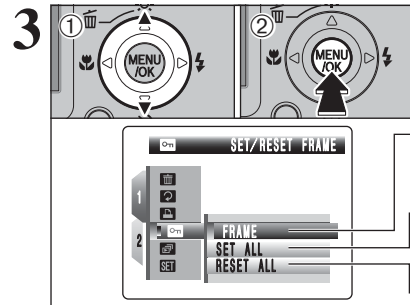


- 1 Press "▲" or "▼" to select "FRAME", "SET ALL" or "RESET ALL".
- 2 Press "MENU/OK" button to confirm your selection.

- FRAME**
Protects or unprotects only the selected frame (file).
- SET ALL**
Protects all the frames (files).
- RESET ALL**
Removes the protection from all the frames (files).

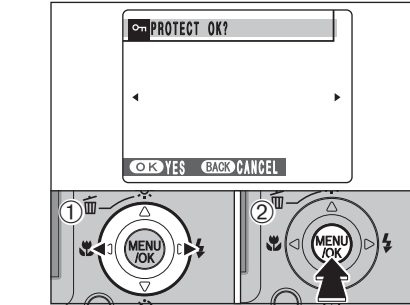


- FRAME SET**
 - 1 Press "◀" or "▶" to select the protecting frame (file).
 - 2 Press the "MENU/OK" button to protect the frame (file) currently displayed.
- To protect another frame (file), repeat steps 1 and 2. When you have finished protecting frames (files), press the "DISP/BACK" button.

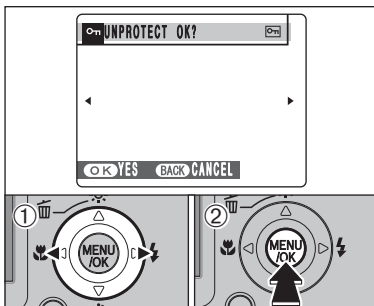


FRAME RESET

- 1 Press “◀” or “▶” to select the protected frame (file).
- 2 Press the “MENU/OK” button to unprotect the displayed frame (file).

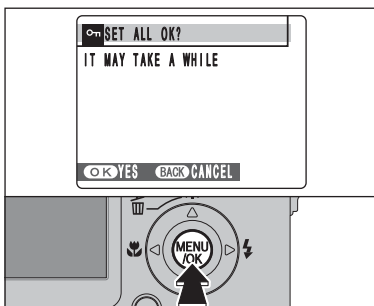

SET ALL


Press the “MENU/OK” button to protect all the frames (files).

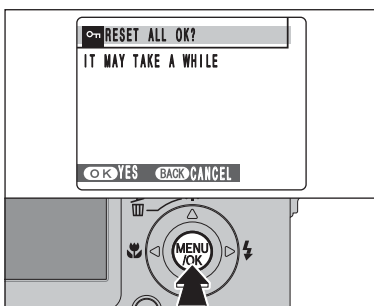


RESET ALL

Press the “MENU/OK” button to unprotect all the frames (files).

◆ **To stop the procedure midway** ◆

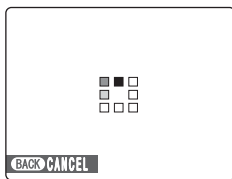


If the images are very large, protecting or unprotecting all the frames (files) may take some time.
If you want to take a picture or record a movie during the procedure, press the “DISP/BACK” button. To return to protecting or unprotecting all the frames (files), see the procedure on P.65 and begin at step 1.

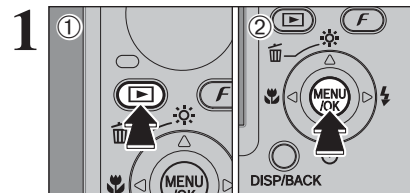


- 1 Press the “DISP/BACK” button to turn the camera on in Playback mode.
- 2 Press the “MENU/OK” button to display the menu on the LCD monitor.

- The Auto power off function does not operate during playback.
- Movie starts automatically. When the movie ends, the playback function moves it on.

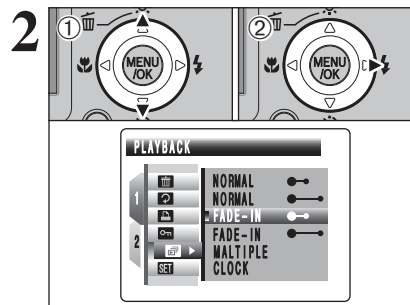

- 1 Press “▲” or “▼” to select “” PLAYBACK.
- 2 Press “▶”.

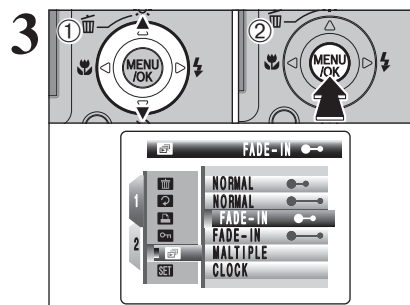


- 1 Press “▲” or “▼” to select the playback interval and the type of image transition.
- 2 Press the “MENU/OK” button. The image frames are advanced and played back.

Press “◀” or “▶” to advance or go back through the images when selecting “NORMAL” or “FADE-IN”.

To interrupt automatic playback, press “MENU/OK” button.

- Press the “DISP/BACK” button once during playback to display on-screen help.

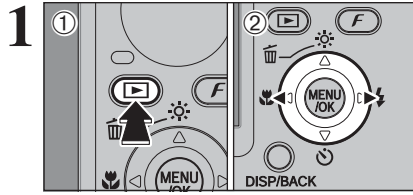

Voice memos of up to 30 seconds can be added to still images.

● **Audio recording format**


WAVE (⇒P.117)

PCM recording format

● **Audio file size**

Approx. 480 KB (for a 30-second voice memo)


- ① Press the "MENU/OK" button to turn the camera on in Playback mode.
- ② Press "◀" or "▶" to select the image to add a voice memo.

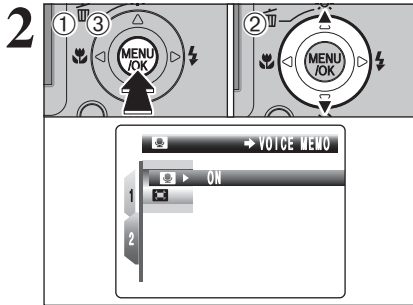



- ① Press the "MENU/OK" button to display the menu on the LCD monitor.
- ② Press "▲" or "▼" to select "VOICE MEMO".
- ③ Press the "MENU/OK" button.

⚠ Voice memos cannot be added to movies.

⚠ When [PROTECTED FRAME] appears, unprotect the frame.

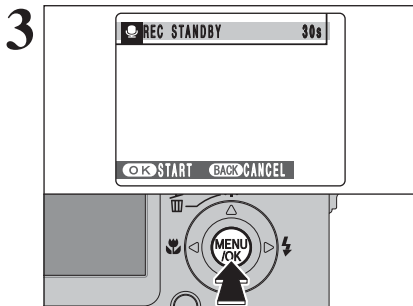


"REC STANDBY" appears on the LCD monitor. Press the "MENU/OK" button to begin recording.

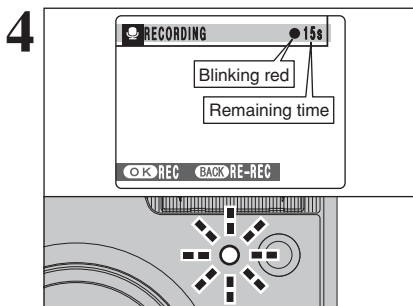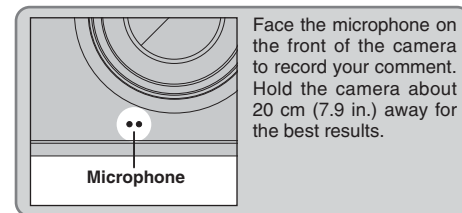

The remaining recording time appears during recording and the self-timer lamp blinks. When the time remaining reaches 5 seconds, the self-timer lamp starts blinking quickly.

⚠ To end your comment during recording, press the "MENU/OK" button.

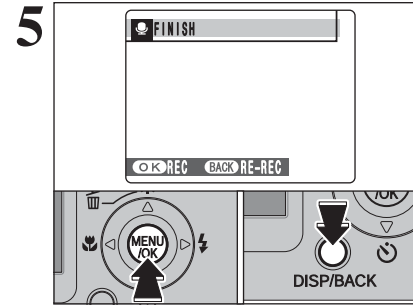

After 30 seconds of recording, "FINISH" appears on the LCD monitor.


To finish

Press the "MENU/OK" button.

To re-record your comment


Press the "DISP/BACK" button.

◆ **When the image already has a voice memo** ◆

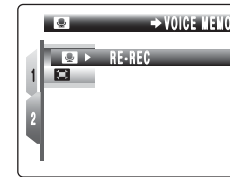

If you select an image that already has a voice memo, a screen appears in which you can select whether to re-record the memo.


⚠ When [PROTECTED FRAME] appears, unprotect the frame.

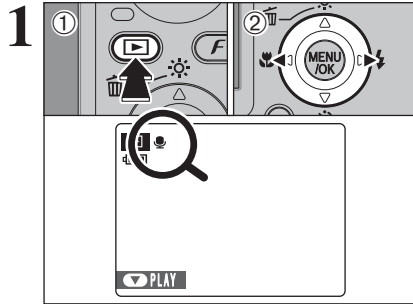

- 1 Press the "F" button to turn the camera on in Playback mode.
- 2 Press "◀" or "▶" to select an image file that has a voice memo.


⚠ Voice memos cannot be played back using multi-frame playback. Press the "DISP/BACK" button to select single-frame playback.

🔊 "🔊" appears on the LCD monitor when an image file with a voice memo is selected.

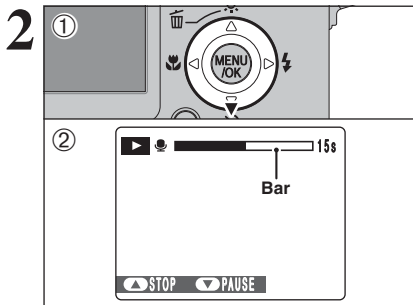

- 1 Press "▼" to play the voice memo.
- 2 The playback time appears on the LCD monitor along with a progress bar.

⚠ When the sound is difficult to hear, adjust the volume (→P.82).

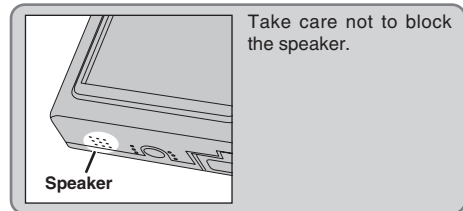

■ Playing back voice memos


	Control	Description
Playback		The voice memo stops when playback ends.
Pause/Resume		Pauses the voice memo during playback. Press "▼" again to resume playback.
Stop		Stops playback. * Press "◀" or "▶" while voice memo playback is stopped to go back to the previous file or advance to the next file respectively.
Fast forward/ Rewind	 Rewind Fast forward	Press "◀" or "▶" during playback to skip forwards or backwards through the voice memo. * These buttons do not function while playback is paused.

◆ Playing voice memo files ◆


You may not be able to play back some voice memo files recorded on other cameras.

Adjusting volume of voice memos


Volume can be adjusted while playing back voice memos. Adjust the volume to suit your condition.

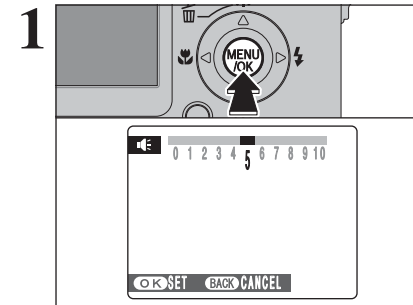


Press the "MENU/OK" button while playing back voice memo. The voice memo is paused during playback.

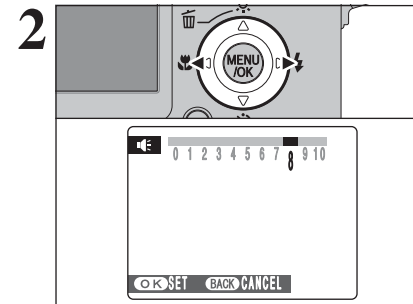


Press "◀" or "▶" to adjust the volume.

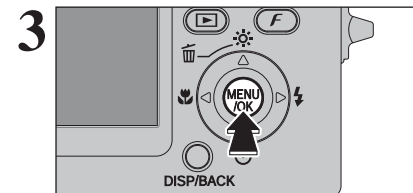


Press the "MENU/OK" button to confirm the new setting. Camera starts to play back the voice memo.

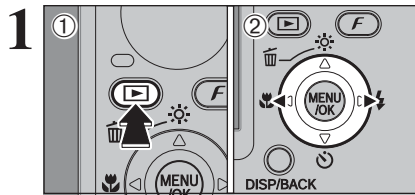


- ① Press the "F" button to turn the camera on in Playback mode.
- ② Press "◀" or "▶" to select the trimming frame (file).

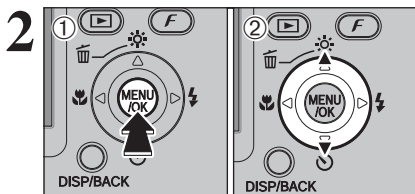

- ① Press the "MENU/OK" button to display the menu on the LCD monitor.
- ② Press "▲" or "▼" to select "TRIMMING".

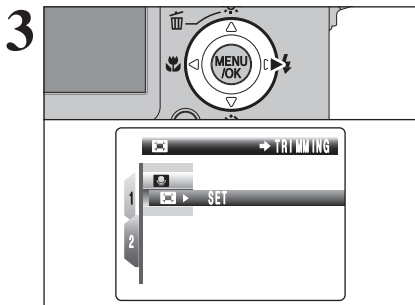


Press "▶".

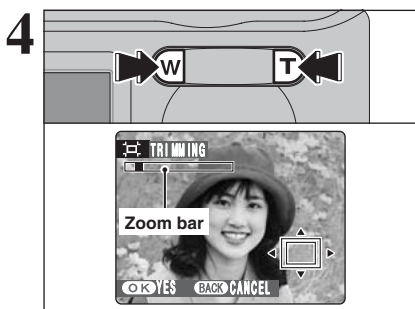

Press the "T" or "W" button to zoom in or out on an image. A zoom bar appears on the LCD monitor.


- Press the "DISP/BACK" button to return to single-frame playback.

A saved image size varies depending on the zoom scale. For 0.3M, the "OK YES" option appears in yellow.

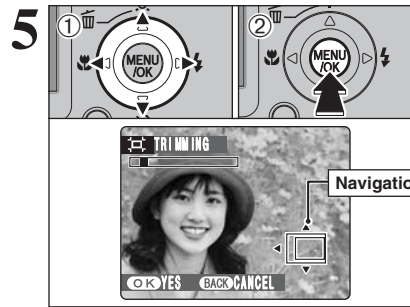

- ① Press "▲", "▼", "◀" or "▶" to display another part of the image. The current displayed image appears on the navigation screen.
- ② Press the "MENU/OK" button to trim the image.

- Press the "DISP/BACK" button to return to single-frame playback.

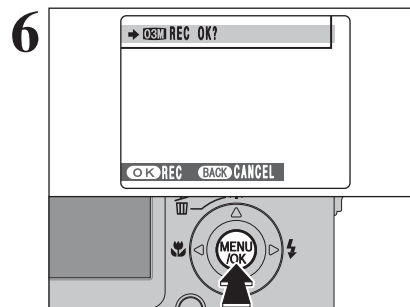

Check the saved image size and press the "MENU/OK" button. The trimmed image is added as a separate file in the final frame.


■ Image sizes

	Sample uses
3M	Printing at up to 6R (15.2 × 20.3 cm) / A5 size
2M	Printing at up to 4R (10.2 × 15.2 cm) / A6 size
0.3M	To use for e-mail or web site

- When "0.3" quality setting is selected, the image is trimmed to normal size (4:3 aspect ratio).

◆ Images that can be trimmed ◆

You may not be able to trim images that were shot with a camera other than the FinePix F10.

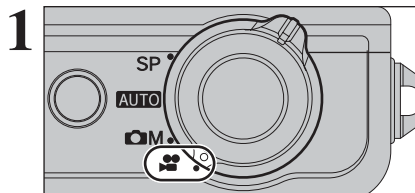


Set the Mode switch to "🎬". Use "🎬" Movie mode to record movies with sound.

- **Specifications**
Motion JPEG (➡P.117) with monaural sound
- **Quality selection method**
 - 640 (640 × 480 pixels)
 - 320 (320 × 240 pixels)
- **Frame rate (➡P.117)**
30 frames per second (fixed)


- ⚠ See P.76 for information on changing the quality mode.
- ⚠ The available recording time for a movie may decrease depending on the amount of free space on the **xD-Picture Card**.
- ⚠ Because a movie is recorded onto the **xD-Picture Card** as it is saved, it cannot be recorded correctly if the camera suddenly loses power (if you open the battery cover or disconnect the AC power adapter).

It may not be possible to playback your movies on other cameras.

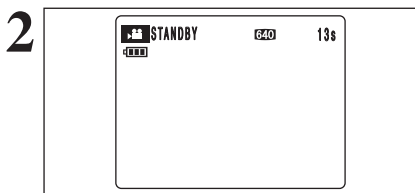


The available recording time and "STANDBY" appear on the LCD monitor.

- ⚠ Because sound is recorded concurrently with the images, make sure that you do not cover the microphone with a finger, etc. (➡P.8).

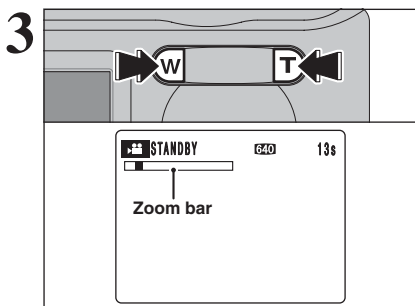

Press the "T" or "W" button to zoom in or out before recording. You must zoom beforehand as you cannot zoom during recording.


- **Optical zoom focal length (35 mm camera equivalent)**
Approx. 36 mm to 108 mm
Max. zoom scale: 3×
- **Focal range**
Approx. 60 cm (2.0 ft.) to infinity

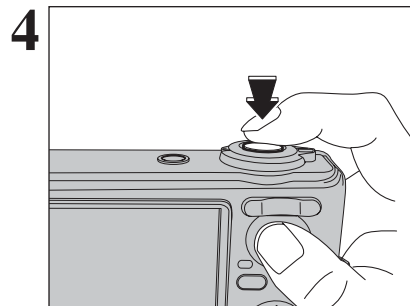

Press the shutter button down fully to start recording.


- ⚠ The brightness and color of the LCD monitor shown during movie recording may differ from those shown before recording begins.
- ⚠ There is no need to hold down the shutter button.

Pressing the shutter button down fully fixes the focus, however the exposure and white balance are adjusted to the scene being shot.

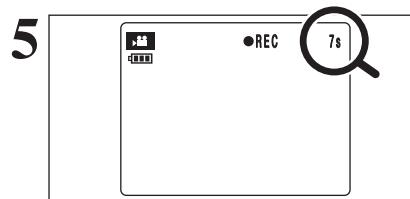

A counter appears in the top-right corner of the LCD monitor during recording. It shows the remaining time.

- ⚠ If the brightness of the subject changes during movie recording, the sound of lens operation may be recorded.
- ⚠ Some wind noise may be recorded in shots taken outdoors.
- ⚠ When the remaining time runs out, recording ends and the movie is saved onto the **xD-Picture Card**.

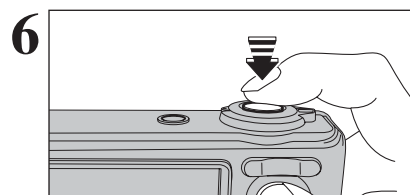

Press the shutter button down halfway during recording, recording ends.

- ⚠ If recording is stopped immediately after it begins, about 1 second of the movie is recorded onto the **xD-Picture Card**.


Available recording times

■ **Recording times per xD-Picture Card**

* These figures are the available recording times using a new **xD-Picture Card** formatted on the camera. The actual recording times will vary depending on the free space available on the **xD-Picture Card**.

	Quality	
	640 (30 frames per second)	320 (30 frames per second)
DPC-16 (16 MB)	13 sec.	26 sec.
DPC-32 (32 MB)	27 sec.	54 sec.
DPC-64 (64 MB)	55 sec.	109 sec.
DPC-128 (128 MB)	111 sec.	219 sec.
DPC-256 (256 MB)	223 sec.	7.3 min.
DPC-512/M512 (512 MB)	7.4 min.	14.6 min.
DPC-M1GB (1 GB)	14.9 min.	29.3 min.


If you shoot using the DPC-M512/M1GB **xD-Picture Card**, movie recording time may be reduced if you repeatedly record and erase (frame erase) image files. In such a case, erase all frames or format the picture card before use. Back up important frames (files) onto your PC or another media.

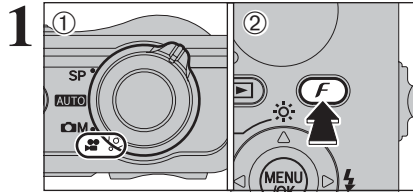


- 1 Set the Mode switch to "Movie".
- 2 Press the "F" button to display the menu on the LCD monitor.

- In "Movie" mode, do not set the "ISO" (sensitivity) setting.
- In "Movie" mode, do not set the "FinePix COLOR" setting.

The quality setting is retained even when the camera is off or the mode setting is changed.

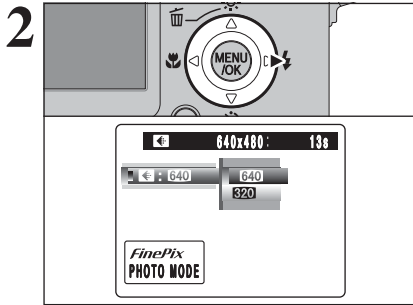


Press "▶".

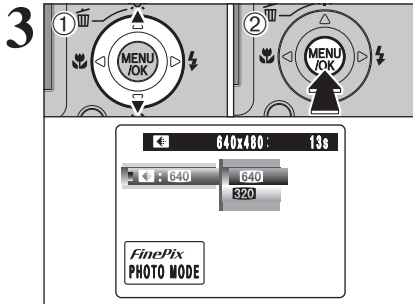

- 1 Press "▲" or "▼" to change the setting.
- 2 Press the "MENU/OK" button to confirm the setting.

Quality settings in Movie mode


Quality mode	Sample uses
640 (640 × 480)	For better quality
320 (320 × 240)	To record longer movies

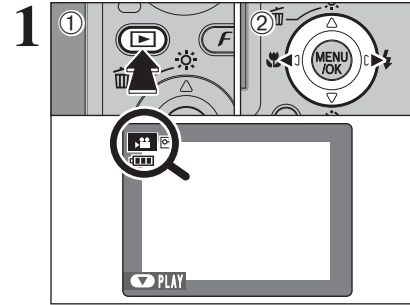

- 1 Press the "▶" button to turn the camera on in Playback mode.
- 2 Press "◀" or "▶" to select the movie file.

- Movies cannot be played back using multi-frame playback. Press the "DISP/BACK" button to select single-frame playback.

Indicated by the "Movie" icon.

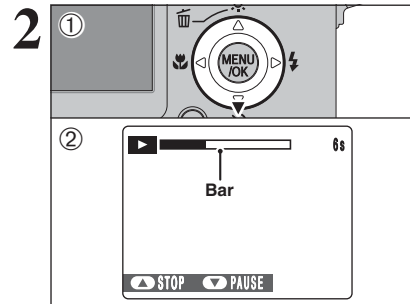

- 1 Press "▼" to play the movie.
- 2 The playback time appears on the LCD monitor along with a progress bar.

- Take care not to block the speaker.
- When the sound is difficult to hear, adjust the volume (→P.82).
- If the subject of the shot is very bright, white vertical streaks or black horizontal streaks may appear in the image during playback. This is normal.

Playing back movies


	Control	Description
Playback		Playback begins. Playback stops when the end of the movie is reached.
Pause/Resume		Pauses the movie during playback. Press "▼" again to resume playback.
Stop		Stops playback. * Press "◀" or "▶" while playback is stopped to go back to the previous file or advance to the next file respectively.
Fast forward/Rewind		Press "◀" or "▶" during playback to skip forwards or backwards through the movie.
Skip playback	 When paused	Press "◀" or "▶" when the movie is paused, the movie advances or goes back one frame. Hold down "◀" or "▶" to move through the frames quickly.

Playing movie files


- You may not be able to play back some movie files recorded on other cameras.
- To play back movie files on a PC, save the movie file on the xD-Picture Card to the PC's hard disk and then play back the saved file.

Adjusting volume of movies


Volume can be adjusted while playing back movies. Adjust the volume to suit your condition.

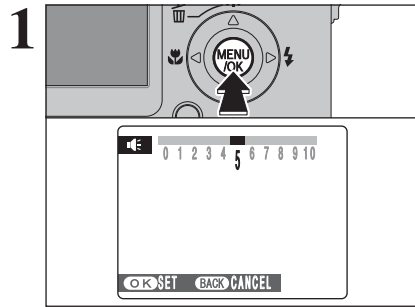

Press the "MENU/OK" button while playing back movie. The movie is paused during playback.

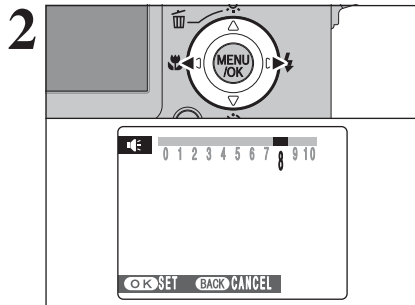


Press "◀" or "▶" to adjust the volume.

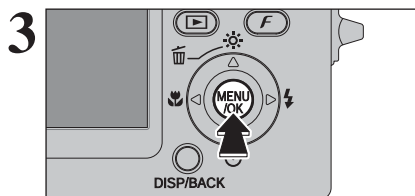


Press the "MENU/OK" button to confirm the new setting. Camera starts to playback the movie.

SET USING THE SET-UP SCREEN

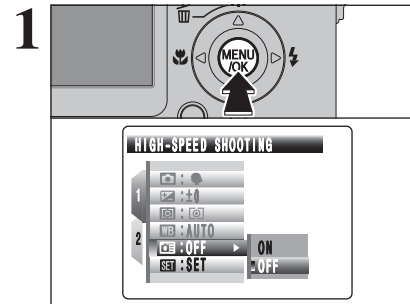


Press the "MENU/OK" button to display the menu on the LCD monitor.


Always turn the camera off when replacing the battery. Opening the battery cover or disconnecting the AC power adapter without turning the camera off may cause the camera settings to revert to the factory default values set at shipment.

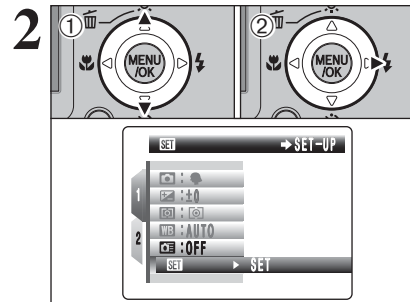

① Press "▲" or "▼" to select "SET" SET-UP.
② Press "▶".

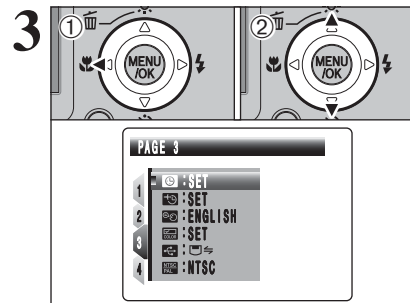


① Press "◀" to move to page number.
② Press "▲" or "▼" to select the page.

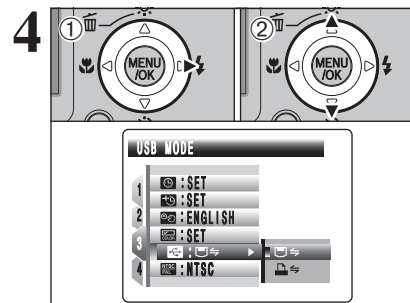

① Press "▶" to move to menu item.
② Press "▲" or "▼" to select the menu item.

SET-UP

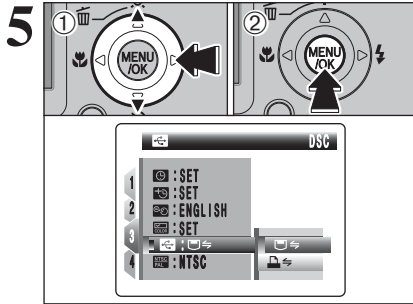


- ① Press “▶” to select a menu option. Press “▲” or “▼” to change the setting. Press “▶” for “” FORMAT, “” DATE/TIME, “” TIME DIFFERENCE, “” BACKGROUND COLOR or “” RESET.
- ② After you have changed the settings, press the “MENU/OK” button to confirm the changes.

■ SET-UP menu options

	Settings	Display	Factory default	Explanation	page
1	IMAGE DISP.	3 SEC/1.5 SEC/OFF	1.5 SEC	Specifies whether an image checking screen (photography result) appears after taking a picture. The image appears for a few moments and is then recorded.	-
	SHUTTER VOLUME	OFF/1/2/3	2	Sets the volume of the sound emitted when the shutter operates.	-
	BEEP VOLUME	OFF/1/2/3	2	Sets the volume of the tone emitted when the camera controls are used.	-
	PLAYBACK VOLUME	SET	-	Sets the volume of playing back movie and voice memo.	82
	FRAME NO.	CONT./RENEW	CONT.	Specifies whether frame numbers are assigned consecutively from previous numbers or begin again.	82
	LCD BRIGHTNESS	SET	-	Sets the LCD monitor brightness.	83
2	DIGITAL ZOOM	ON/OFF	OFF	Specifies whether digital zoom is used together.	83
	AF ILLUMINATOR	ON/OFF	ON	Specifies whether the AF-assist illuminator is ON or OFF.	-
	LONG EXPOSURE (SP:)	ON /OFF	OFF	Set the long exposure setting when Photography mode is set to “” NIGHT.	84
	AUTO POWER OFF	5 MIN/2 MIN/OFF	2 MIN	Sets the time of turning camera off when camera is not used.	84
	LCD POWER SAVE	ON/OFF	ON	Darkens the LCD monitor when camera is not used.	85
	FORMAT	OK	-	Erases all files.	85
3	DATE/TIME	SET	-	Corrects the date or time.	16
	TIME DIFFERENCE	SET	-	Specifies the time difference settings.	86
	言語/LANG.	ENGLISH/FRANCAIS/DEUTSCH/ESPAÑOL/ITALIANO/中文/한글	ENGLISH	Specifies the language used for LCD monitor display.	18
	BACKGROUND COLOR	SET	-	Specifies the colors of menu and background.	-
	USB MODE			: DSC (Mass storage device) mode Provides a simple way to read images from an xD-Picture Card and store images onto an xD-Picture Card .	99
				: PictBridge If a printer that supports PictBridge is available, images can be printed by connecting the camera directly to the PictBridge-compatible printer without using a PC.	95
VIDEO SYSTEM	NTSC/PAL	-	Specifies whether video output is set to NTSC or PAL.	-	
4	RESET	OK	-	Resets all the camera settings (other than the DATE/TIME, TIME DIFFERENCE, 言語/LANG., BACKGROUND COLOR and VIDEO SYSTEM) to the factory default values set at shipment. A confirmation message appears when you press “▶”. To reset the camera settings, press the “MENU/OK” button again.	-

PLAYBACK VOLUME

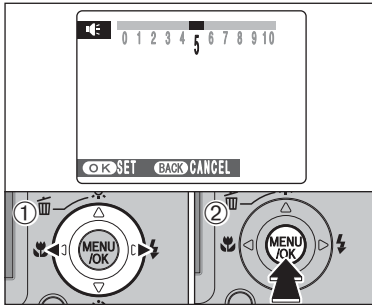

To adjust volume while playing back movie and voice memo.

- 1 Press “◀” or “▶” to adjust the volume. The larger the number, the larger the volume is emitted. “0” indicates a sound deadening.
- 2 Press the “MENU/OK” button to confirm the new setting.

FRAME NO.

	< CONT. >	< RENEW >
A	0001 ⋮ 0005	0001 ⋮ 0005
B	0006 ⋮ 0010	0001 ⋮ 0005


* Formatted xD-Picture Card used for both A and B.

Specifies whether frame numbers are assigned consecutively from previous numbers or begin again.

CONT.: Pictures are stored beginning from the highest file number stored on the last xD-Picture Card used.

RENEW: Pictures are stored on each xD-Picture Card beginning with a file number “0001”. Setting this function to “CONT.” makes file management easier as it makes sure that file names are not duplicated when images are downloaded to a PC.


- When the camera settings are “RESET”, the frame number setting (“CONT.” or “RENEW”) is changed to “CONT.” and the frame number itself does not return to “0001”.
- When the xD-Picture Card already contains image files with file numbers higher than the highest file number on the last xD-Picture Card, images are stored beginning from the highest file number on the current xD-Picture Card.

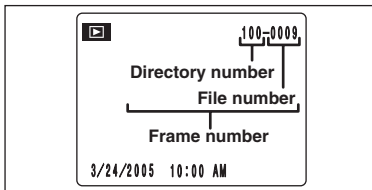

Check the file number by viewing the image. The last 4 digits of the 7-digit number in the top right corner of the LCD monitor are the file numbers, while the first 3 digits show the directory number.

- When changing the xD-Picture Card, always turn the camera off before opening the battery cover. Opening the battery cover without turning the camera off may cause the frame number memory to not function.
- File number runs from 0001 to 9999. Once 9999 is exceeded, the directory number changes from 100 to 101. The maximum number is 999-9999.
- The displayed frame number may differ for images photographed on other cameras.
- When [FRAME NO. FULL] appears, see P.110.


LCD BRIGHTNESS

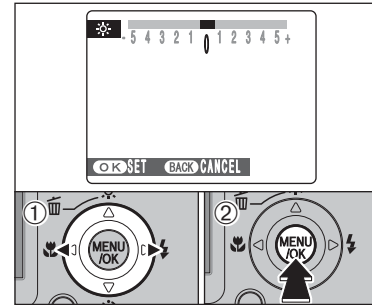

To adjust LCD monitor brightness:

- 1 Press “◀” or “▶” to adjust the LCD monitor brightness.
- 2 Press the “MENU/OK” button to confirm the new setting.


DIGITAL ZOOM

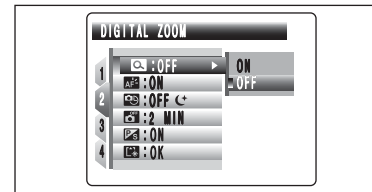

Use this function to control the digital zoom. When zooming changes between optical and digital, the position of the “■” indicator stops. Press the same Zoom button again to start the “■” indicator moving again.

- If the shot goes out of focus during zooming, hold the shutter button down halfway to refocus the shot.

Zoom bar display

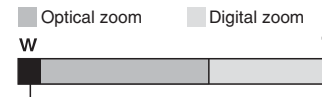


The position of the “■” indicator on the zoom bar shows the zooming status. The area to the right of the separator indicates digital zooming, while the area to the left indicates optical zooming.

- Optical zoom focal length***
Approx. 36 mm to 108 mm, max. zoom scale: 3×
 - Digital zoom focal length***
Approx. 108 mm to 666 mm, max. zoom scale: approx. 6.2×
 - Digital zoom focal length (82)***
Approx. 111 mm to 685 mm, max. zoom scale: approx. 6.2×
- * 35 mm camera equivalents

Using the digital zoom allows you to enlarge your subject and shoot it. However, it will lower your image quality. Set the digital zoom when requiring it.

LONG EXPOSURE

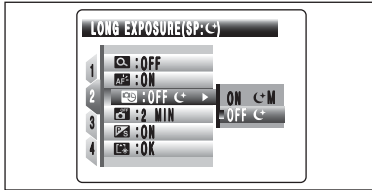


When this function is enabled, camera selects shutter speed up to 15 seconds. See P.47 for information on selecting the long exposure setting.

- **Shutter speed setting**
3 sec. to 15 sec.

- ④ Long exposure can be used in the "C" NIGHT setting.
- ④ When selecting the long exposure setting, flash mode is changed to "C". The flash mode cannot be selected other than "C", "4" or "C".


AUTO POWER OFF

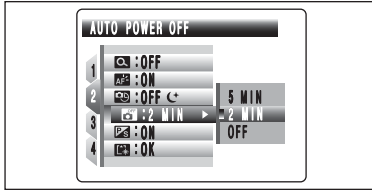

When this function is enabled and the camera remains unused for 2 or 5 minutes, it is turned off. Use this function when you want to get the maximum possible running time from your battery.


- ④ The Auto power off function is disabled during automatic playback and when a USB connection is being used.

◆ **To restore power to the camera** ◆

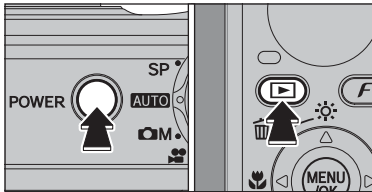


When the Auto power off function (2 or 5 minutes setting) has shut the camera down: Press the "POWER" button. Hold down the "MENU" button for about 1 second to play back images.

LCD POWER SAVE

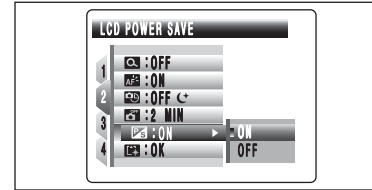


When this function is enabled, you can save power and get the maximum possible running time from your battery. The LCD monitor darkens when camera is not used for 10 seconds.

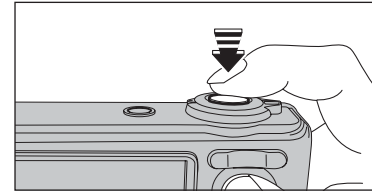

When the LCD monitor is dark, pressing the shutter button down halfway recovers the LCD monitor brightness.

- ④ Pressing any other button as well as the shutter button wakes the camera up.

FORMAT

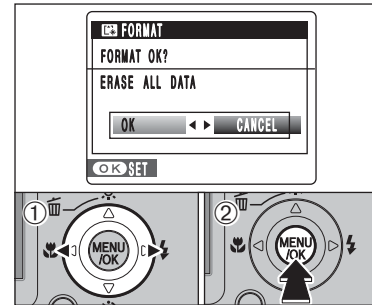

Initialize (format) the **xD-Picture Card** for use with the camera.


Because initializing the **xD-Picture Card** erases all the frames (files), including protected frames (files). Back up important frames (files) onto your PC or another media.

- ① Press "◀" or "▶" to select "OK".
- ② Pressing the "MENU/OK" button erases all the frames (files) and initializes the **xD-Picture Card**.

- ④ When [CARD ERROR], [WRITE ERROR], [READ ERROR] or [CARD NOT INITIALIZED] appears, see P.110 for information before formatting the **xD-Picture Card**.


WORLD TIME (TIME DIFFERENCE)

This function sets a time difference relative to the date and time currently set. When this setting is enabled, the specified time difference is applied when pictures are taken. Use this function when traveling to destinations in different time zones.

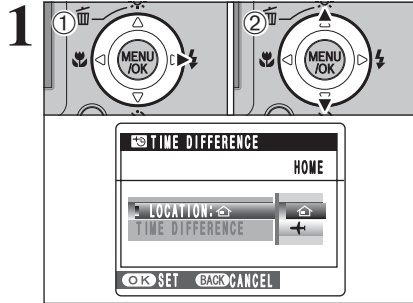


① Press "▶".
 ② Press "▲" or "▼" to change between "🏠" HOME and "✚" LOCAL.
 To set the time difference, select "✚" LOCAL.


🏠 HOME: Your home time zone
 ✚ LOCAL: Your destination time zone

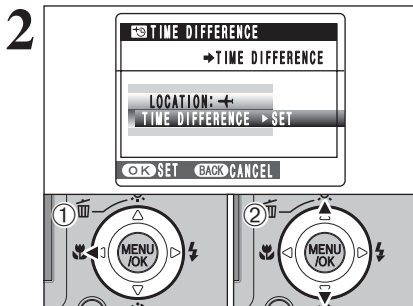

① Press "◀".
 ② Press "▲" or "▼" to select "TIME DIFFERENCE".

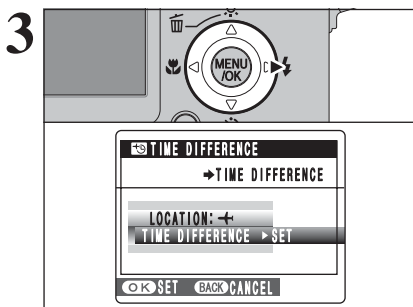


Press "▶".

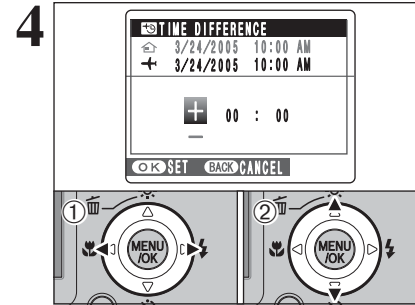


① Press "◀" or "▶" to select +, -, hour and minute.
 ② Press "▲" or "▼" to correct the setting.

● Available time setting
 -23:45 to +23:45 (in 15-minute increments)

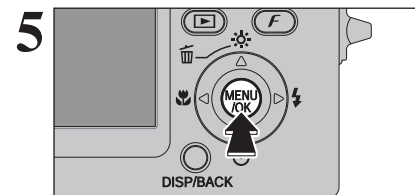

Always press the "MENU/OK" button after the settings are completed.

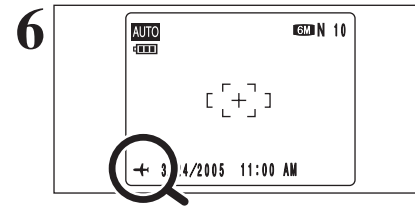

When the Photography mode is selected with world time set, "✚" appears on the LCD monitor for 3 seconds.

Upon returning from a trip, always change the World time setting back to "🏠" HOME.

Pre-installation checklist

To run this software, you must have the hardware and software described below. Check your system before you begin the installation.

Operating System*1	Windows 98 (including the Second Edition) Windows Millennium Edition (Windows Me) Windows 2000 Professional*2 Windows XP Home Edition*2 Windows XP Professional*2
CPU	200 MHz Pentium or better recommended (800 MHz Pentium III or better recommended for Windows XP)
RAM	64MB minimum (128 MB minimum for Windows XP) 256 MB or better recommended
Hard disk space	Amount required for installation: 450 MB minimum Amount required for operation: 600 MB minimum (When using ImageMixer VCD2 LE for FinePix: 2 GB or better)
Display	800 × 600 pixels or better, 16-bit color or better (When using ImageMixer VCD2 LE for FinePix: 1024 × 768 or better)
Internet connection*3	<ul style="list-style-type: none"> To use the FinePix Internet Service or mail attachment function: An Internet connection or e-mail transmission software is needed Connection speed: 56 k or better recommended

*1 Models with one of the above operating systems pre-installed.

*2 When you install the software, login using a system administrator account (e.g. "Administrator").

*3 Required to use the FinePix Internet Service. The software can still be installed even if you do not have an Internet connection.

Notes


- Connect the camera directly to the PC using the USB cable (mini-B). The software may not operate correctly when you use an extension cable or connect the camera via a USB hub.
- When your PC has more than one USB port, the camera can be connected to either port.
- Push the USB connector fully into the socket to ensure that it is securely connected. The software may not operate correctly if the connection is faulty.
- Additional USB interface board is not guaranteed.
- Windows 95 and Windows NT cannot be used.
- Operation is not guaranteed on home-built PCs or on PCs running updated operating system software.
- When you reinstall or remove FinePixViewer, the Internet menu and your user ID and password for the FinePix Internet Service are deleted from your PC. Click the [Register now] button, enter your registered user ID and password and download the menu again.

Do not connect the camera to your PC until the software installation is completed.

1 Install FinePixViewer as instructed in the Quick start guide.

Launching the installer manually

- ① Double-click the "My Computer" icon.
* Windows XP users should click "My Computer" in the "Start" menu.
- ② Right-click "FINEPIX" (CD-ROM drive) in the "My Computer" window and select "Open".
- ③ Double-click "SETUP" or "SETUP.exe" in the CD-ROM window.

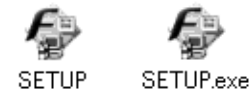

- * The way file names are displayed differs as described below depending on your PC settings.
 - File extensions (3-letter suffixes indicating the file type) may be shown or hidden. (e.g. Setup.exe or Setup)
 - Text may be shown normally or all in uppercase (e.g. Setup or SETUP).

Installing other applications


You may see messages for installing ImageMixer VCD2 LE for FinePix. Install this application as directed by the on-screen instructions.

2 Install DirectX as directed by the on-screen instructions and then restart your PC. If the latest version of DirectX is already installed on your PC, this installation is not performed.

- ⚡ If the latest version is already installed, this window does not appear.
- ⚡ Do not remove the CD-ROM during this procedure.

3 After restarting, the USB Video Class Driver would be installed.

- ⚡ If the latest version is already installed, this window does not appear.
- ⚡ The driver is only installed on Windows XP SP1.

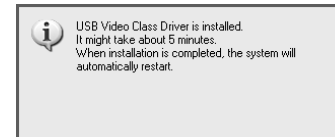

4 After restarting the PC, a message appears stating "Installation of the FinePixViewer has been completed".

5.2 INSTALLATION ON A Mac OS X

Pre-installation checklist

■ Hardware and software requirements

To run this software, you must have the hardware and software described below. Check your system before you begin the installation.

Compatible Mac	Power Macintosh G3*1, PowerBook G3*1, Power Macintosh G4, iMac, iBook, Power Macintosh G4 Cube, or Power Macintosh G5
Operating System	Mac OS X (compatible with version 10.2.8 to 10.3.7)
RAM	192 MB minimum 256 MB or better recommended
Hard disk space	Amount required for installation: 200 MB minimum Amount required for operation: 400 MB minimum (When using ImageMixer VCD2 LE for FinePix: 2 GB or better)
Display	800 × 600 pixels or better, at least 32,000 colors (When using ImageMixer VCD2 LE for FinePix: 1024 × 768 or better)
Internet connection*2	<ul style="list-style-type: none">• To use the FinePix Internet Service or mail attachment function An Internet connection or e-mail transmission software is needed• Connection speed: 56 k or better recommended

*1 Models with a USB port as a standard feature

*2 Required to use the FinePix Internet Service. The software can still be installed even if you do not have an Internet connection.

◆ Notes ◆

- Connect the camera directly to the Macintosh using the USB cable (mini-B). The software may not operate correctly if you use an extension cable or connect the camera via a USB hub.
- Push the USB connector fully into the socket to ensure that it is securely connected. The software may not operate correctly if the connection is faulty.
- Additional USB interface board is not guaranteed.

- 1 Turn your Macintosh on and start up Mac OS X. Do not launch any other applications.
- 2 When the bundled CD-ROM is loaded into the CD-ROM drive, the "FinePix" icon appears. Double-click the "FinePix" icon to open the "FinePix" volume window.



- 3 Double-click on "Installer for MacOS X".
- 4 The Installer setup dialog appears. Click the [Installing FinePixViewer] button.
 - For more information on what is installed, click the [Read Me First] button and [Using FinePixViewer] button.



- 5 The "Authenticate" dialog appears. Enter the name and password for the administrator account and then click the [OK] button.*


* The administrator account is the user account used for Mac OS X installation and you can confirm the user account in the Accounts dialog in the System Preferences.

- 6 The "License" dialog appears. Read the agreement carefully and then, if you agree to the terms of the Agreement, click the [Accept] button.

- 7 The "Read me" dialog appears. Click the [Continue] button.

5.2 INSTALLATION ON A Mac OS X

- 8 The “FinePixInstallOSX” window appears.
Click the [Install] button to install FinePixViewer and RAW FILE CONVERTER LE.

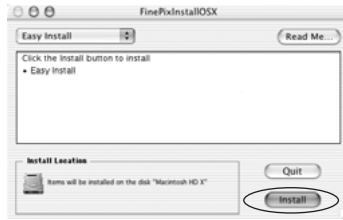


- 9 The ImageMixer VCD2 LE for FinePix installer automatically starts up and a window showing the installation progress appears (Installation may take several minutes).

- 10 The “FinePixViewer installation completed” message dialog appears. Then click exit button and close it.

- 11 Launch “Image Capture” from the “Applications” folder.

- 12 Change the Image Capture settings.
Select “Preferences...” from the “Image Capture” menu.

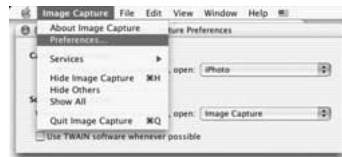

- 13 Select “Other...” from “When a camera is connected, open”.

- 14 Select “FPVBridge” from “FinePixViewer” folder in the “Applications” folder and click the [Open] button.



- 15 Select “Quit Image Capture” menu in the “Image Capture” menu.

6 Viewing Images

6.1 CAMERA CONNECTION

6.1.1 Using the AC power adapter


Always use the FUJIFILM AC Power Adapter AC-5VW (included) or AC-5VX/AC-5VH/AC-5VHS (sold separately) (→P.106).

Use the AC power adapter to prevent losing power at inconvenient times, such as when downloading photographed images to your PC. You can take pictures and play back images without worrying about depleting the battery.


See P.108 for notes on using the AC power adapter.

Only connect or disconnect the AC power adapter when the camera is off.


Connecting or disconnecting the AC power adapter while the camera is on temporarily interrupts the power supply to the camera, so that images or movies being shot are not recorded. Failing to turn the camera off first can also result in damage to the xD-Picture Card or malfunctions during PC connection.

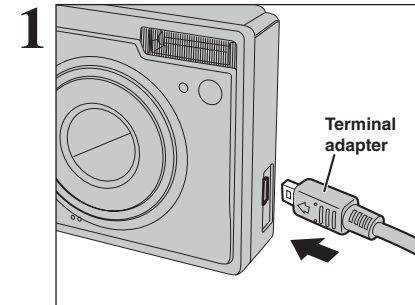

- 1 Check that the camera is turned off.
- 2 Plug the terminal adapter into the terminal adapter connection socket on the camera.

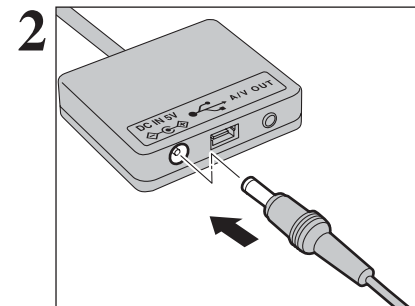

- 3 Plug the AC power adapter connector into “DC IN 5V” socket of the terminal adapter.

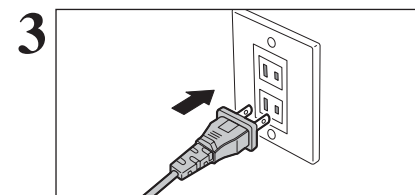


- 3 Plug the AC power adapter into the power outlet.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

The shape of the plug and socket-outlet depends on the country of use.


6.1 CAMERA CONNECTION

6.1.2 Connecting to a TV

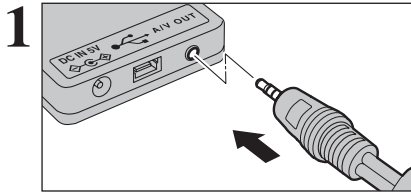


Plug the A/V cable (included) into the "A/V OUT" (Audio/Visual output) socket of the terminal adapter.

⚠ Do not connect USB cable (mini-B) to the camera.

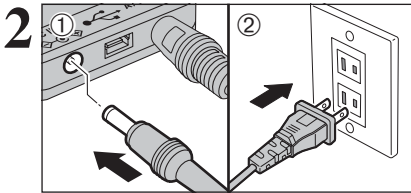


① Plug the AC power adapter connector into "DC IN 5V" socket of the terminal adapter.
② Plug the AC power adapter into the power outlet.

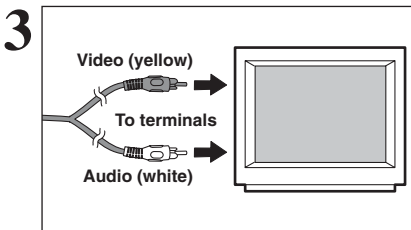

Plug the other end of the cable into the audio/video input socket on the TV.

⚠ When connecting the A/V cable to TV, the LCD monitor is turned off.
⚠ Refer to the instructions provided with your TV for more information on audio/video input for your TV.
⚠ The image quality for movie playback is lower than for still images.

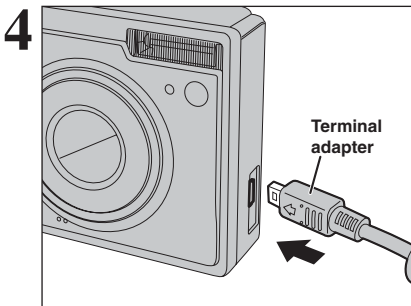

Plug the terminal adapter into the terminal adapter connection socket on the camera.


6.2 CONNECTING THE CAMERA DIRECTLY TO THE PRINTER — PictBridge FUNCTION

When a printer that supports PictBridge is available, images can be printed by connecting the camera directly to the PictBridge-compatible printer without using a PC.

⚠ In PictBridge function, images photographed on other than a camera may not be printed.




6.2.1 Specifying images for printing on the camera

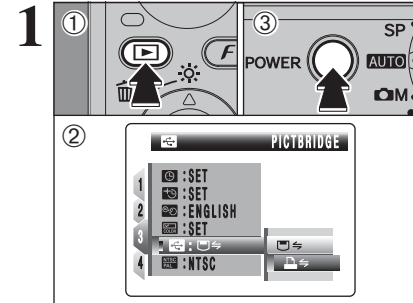


① Press the "▶" button for about 1 second to turn the camera on in Playback mode.
② Select "PICTBRIDGE" in "USB MODE" in the "SET-UP" menu (P.81).
③ Press the "POWER" button to turn the camera off.


⚠ Do not connect to a PC when the "USB MODE" setting is set to "PICTBRIDGE". See P.113 if you connect to a PC by mistake.

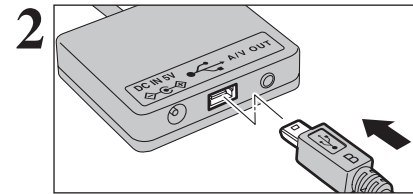

① Plug the USB cable (mini-B) into the USB socket of the terminal adapter.
② Connect the terminal adapter to your printer using the USB cable (mini-B).

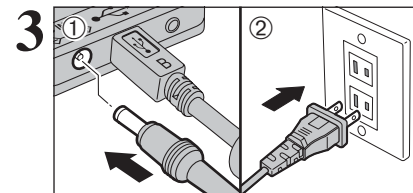


① Plug the AC power adapter connector into "DC IN 5V" socket of the terminal adapter.
② Plug the AC power adapter into the power outlet.

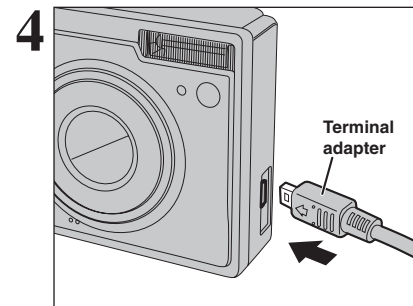

① Plug the terminal adapter into the terminal adapter connection socket on the camera.
② Turn the printer on.


⚠ The camera cannot be used to specify printer settings such as the paper size and print quality.
⚠ Use an xD-Picture Card that was formatted on the camera.

6.2 CONNECTING THE CAMERA DIRECTLY TO THE PRINTER — PictBridge FUNCTION

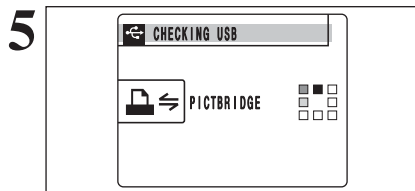


5 Press the “**▶**” button for about 1 second to turn the camera on in Playback mode. “CHECKING USB” appears and then the menu is displayed on the LCD monitor.

- ⚡ If the menu does not appear, check whether the “**USB**” USB MODE setting is “**↔**” PICTBRIDGE.
- ⚡ Depending on the printer, some functions are disabled.

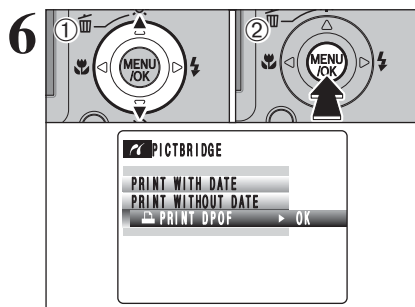

6 ① Press “**▲**” or “**▼**” to select “**PRINT DPOF**”.
② Press the “MENU/OK” button.


- ⚡ When [NOT SET DPOF] appears, the DPOF settings are not specified.
- ⚡ To use DPOF printing, the DPOF settings must be specified on FinePix F10 beforehand (⇒P.60).
- ⚡ Even when “WITH DATE” is specified in the DPOF settings, the date is not inserted on printers that do not support date printing.

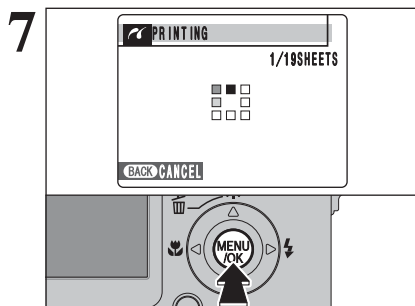

7 Press the “MENU/OK” button to download the data to the printer and print the frames specified in the DPOF settings.


- ⚡ Press the “DISP/BACK” button to cancel the printing. Depending on the printer, the printing may not be canceled immediately or printing may stop midway through. When printing stops midway, briefly turn the camera off and then on again.

6.2.2 Specifying images for printing without using DPOF (single-frame printing)

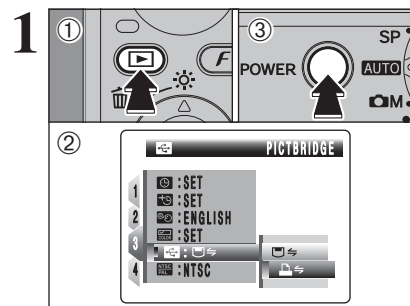


1 ① Press the “**▶**” button for about 1 second to turn the camera on in Playback mode.
② Select “**↔**” PICTBRIDGE in “**USB**” USB MODE in the “**SET**” SET-UP menu (⇒P.81).
③ Press the “POWER” button to turn the camera off.


- ⚡ Do not connect to a PC when the “**USB**” USB MODE setting is set to “**↔**” PICTBRIDGE. See P.113 if you connect to a PC by mistake.

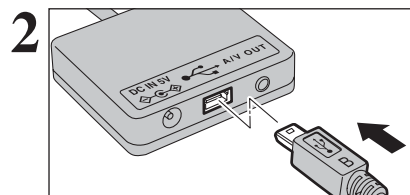

2 ① Plug the USB cable (mini-B) into the USB socket of the terminal adapter.
② Connect the terminal adapter to your printer using the USB cable (mini-B).

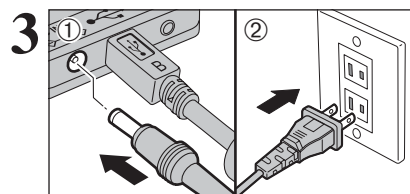


3 ① Plug the AC power adapter connector into “DC IN 5V” socket of the terminal adapter.
② Plug the AC power adapter into the power outlet.

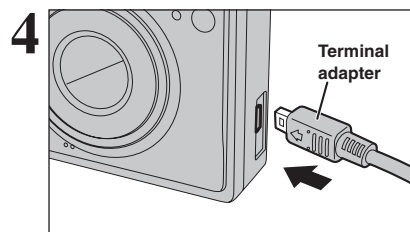

4 ① Plug the terminal adapter into the terminal adapter connection socket on the camera.
② Turn the printer on.


- ⚡ The camera cannot be used to specify printer settings such as the paper size and print quality.
- ⚡ Use an xD-Picture Card that was formatted on the camera.

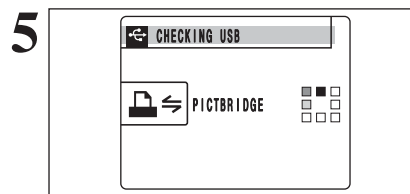

5 Press the “**▶**” button for about 1 second to turn the camera on in Playback mode. “CHECKING USB” appears and then the menu is displayed on the LCD monitor.


- ⚡ If the menu does not appear, check whether the “**USB**” USB MODE setting is “**↔**” PICTBRIDGE.
- ⚡ Depending on the printer, some functions are disabled.

6.2 CONNECTING THE CAMERA DIRECTLY TO THE PRINTER — PictBridge FUNCTION

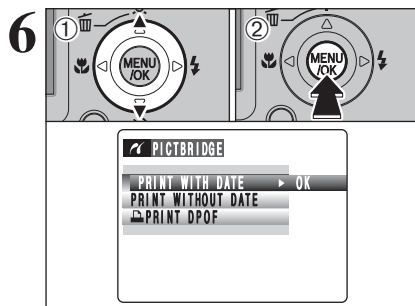


- 1 Press "▲" or "▼" to select "PRINT WITH DATE" or "PRINT WITHOUT DATE". If "PRINT WITH DATE" is selected, the date is imprinted on your prints.
- 2 Press the "MENU/OK" button.

⚠ "PRINT WITH DATE" is not available when the camera is connected to a printer that does not support date printing.

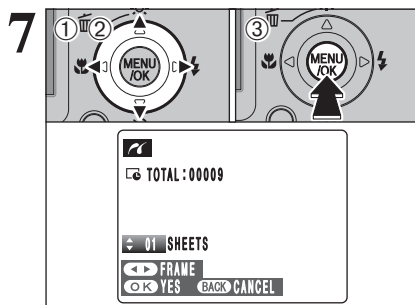

- 1 Press "◀" or "▶" to display the frame (file) for which you want to specify PRINT settings.
- 2 Press "▲" or "▼" to set a value up to 99 as the number of copies of the frame (file) to be printed. For frames (files) that you do not want printed, set the number of prints to 0 (zero). To specify more PRINT settings, repeat steps ① and ②.
- 3 Always press the "MENU/OK" button after the settings are completed.


⚠ Movie images cannot be printed.

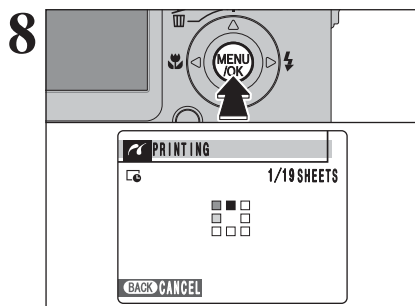

Press the "MENU/OK" button to download the data to the printer and start printing the specified number of prints.

⚠ Press the "DISP/BACK" button to cancel the printing. Depending on the printer, the printing may not be canceled immediately or printing may stop midway through. When printing stops midway, briefly turn the camera off and then on again.

Disconnecting the printer

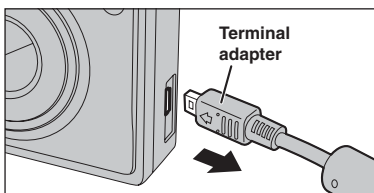

- 1 Check that "PRINTING" is not displayed on the camera's screen.
- 2 Turn the camera off. Unplug the Terminal adapter.

6.3 CONNECTING TO A PC

6.3.1 Connecting to a PC

The "Connecting to a PC" section explains how to connect the camera to your PC using the USB cable (mini-B) and describes the functions you can use once the camera and PC are connected.

If the power cuts out during data transmission, the data will not be transmitted correctly. Always use the AC power adapter when connecting the camera to a PC.

Refer to Section 5 the first time you connect the camera to your PC.


Install the software first. Do not connect the camera to the PC before installing all the software.




CD-ROM
(Software for FinePix CX)

DSC (Mass storage device) mode

This mode provides a simple way to read images from an **xD-Picture Card** and store images onto an **xD-Picture Card**.

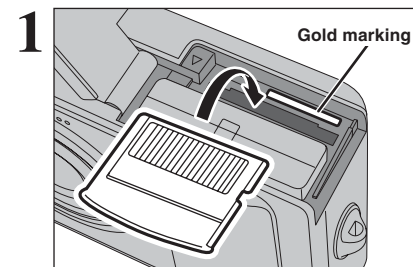


Insert an **xD-Picture Card** into the camera.

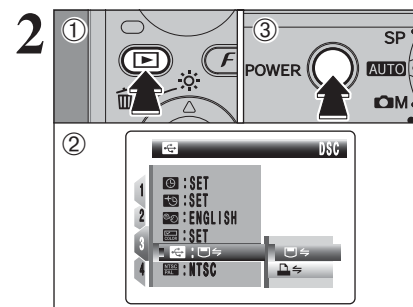


- 1 Press the "▶" button for about 1 second to turn the camera on in Playback mode.
- 2 Select "DSC" in "USB MODE" in the "SET" SET-UP menu (→P.81).
- 3 Press the "POWER" button to turn the camera off.


6.3 CONNECTING TO A PC

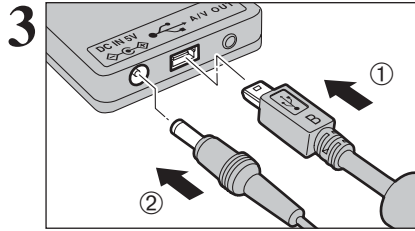

- ① Plug the USB cable (mini-B) into the USB socket of the terminal adapter.
- ② Plug the AC power adapter connector into "DC IN 5V" socket of the terminal adapter and then plug the AC power adapter into the power outlet.

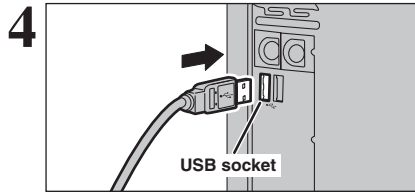


- ① Turn your PC on.
- ② Connect the terminal adapter to your PC using the USB cable (mini-B).

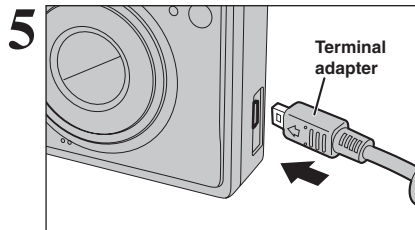

- Plug the terminal adapter into the terminal adapter connection socket on the camera. Press the "▶" button for about 1 second to turn the camera on in Playback mode.

Camera operation

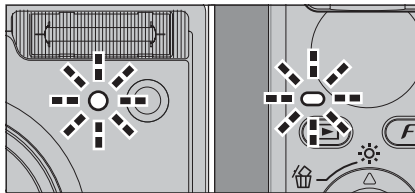

- When the camera and PC are exchanging data, the self-timer lamp blinks and the indicator lamp blinks alternately green and orange.
- "DSC" appears on the LCD monitor.
- Auto power off is disabled during USB connection.
- Before replacing the xD-Picture Card, always disconnect the camera from the PC. See P.102 for information on the disconnection procedure.
- Do not disconnect the USB cable (mini-B) when the camera is communicating with a PC. See P.102 for information on the disconnection procedure.

6 Set a PC

Windows 98 / 98 SE / Me / 2000 Professional / Macintosh

- The Windows CD-ROM may also be required during installation. In this event, change CD-ROMs as directed by the on-screen instructions.
- FinePixViewer automatically starts up and the Save Image Wizard window (Save Image dialog box) appears. Follow the instructions provided on screen to save the images. To proceed without saving the images, click the [Cancel] button.



* Screen for Windows 2000 Professional

- A removable disk icon appears and you can use your PC to transfer files to and from the camera.

Windows



Macintosh



If the above operations do not occur, you do not have the required software programs or drivers installed on your PC. Complete the required PC setup procedures. Then reconnect the camera to your PC.

Windows XP

- ① The "Found New Hardware" help message appears in the bottom-right corner of your screen. This message will close when the settings are completed. No action is required.
- This step is not required for subsequent connections.
- ② A new removable disk icon appears in the "My Computer" window. FinePixViewer automatically starts up and the Save Image Wizard window (Save Image dialog box) appears. Follow the instructions provided on screen to save the images. To proceed without saving the images, click the [Cancel] button.



◆ Regarding the icons ◆

The next time you connect the camera, the removable disk drive icon's name changes to the "FinePix" icon and name.


Proceed to "USING FinePixViewer" on P.103.

6.3 CONNECTING TO A PC

6.3.2 Disconnecting the camera



1 Windows

Once the image has been saved, the window below appears (Save Image Wizard Windows). To disconnect the camera, click the [Remove] button.

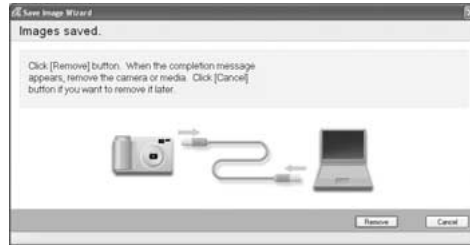

Macintosh

Once the image has been saved, the window below appears. To disconnect the camera, click the [OK] button.

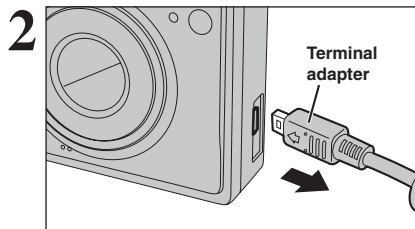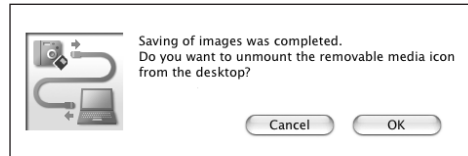

When the "It is now safe to disconnect the camera" message appears, click the [OK] button and disconnect the camera. Turn the camera off. Unplug the terminal adapter (included).

6.4 USING FinePixViewer

6.4.1 Mastering FinePixViewer

For all information on FinePixViewer functions, refer to "How to Use FinePixViewer" in the Help menu for details.

• What is explained in "How to Use FinePixViewer"...

"How to Use FinePixViewer" covers a range of topics, including batch processing and ordering prints.

■ Example: Looking up slide shows

- 1 Click "How to Use FinePixViewer" in the FinePixViewer Help menu.
- 2 Click "Basic Operation" and then click "Slide Show" in the menu that appears.
- 3 The "Slide Show" information appears. Press the "<<<" key to view the previous page or the ">>>" key to view the next page.

6.4.2 Uninstalling the software

Only perform this operation when you no longer require the installed software or when the software was not installed correctly.

Windows

- 1 Check that the camera is not connected to the PC.
- 2 Quit all currently running applications.
- 3 Open the "My Computer" window. Then open the "Control Panel" and double-click on "Add/Remove Programs".



- 4 The "Add/Remove Programs Properties" window appears. Select the software to be uninstalled (FinePixViewer or the driver) and then click the [Add/Remove] button.

<To remove FinePixViewer>
FinePixViewer Ver.5.0
<To remove the driver software>
FUJIFILM USB Driver



6.4 USING FinePixViewer

- ⑤ When the message appears, click the [OK] button. Check your selection carefully since the process cannot be cancelled once you click the [OK] button.



- ⑥ Automatic uninstallation begins. When uninstallation ends, click the [OK] button.


Macintosh

■ Uninstalling FinePixViewer

Quit FinePixViewer. Then drag the installed FinePixViewer folder to the Trash and select "Empty Trash" in the "Finder" menu.


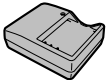



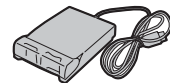
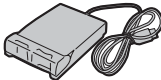


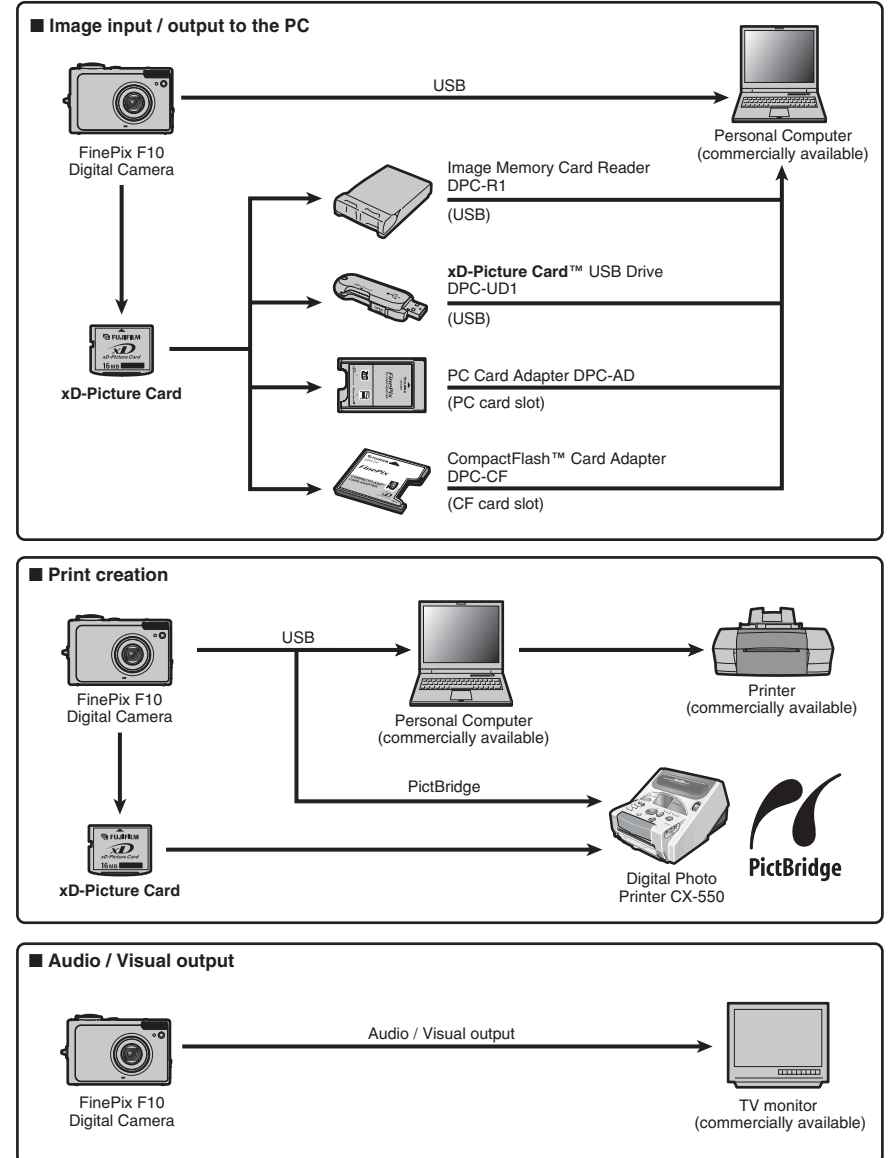

System Expansion Options

- By using the FinePix F10 together with other optional FUJIFILM products, your system can be expanded to fill a wide range of uses.



Accessories Guide

► Visit the FUJIFILM web site for the latest information on camera accessories.
<http://home.fujifilm.com/products/digital/index.html>

<p>● xD-Picture Card Use the following xD-Picture Cards: DPC-16 (16 MB)/DPC-32 (32 MB)/DPC-64 (64 MB)/DPC-128 (128 MB)/ DPC-256 (256 MB)/DPC-512 (512 MB)/DPC-M512 (512 MB)/DPC-M1GB (1 GB)</p>	
<p>● Battery Charger BC-65 Quickly charges the rechargeable battery. The BC-65 reduces charging time to approx. 225 minutes at +23°C (for the NP-120).</p>	
<p>● Rechargeable Battery NP-120 (1950 mAh) A Lithium-ion large capacity rechargeable battery</p>	
<p>● AC Power Adapter AC-5VX Use the AC-5VX when taking pictures or play back images for long periods or when the FinePix F10 is connected to a personal computer. * The shape of the AC power adapter, the plug and socket outlet depend on the country.</p>	
<p>● AC Power Adapter AC-5VH/AC-5VHS Use the AC-5VH/AC-5VHS when taking pictures or play back images for long periods or when the FinePix F10 is connected to a personal computer. * The shape of the AC power adapter, the plug and socket outlet depend on the country.</p>	
<p>● Soft Case SC-FXF10 This is a special case made of Leather that protects the camera against soil, dust and minor impacts when it is being carried.</p>	
<p>● Image Memory Card Reader DPC-R1 The DPC-R1 provides a quick and easy way to transfer images back and forth between your PC and an image memory card (xD-Picture Card and SmartMedia). The DPC-R1 uses the USB interface for high-speed file transfer. ● Compatible with Windows 98/98 SE, Windows Me, Windows 2000 Professional, Windows XP or iMac, Mac OS 8.6 to 9.2.2, Mac OS X (10.1.2 to 10.2.2) and models that support USB as standard. ● Compatible with xD-Picture Card of 16 MB to 512 MB, and SmartMedia of 3.3 V, 4 MB to 128 MB.</p>	
<p>● PC Card Adapter DPC-AD The PC Card Adapter allows the xD-Picture Card and SmartMedia to be used as a PC Card Standard ATA-compliant (PCMCIA 2.1) PC card (Type II). ● Compatible with xD-Picture Card of 16 MB to 512 MB, and SmartMedia of 3.3 V, 2 MB to 128 MB.</p>	
<p>● CompactFlash™ Card Adapter DPC-CF Loading an xD-Picture Card into this adapter allows you to use the card as a CompactFlash card (Type I). ● Windows 95/98/98 SE/Me/2000 Professional/XP ● Mac OS 8.6 to 9.2/X (10.1.2 to 10.1.5)</p>	
<p>● xD-Picture Card™ USB Drive DPC-UD1 This is a compact card reader for xD-Picture Cards. Simply plug the drive into the USB port to read and write data to an xD-Picture Card (No driver installation is required except on Windows 98/98 SE). ● Compatible with xD-Picture Card of 16 MB to 512 MB ● Windows 98/98 SE/Me/2000 Professional/XP ● Mac OS 9.0 to 9.2.2/X (10.0.4 to 10.2.6)</p>	
<p>● Waterproof Case WP-FXF10 This waterproof case protects your FinePix F10 from water damage yet allows you to make camera adjustments and use the flash. Dive up to 40 meters underwater with your FinePix F10 digital camera.</p>	

Using Your Camera Correctly

► Read this information and the “Safety Notes” (►P.118), to make sure you use your camera correctly.

■ Places to Avoid

Do not store or use the camera in the following types of locations:

- In the rain or in very humid, dirty or dusty places
- In direct sunlight or in places subject to extreme temperature rises, such as in a closed car in summer
- Extremely cold places
- Places with strong vibration
- Places with smoke or steam
- Places subject to strong magnetic fields (such as near motors, transformers or magnets)
- In contact with chemicals such as pesticides
- Next to rubber or vinyl products

■ Damaged by Water or Sand

The FinePix F10 can be damaged on the inside and outside by water and sand. When you are at the beach or close to water, make sure that the camera is not damaged by water or sand. Take care not to place the camera on a wet surface.

■ Damaged by Condensation

If the camera is carried from a cold location into a warm place, water droplets (condensation) may form on the inside of the camera or on the lens. When this occurs, turn the camera off and wait an hour before using the camera. Condensation may also form on the **xD-Picture card**. In this event, remove the **xD-Picture card** and wait a short time.

■ When the Camera is Not Used or is stored Periods of Time

If you do not intend to use the camera for a long period of time, remove the battery and the **xD-Picture card**.

■ Cleaning Your Camera

- Use a blower brush to remove any dust on the lens or LCD monitor, and then gently wipe the camera with a soft, dry cloth. If any soil remains, apply a small amount of lens cleaning liquid to a piece of FUJIFILM lens cleaning paper and wipe gently.
- Do not scratch hard objects against the lens or LCD monitor.
- Clean the body of the camera with a soft, dry cloth. Do not use volatile substances or cleaning products these items can cause damage.

■ Using the Camera When Traveling

When traveling overseas, do not place your camera in the check-in baggage. Baggage can be subjected to violent shocks, and the camera may be damaged inside or outside.


Notes on the Power Supply

Notes on the Battery (NP-120)

This camera uses the Rechargeable Lithium-ion Battery NP-120. Note the points below when using the rechargeable battery. Take particular care to read the Safety Notes to make sure that you use the battery correctly.

* When shipped, the NP-120 is not fully charged. Always charge the NP-120 before using it.

- When carrying the NP-120, install it in a digital camera or keep it in the soft case.
- When storing the NP-120, place it inside the special soft case provided.

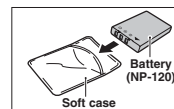

■ Battery Features

- The NP-120 gradually loses its charge even when not used. Use a NP-120 that has been charged recently (in the last day or two) to take pictures.
- To maximize the life of the NP-120, turn the camera off as quickly as possible when it is not being used.
- The number of available frames will be lower in cold locations or at low temperatures. Take along a spare fully charged NP-120.

You can also increase the amount of power produced by putting the NP-120 in your pocket or another warm place to heat it and then loading it into the camera just before you take a picture.

If you are using a heating pad, take care not to place the NP-120 directly against the pad. The camera may not operate if you use a depleted NP-120 in cold conditions.

■ Charging the Battery

- You can charge the battery using the camera and the AC power adapter (included).
 - The NP-120 can be charged at ambient temperatures between 0°C and +40°C (+32°F and +104°F). At an ambient temperature of +23°C (+73°F), it takes approximately 4 hours to charge a fully depleted NP-120 battery.
- You should charge the NP-120 at an ambient temperature between +10°C and +35°C (+50°F and +95°F). If you charge the NP-120 at a temperature outside this range, charging takes longer because the performance of the NP-120 is impaired.
- You cannot charge the NP-120 at temperatures of 0°C (+32°F) or below.
- You can also use the optional Battery Charger BC-65 to charge the NP-120. When charging, use the NP-120 battery adapter supplied with the BC-65 (Refer to the Owner's Manual for details).
 - The NP-120 can be charged using the BC-65 Battery Charger at ambient temperatures between 0°C and +40°C (+32°F and +104°F). At an ambient temperature of +23°C (+73°F), it takes approximately 225 minutes to charge a fully depleted NP-120 battery.
 - You should charge the NP-120 at an ambient temperature between +10°C and +35°C (+50°F and +95°F). If you charge the NP-120 at a temperature outside this range, charging takes longer because the performance of the NP-120 is impaired.

Notes on the Power Supply

- The NP-120 does not need to be fully discharged or exhausted flat before being charged.
- The NP-120 may feel warm after it has been charged or immediately after being used. This is perfectly normal.
- Do not recharge a fully charged NP-120.

Battery Life

At normal temperatures, the NP-120 can be used at least 300 times.

If the time for which the NP-120 provides power shortens markedly, this indicates that the NP-120 has reached the end of its effective life and should be replaced.

Notes on storage

The Rechargeable Lithium-ion Battery NP-120 is both compact and capable of storing large quantities of power. However, if it is stored for long periods while charged, the performance of the battery can be impaired.

- If the battery will not be used for some time, run the battery out before storing it.
- If you do not intend to use the camera for a long period of time, remove the batteries from the camera.
- Place the battery pack inside the soft case and store in a cool place.
- * The battery should be stored in a dry location with an ambient temperature between +15°C and +25°C (+59°F and +77°F).
- * Do not leave the battery in hot or extremely cold places.

Handling the Battery

To avoid injury or damage, observe the following:

- Do not carry or store battery with metal objects such as necklaces or hairpins.

AC Power Adapter

Always use the AC Power Adapter AC-5VW with the camera. The use of an AC Power adapter other than AC-5VW can be damaged to your digital camera.

- Use the AC Power Adapter for indoor use only.
- Plug the connection cord plug securely into the DC input terminal of the FUJIFILM Digital camera.
- Turn off the FUJIFILM Digital camera before disconnecting the cord from the FUJIFILM Digital camera's DC input terminal. To disconnect, pull out the plug gently. Do not pull on the cord.
- Do not use the AC power adapter with any device other than your camera.
- During use, the AC power adapter will become hot to the touch. This is normal.
- Do not take apart the AC power adapter. Doing so could be dangerous.
- Do not use the AC power adapter in a hot and humid place.
- Do not subject the AC power adapter to strong shocks.
- The AC power adapter may emit a humming. This is normal.
- If used near a radio, the AC power adapter may cause static. If this happens, move the camera away from the radio.

- Do not heat the battery or throw it into a fire.
- Do not attempt to take apart or change the battery.
- Do not recharge the battery with chargers other than those specified.
- Dispose of used battery properly.

To avoid damaging the battery or shortening its life, observe the following:

- Do not drop the battery or otherwise subject it to strong impacts.
- Do not expose the battery to water.

To make sure that you obtain optimum battery performance, observe the following:

- Always keep the battery terminals clean.
- Do not store battery in warm or humid places. Storing the battery for long periods in a hot location can shorten the battery life.

If you use the battery for a long period, the camera body and the battery itself will become warm. This is normal. Use the AC power adapter supplied with the camera if you are taking pictures or viewing images for a long period of time.

Specifications of the included NP-120

Nominal voltage	DC 3.6V
Nominal capacity	1950 mAh
Operating temperature	0°C to +40°C (+32°F to +104°F)
Dimensions	35 mm × 53 mm × 11 mm (1.4 in. × 2.1 in. × 0.4 in.) (W × H × D)
Mass (Weight)	Approx. 44 g (1.6 oz.)

* Very occasionally, DC output will be prevented by the operation of the internal protection circuit. In this event, unplug the AC power adapter AC-5VW from the power socket for a few moments and then plug it in again. This will restore DC output.

Specifications (AC-5VW)

Power Supply	AC 100V to 240V, 50/60Hz
Rated Input Capacity	13W (U.S.A. and Canada) 0.08A to 0.2A (other countries)
Rated Output	DC 5.0V 1.5A
Temperature During Use	0°C to +40°C (+32°F to +104°F)
Dimensions (MAX.)	40 mm × 21 mm × 79 mm (1.6 in. × 0.8 in. × 3.1 in.) (W × H × D)
Mass (Weight)	Approx. 110 g (3.9 oz.) (excluding power cord)

Notes on the xD-Picture Card™

Image Memory Card

- This Image Memory Card is a new image recording media (xD-Picture Card) developed for digital cameras. The Image Memory Card consists of a semiconductor memory (NAND-type flash memory) to record digital image data. The recording process is electrically performed and enables erasure of existing image data as well as re-recording of new image data.
- When using a new Memory Card, or a Memory Card that has been formatted by a PC, be sure to format the card with your digital camera before using it.

Protecting Your Data

- Images and movies may be lost or destroyed in the following situations. Please note that FUJIFILM assumes no responsibility for data that is lost or destroyed.
 1. Removal of the memory card or turning the power off while the memory card is being accessed (i.e., during record, erase, initialization, and playback operations).
 2. Improper handling and use of the memory card by the user or third party.
- Save your important data to another media (i.e., MO disk, CD-R, hard disk, etc.).

Handling xD-Picture Card

- When storing xD-Picture Cards, make sure that they are kept out of the reach of children. An xD-Picture Card could be swallowed cause suffocation. If a child swallows an xD-Picture Card, seek medical attention or call emergency number right away.
- When inserting the xD-Picture Card into the camera, hold the xD-Picture Card straight as you push it in.
- Do not expose an xD-Picture Card to shock. Do not apply pressure, and avoid bending.
- Do not use or store xD-Picture Card in hot and humid places.
- Clean the xD-Picture Card with a soft dry piece of cloth when dirty.
- When carrying or storing an xD-Picture Card, keep it in the special protective case.
- The xD-Picture Card will work well for long time, but will sooner or later lose its ability to store and play back images or movies. If this happens replace it with a new xD-Picture Card.
- Never remove the xD-Picture Card or turn the camera off during data recording or erasing (xD-Picture Card formatting) as this could be damaged to the xD-Picture Card.
- The use of xD-Picture Cards is recommended with the FinePix F10. The recording quality cannot be guaranteed when xD-Picture Cards other than those manufactured by FUJIFILM are used.
- The xD-Picture Card may feel warm when it is removed from the camera after taking pictures. This is normal.
- Do not put labels on the xD-Picture Card. Peeling labels can cause the camera not to work properly.

Using xD-Picture Card with a PC




- When taking pictures using an xD-Picture Card that has been used on a PC, reformat the xD-Picture Card using your camera for best quality.
- When formatting an xD-Picture Card, a directory (folder) is created. Image data is then recorded in this directory.
- Do not change or delete the directory (folder) or file names on the xD-Picture Card because this will make it impossible to use the xD-Picture Card in your camera.
- Always use the camera to erase image data on an xD-Picture Card.
- To edit image data, copy the image data to the PC and edit the copy.




Specifications

Type	Image memory card for digital cameras (xD-Picture Card)
Memory type	NAND-type flash memory
Conditions for use	Temperature: 0°C to +40°C (+32°F to +104°F) Humidity: 80% max. (no condensation) 25 mm × 20 mm × 2.2 mm (0.98 in. × 0.79 in. × 0.09 in.) (W × H × D)
Dimensions	

Warning Displays

▶ The table below lists the warnings that are displayed on the LCD monitor.

Warning Displayed	Explanation	Remedy
 (Lit red)  (Blinking red)	The camera battery is low or completely out of charge.	Load a new or fully charged battery.
	There is a strong likelihood of camera shake because the shutter speed is slow.	Use flash photography. However, use a tripod for some scenes and modes.
!AF	The AF (autofocus) cannot work effectively.	<ul style="list-style-type: none"> • If the image is too dark, take the picture at a distance of around 2 m (6.6 ft.) from the subject. • Use AF lock to take the picture.
!AE	Outside the AE continuous range.	The picture can be taken, but the correct brightness (exposure) will not be obtained.
FOCUS ERROR ZOOM ERROR	Camera malfunction or fault.	<ul style="list-style-type: none"> • Turn the camera on again, taking care not to touch the lens. • Turn the camera off and on again. If the message still appears, contact your FUJIFILM dealer.
NO CARD	No xD-Picture Card is inserted.	Insert an xD-Picture Card .
CARD NOT INITIALIZED	<ul style="list-style-type: none"> • The xD-Picture Card is not formatted. • The xD-Picture Card contact area is soiled. • Camera fault. 	<ul style="list-style-type: none"> • Format the xD-Picture Card on the camera. • Wipe the contact area on the xD-Picture Card with a soft dry cloth. It may be necessary to format the xD-Picture Card. If the message still appears, replace the xD-Picture Card. • Contact your FUJIFILM dealer.
CARD ERROR	<ul style="list-style-type: none"> • The xD-Picture Card contact area is soiled. • The xD-Picture Card is damaged. • The xD-Picture Card format is incorrect. • Camera fault. 	<ul style="list-style-type: none"> • Wipe the contact area on the xD-Picture Card with a soft dry cloth. It may be necessary to format the xD-Picture Card. If the message still appears, replace the xD-Picture Card. • Contact your FUJIFILM dealer.
CARD FULL	The xD-Picture Card is full.	Erase some images or use an xD-Picture Card that has ample free space.
WRITE ERROR	<ul style="list-style-type: none"> • The data could not be recorded due to an xD-Picture Card error or a connection error between the xD-Picture Card and camera. • The image cannot be recorded as it is too large to fit in the available space on the xD-Picture Card. 	<ul style="list-style-type: none"> • Re-insert the xD-Picture Card or turn the camera off and then on again. If the message still appears, contact your FUJIFILM dealer. • Use a new xD-Picture Card.
BUSY	The timing for recording was incorrect because the xD-Picture Card was formatted on a PC.	Use an xD-Picture Card that was formatted on the camera.
FRAME NO. FULL	The frame number has reached 999-9999.	<ol style="list-style-type: none"> ① Insert a formatted xD-Picture Card into the camera. ② Set "RENEW" as the FRAME NO. setting in the "SET-UP" menu. ③ Start taking pictures (The frame number starts from "100-0001"). ④ Set "CONT." as the FRAME NO. setting in the "SET-UP" menu.
READ ERROR	<ul style="list-style-type: none"> • The played back file was not recorded correctly. • The xD-Picture Card contact area is soiled. • Camera fault. • An attempt was made to play a movie or display an image that was not recorded on this camera. 	<ul style="list-style-type: none"> • Images cannot be played back. • Wipe the contact area on the xD-Picture Card with a soft dry cloth. It may be necessary to format the xD-Picture Card. If the message still appears, replace the xD-Picture Card. • Contact your FUJIFILM dealer. • Movies cannot be played back.

Warning Displayed	Explanation	Remedy
TOO MANY FRAMES	An attempt was made to show 5,000 or more images by date sorting.	No more than 4,999 images can be shown by date sorting.
PROTECTED FRAME	<ul style="list-style-type: none"> • A protected file was encountered. • An attempt was made to add a voice memo to protected file. 	<ul style="list-style-type: none"> • Protected files cannot be erased. Remove the protection. • Protected files cannot be added to voice memos. Remove the protection.
 ERROR	<ul style="list-style-type: none"> • The voice memo file is faulty. • Camera fault. 	<ul style="list-style-type: none"> • The voice memo cannot be played back. • Contact your FUJIFILM dealer.
 CAN NOT TRIM	An attempt was made to trim a 0.3M image.	The image cannot be trimmed.
CAN NOT TRIM	<ul style="list-style-type: none"> • An attempt was made to trim an image shot using a camera other than FinePix F10. • The image is damaged. 	The image cannot be trimmed.
DPOF FILE ERROR	Prints were specified for 1000 or more frames in the DPOF frame settings.	The maximum number of frames for which prints can be specified on the same xD-Picture Card is 999. Copy the images for which you want to order prints onto another xD-Picture Card and then specify the DPOF settings.
CAN NOT SET DPOF	An attempt was made to specify DPOF settings for an image that is not supported by DPOF.	DPOF printing cannot be used with this image format.
COMMUNICATION ERROR	The camera is not connected to a PC or printer.	<ul style="list-style-type: none"> • Check that the USB cable (mini-B) is connected correctly. • Check that your printer is turned on.
PRINTER ERROR	Displayed for PictBridge.	<ul style="list-style-type: none"> • Check that the printer is not out of paper or out of ink. • Turn the printer off briefly and then turn it back on. • Refer to the user manual supplied with your printer.
PRINTER ERROR RESUME?	Displayed for PictBridge.	Check that the printer is not out of paper or out of ink. Printing automatically restarts when the error is cleared. If the message still appears after checking, press the "MENU/OK" button to restart printing.
CANNOT BE PRINTED	Displayed for PictBridge.	<ul style="list-style-type: none"> • Refer to the user manual for the printer being used and check whether the printer supports the JFIF-JPEG or Exif-JPEG image format. If not, the printer cannot print the images. • Movie images cannot be printed. • Was the image data photographed using FinePix F10? You may not be able to print some images photographed on other cameras.
 PRINTING	Displayed for PictBridge.	This message appears when printing is performed from a FUJIFILM printer that supports PictBridge. Refer to the Owner's Manual for the printer for details.

Troubleshooting

► If you think the camera is faulty, check the following once more.

Troubleshooting	Possible causes	Solutions
The self-timer lamp does not light when charging the battery.	<ul style="list-style-type: none"> There is no battery in the camera. The camera and AC power adapter are not connected correctly. 	<ul style="list-style-type: none"> Load the battery. Connect the camera and AC power adapter correctly.
The self-timer lamp blinks during charging and the battery won't charge.	<ul style="list-style-type: none"> The battery terminals are dirty. The battery can no longer be recharged. 	<ul style="list-style-type: none"> Take the battery out briefly and then reload it. Wipe the battery terminals with a clean, dry cloth. Load a new or fully charged battery. If the battery still fails to charge, contact your FUJIFILM dealer.
No power.	<ul style="list-style-type: none"> The battery has run out. The AC power adapter plug has come out of the power outlet. The battery is loaded backward. The battery cover is not closed correctly. 	<ul style="list-style-type: none"> Load a new or fully charged battery. Plug the adapter back in. Load the battery in the correct direction. Close the battery cover correctly.
Power cuts out during operation.	The battery has run out.	Load a new or fully charged battery.
Battery runs out quickly.	<ul style="list-style-type: none"> Camera is used in extremely cold conditions. The terminals are soiled. The battery can no longer be recharged. 	<ul style="list-style-type: none"> Put the battery in your pocket or another warm place to heat it and then load it into the camera just before you take a picture. Wipe the battery terminals with a clean, dry cloth. Load a new or fully charged battery.
No photograph is taken when pressing the shutter button.	<ul style="list-style-type: none"> No xD-Picture Card is inserted. The xD-Picture Card is full. The xD-Picture Card is not formatted. The xD-Picture Card contact area is soiled. The xD-Picture Card is damaged. The Auto power off function has turned the camera off. The battery has run out. 	<ul style="list-style-type: none"> Insert an xD-Picture Card. Insert a new xD-Picture Card or erase some unwanted frames. Format the xD-Picture Card on the camera. Wipe the xD-Picture Card contact area with a clean dry cloth. Insert a new xD-Picture Card. Turn the camera on. Load a new or fully charged battery.
Can't use the flash.	<ul style="list-style-type: none"> The shutter button was pressed while the flash was charging. Photography mode is set to "N" NATURAL LIGHT, "L" LANDSCAPE. Continuous shooting is selected. 	<ul style="list-style-type: none"> Wait until the charging is completed before pressing the shutter button. Change the Photography mode. Set continuous shooting to "OFF".
The flash settings are restricted and cannot be selected.	The Photography mode is set to "M", "A", "S", "C", or "P".	The flash settings are restricted because the camera settings are tailored to the scene being shot. Change the Photography mode for a wider range of flash settings.
The playback image is dark even though the flash was used.	<ul style="list-style-type: none"> The subject is too far away. Your finger was covering the flash. 	<ul style="list-style-type: none"> Move to within the effective flash range before taking the picture. Hold the camera correctly.
The image is blurred.	<ul style="list-style-type: none"> The lens is dirty. You photographed scenery with Macro mode selected. You took a close-up shot without selecting Macro mode. You are shooting a subject that is not suited to autofocus. 	<ul style="list-style-type: none"> Clean the lens. Cancel Macro mode. Select Macro mode. Use AF/AE lock to take the picture.
There is speckling on the image.	The picture was taken with a slow shutter speed (long exposure) in a high-temperature environment.	This is a characteristic of CCDs and does not indicate a camera fault.
The camera does not emit any sound.	<ul style="list-style-type: none"> The camera volume is set too low. The microphone was blocked during shooting/recording. There is something covering the speaker during playback. 	<ul style="list-style-type: none"> Adjust the volume. Take care not to block the microphone during shooting/recording. Make sure that the speaker is uncovered.

Troubleshooting	Possible causes	Solutions
Frame erase does not erase the frame.	Some frames may be protected.	Unprotect frames using the camera on which the protection was first applied.
The ERASE ALL function does not erase all the frames.		
Screens are not displayed in English.	A language other than English is selected in the "言語/LANG. setting in the "SET-UP menu" (►P.81).	<ol style="list-style-type: none"> Press the "MENU/OK" button to display the menu. Press "▲" or "▼" to select "言語/LANG." and press "▶". Press "▲" or "▼" to select "言語/LANG." Press "▶". Press "▲" or "▼" several times to select "ENGLISH". Press the "MENU/OK" button.
There is no image or sound on the TV.	<ul style="list-style-type: none"> The included A/V cable was connected during movie playback. The camera is not connected to the TV correctly. "TV" is selected as the TV input. The video output setting is incorrect. The TV volume is turned down. 	<ul style="list-style-type: none"> After the movie playback mode is stopped, connect the camera and TV correctly. Connect the camera and TV correctly. Set the TV input to "VIDEO". Change the setting to "NTSC" or "PAL" (►P.81). Adjust the volume.
The TV image is black and white.	The video output setting is incorrect.	Change the setting to "NTSC" or "PAL" (►P.81).
When connecting the camera to a PC, the photographed image or playback image appears on the camera's LCD monitor.	<ul style="list-style-type: none"> The USB cable (mini-B) is not correctly connected to the PC or camera. The PC is not turned on. 	<ul style="list-style-type: none"> Set up the camera, and connect the USB cable (mini-B) correctly. Turn the PC on.
Nothing happens when using the Mode switch.	<ul style="list-style-type: none"> Camera malfunction. The battery has run out. 	<ul style="list-style-type: none"> Briefly remove the battery or disconnect the AC power adapter. Then reload the battery or reconnect the AC power adapter and try again. Load a new or fully charged battery.
The camera no longer works correctly.	The camera has suffered an unforeseen problem.	Briefly remove the battery or disconnect the AC power adapter. Then reload the battery or reconnect the AC power adapter and try again. If the message still appears, contact your FUJIFILM dealer.
Can't print with PictBridge.	"PictBridge" is not selected in USB mode in the "SET-UP menu".	Select "PictBridge" in USB mode in the "SET-UP menu".
The camera was connected to a PC when the USB mode was set to "PictBridge".		<p>Perform steps ① to ③ to remove the camera from the PC.</p> <ul style="list-style-type: none"> Windows <ol style="list-style-type: none"> The "New Hardware Found" wizard or "Scanner and Camera" wizard appears. If the wizard does not appear, proceed to step ③. Click the [Cancel] button. Disconnect the camera from the PC. Macintosh <ol style="list-style-type: none"> The window for locating the driver appears. If the window does not appear, proceed to step ③. Click the [Cancel] button. Disconnect the camera from the Macintosh.

Specifications

System	
Model	Digital camera FinePix F10
Effective pixels	6.3 million pixels
CCD	1/1.7-inch Super CCD HR Number of total pixels: 6.63 million pixels
Storage media	xD-Picture Card (16/32/64/128/256/512 MB/1 GB)
File format	Still image: DCF-compliant Compressed: Exif ver.2.2 JPEG, DPOF-compatible * Design rule for Camera File System compliant DPOF compatible Movie: AVI format, Motion JPEG Audio: WAVE format, Monaural sound
Max. recording resolution	2848 × 2136 (6.1 million)
Number of recorded pixels	Still image: 2848 × 2136 pixels/3024 × 2016 pixels/2048 × 1536 pixels/ 1600 × 1200 pixels/640 × 480 pixels (BM/SP/3M/2M/3M)
Lens	Fujinon 3× optical zoom lens F2.8-F5
Focal length	f=8 mm-24 mm (Equivalent to approx. 36 mm-108 mm on a 35 mm camera) (SP : Equivalent to approx. 37 mm-111 mm on a 35 mm camera)
Digital zoom	Approx. 6.2× (3× optical zoom lens is used together: Max. zoom scale: approx. 18.5×)
Aperture	F2.8 to F8 (Wide-angle), F5.0 to F8 (Telephoto)
Focal range	Normal: approx. 60 cm (2.0ft.) to infinity Macro: approx. 7.5 cm (3.0 in.) to 80 cm (2.6 ft.) (wide-angle) approx. 30 cm (1.0 ft.) to 80 cm (2.6 ft.) (telephoto)
Sensitivity	AUTO/Equivalent to ISO 80/100/200/400/800/1600
Photometry	TTL 64-zones metering Multi, Spot, Average
Exposure control	Program AE
Scene position	☉ (NATURAL LIGHT), ☺ (PORTRAIT), ▲ (LANDSCAPE), ✙ (SPORT), ☾ (NIGHT)
Exposure compensation	-2 EV to +2 EV in 1/3 EV-step increments (CM)
Shutter speed	3 sec. to 1/2000 sec. (depend on Exposure mode) * When the scene position is at "☾" NIGHT, it is possible to have long exposure times of 3 to 15 seconds.
Continuous shooting	Top 3-frame: Number of recorded frames: up to 3 frames (Max. 2.2 frames/sec.) Final 3-frame: Number of recorded frames: last 3 frames before releasing the shutter button (Max. 2.2 frames/sec.) Long-period continuous shooting mode: Number of recorded frames: up to 40 frames.1.3 sec. intervals at BM N depending on quality level. (Max. 0.9 frames/sec.)
Focus	Mode: Single-AF, Continuous AF AF system: TTL contrast-type AF frame selection: AF (CENTER), AF (MULTI)
White balance	Automatic scene recognition/Presets (Custom, Fine, Shade, Fluorescent (Daylight), Fluorescent (Warm White), Fluorescent (Cool White), Incandescent)
Self-timer	2 sec./10 sec.
Flash type	Auto flash Effective range: Wide-angle: approx. 60 cm-6.5 m (2.0 ft.-21.3 ft.) Telephoto: approx. 60 cm-4 m (2.0 ft.-13.1 ft.) Macro: approx. 30 cm-80 cm (1.0 ft.-2.6 ft.)

System	
Flash mode	Auto, Red-Eye Reduction, Forced Flash, Suppressed Flash, Slow Synchro, Red-Eye Reduction + Slow Synchro
LCD monitor	2.5 inches, Aspect ratio: 4:3; 115,000 pixels Amorphous silicon TFT, Approx. 100% coverage
Movie	640 × 480 pixels/320 × 240 pixels (640/320) (30 frames per second with monaural sound) A series of continuous image can be recorded depending on the available space on an xD-Picture Card . Zoom cannot be used during movie recording.
Photography functions	High-speed shooting, Best framing, Post shot assist window, Frame No. memory
Playback functions	Trimming, Automatic playback, Multi-frame playback, Sorting by date, Image rotate, Voice memo
Other functions	PictBridge, Exif print, Language (English, Francais, Deutsch, Español, Italiano, 中文, 한글), Time difference, FinePix photo mode (F -mode)

Input/Output Terminal	
External connection terminal	Multi connector terminal for terminal adapter. (USB/AC power adapter/Audio visual output)

Power Supply and Others	
Power supply	Use one of the following • Rechargeable Battery NP-120
Operating Conditions	Temperature: 0°C to +40°C (+32°F to +104°F) 80% humidity or less (no condensation)

Guide to the number of available frames for battery operation	Battery Type	Number of frames
		NP-120 (1950 mAh)
<p>According to the CIPA (Camera & Imaging Products Association) standard procedure for measuring digital still camera battery consumption (extract): When using a battery, use the battery supplied with the camera. The storage media should be xD-Picture Card. Pictures should be taken at a temperature of +23°C (+73°F), with the LCD monitor turned on, the optical zoom moved from full wide-angle to full telephoto (or vice-versa) and back again to its original position every 30 seconds, the flash used at full power every second shot and the camera turned off and then on again once every 10 shots.</p> <p>• Note: As the number of available shots varies depending on the level of charge in battery, the figures shown here for the number of available shots using battery is not guaranteed. The number of available shots will also decline at low temperatures.</p>		
Camera dimensions (W/H/D)	92.0 mm × 58.2 mm × 27.3 mm/3.6 in. × 2.3 in. × 1.1 in. (not including accessories and attachments)	
Camera mass (weight)	Approx. 155 g/5.5 oz. (not including accessories, battery and xD-Picture Card)	
Weight for photography	Approx. 200 g/7.1 oz. (including battery and xD-Picture Card)	
Accessories	See P.7	
Optional accessories	See P.106	

Specifications

■ Standard number of available frames/recording time per xD-Picture Card

The number of available frames, recording time or file size varies slightly depending on the subjects photographed. Note also that the divergence between standard number of frames and the actual number of frames is greater for xD-Picture Cards with higher capacities.

Quality setting	6M F	6M N	3:2	3M	2M	03M	640 (30 fps)	320 (30 fps)
Number of recorded pixels	2848 × 2136		3024 × 2016	2048 × 1536	1600 × 1200	640 × 480	640 × 480	320 × 240
Image data size	3.0 MB	1.5 MB	1.5 MB	780 KB	630 KB	130 KB	—	—
DPC-16 (16 MB)	5	10	10	19	25	122	13 sec.	26 sec.
DPC-32 (32 MB)	10	20	20	40	50	247	27 sec.	54 sec.
DPC-64 (64 MB)	21	42	42	81	101	497	55 sec.	109 sec.
DPC-128 (128 MB)	42	84	84	162	204	997	111 sec.	219 sec.
DPC-256 (256 MB)	85	169	169	325	409	1997	223 sec.	7.3 min.
DPC-512/M512 (512 MB)	170	339	339	651	818	3993	7.4 min.	14.6 min.
DPC-M1GB (1 GB)	341	680	680	1305	1639	7995	14.9 min.	29.3 min.

If you shoot using the DPC-M512/M1GB xD-Picture Card, movie recording time may be reduced if you repeatedly record and erase (frame erase) image files. In such a case, erase all frames or format the picture card before use. Back up important frames (files) onto your PC or another media.

* These specifications are subject to change without notice. FUJIFILM shall not be held liable for damages resulting from errors in this Owner's Manual.

* The LCD monitor on your digital camera is manufactured using advanced high-precision technology. Even so, small bright points and anomalous colors (particularly around text) may appear on the monitor. These are normal display characteristics and do not indicate a fault with the monitor. This phenomenon will not appear on the recorded image.

* The operation error may be caused in a digital camera by the strong radio interference (i. e. electric fields, static electricity, line noise, etc.).

* Due to the nature of the lens, the edges of images may appear distorted. This is normal.

Explanation of Terms

EV

A number denotes Exposure Value. The EV is determined by the brightness of the subject and sensitivity (speed) of the film or CCD. The number is larger for bright subjects and smaller for dark subjects. As the brightness of the subject changes, a digital camera maintains the amount of light hitting the CCD at a constant level by adjusting the aperture and shutter speed.

When the amount of light striking the CCD doubles, the EV increases by 1. Likewise, when the light is halved, the EV decreases by 1.

Frame rate (fps)

The frame rate refers to the number of images (frames) that are photographed or played back per second. For example, when 10 frames are continuously photographed in a 1-second interval, the frame rate is expressed as 10 fps.

For reference, TV images are displayed at 30 fps (NTSC).

JPEG

Joint Photographic Experts Group

A file format used for compressing and saving color images. The higher the compression rate, the greater the loss of quality in the decompressed (restored) image.

Motion JPEG

A type of AVI (Audio Video Interleave) file format that handles images and sound as a single file. Images in the file are recorded in JPEG format. Motion JPEG can be played back by QuickTime 3.0 or later.

Smear

A phenomenon specific to CCDs whereby white streaks appear on the image when there is a very strong light source, such as the sun or reflected sunlight, in the photography screen.

WAVE

A standard format used on Windows systems for saving audio data. WAVE files have the ".WAV" file extension and the data can be saved in either compressed or uncompressed format. Uncompressed recording is used on this camera.

WAVE files can be played back on a personal computer using the following software:

Windows: MediaPlayer

Macintosh: QuickTime Player

* QuickTime 3.0 or later

White Balance

Whatever the kind of the light, the human eye adapts to it so that a white object still looks white. On the other hand, devices such as digital cameras see a white subject as white by first adjusting the color balance to suit the color of the ambient light around the subject. This adjustment is called matching the white balance.



Exif Print Format is a newly revised digital camera file format that contains a variety of shooting information for optimal printing.

Safety Notes

- Make sure that you use your FinePix F10 camera correctly. Read these Safety Notes and your Owner's Manual carefully before use.
- After reading these Safety Notes, store them in a safe place.

About the Icons

The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.

	WARNING	This icon indicates that death or serious injury can result if the information is ignored.
	CAUTION	This icon indicates that personal injury or material damage can result if the information is ignored.

The icons shown below are used to indicate the nature of the information which is to be observed.

- Triangular icons tell you that this information requires attention ("important").
- Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited").
- Filled circles with an exclamation mark tell you an action that must be performed ("Required").

WARNING	
<p>If a problem arises, turn the camera off, remove the battery, disconnect and unplug the AC power adapter.</p> <p>Continued use of the camera when it is emitting smoke, is emitting any unusual odor, or is in any other abnormal state can cause a fire or electric shock.</p> <ul style="list-style-type: none"> ● Contact your FUJIFILM dealer. 	
<p>Do not allow water or foreign objects to enter the camera.</p> <p>If water or foreign objects get inside the camera, turn the camera off, remove the battery and disconnect and unplug the AC power adapter.</p> <p>Continued use of the camera can cause a fire or electric shock.</p> <ul style="list-style-type: none"> ● Contact your FUJIFILM dealer. 	
<p>Do not use the camera in the bathroom or shower.</p> <p>This can cause a fire or electric shock.</p>	
<p>Never attempt to change or take apart the camera. (Never open the casing.)</p> <p>Do not use the camera when it has been dropped or the casing is damaged.</p> <p>This can cause a fire or electric shock.</p> <ul style="list-style-type: none"> ● Contact your FUJIFILM dealer. 	
<p>Do not change, heat or unduly twist or pull the connection cord and do not place heavy objects on the connection cord.</p> <p>These actions could damage the cord and cause a fire or electric shock.</p> <ul style="list-style-type: none"> ● If the cord is damaged, contact your FUJIFILM dealer. 	
<p>Do not place the camera on an unstable surface.</p> <p>This can cause the camera to fall or tip over and cause injury.</p>	
<p>Never attempt to take pictures while in motion.</p> <p>Do not use the camera while you are walking or driving a vehicle.</p> <p>This can result in you falling down or being involved in a traffic accident.</p>	
<p>Do not touch any metal parts of the camera during a thunderstorm.</p> <p>This can cause an electric shock due to induced current from the lightning discharge.</p>	
<p>Do not use the battery except as specified.</p> <p>Load the battery as aligned with the indicator.</p>	

WARNING	
<p>Do not heat, change or take apart the battery.</p> <p>Do not drop or subject the battery to impacts.</p> <p>Do not store the battery with metallic products.</p> <p>Do not use chargers other than the specified model to charge the battery.</p> <p>Any of these actions can cause the battery to burst or leak and cause fire or injury as a result.</p>	
<p>Use only the battery or AC power adapters specified for use with this camera.</p> <p>Do not use voltages other than the power supply voltage shown.</p> <p>The use of other power sources can cause a fire.</p>	
<p>If the battery leaks and fluid gets in contact with your eyes, skin or clothing. Flush the affected area with clean water and seek medical attention or call an emergency number right away.</p>	
<p>Do not use the charger to charge battery other than those specified here.</p> <p>The charger is designed for NP-120 Rechargeable Battery. Using the charger to charge conventional battery or other types of rechargeable battery can cause the battery to leak fluid, overheat or burst.</p>	
<p>When carrying the NP-120, install it in a digital camera or keep it in the hard case.</p> <p>When storing the NP-120, keep it in the hard case provided.</p> <p>When discarding, cover the battery terminals with insulation tape.</p> <ul style="list-style-type: none"> ● Contact with other metallic objects or battery could cause the battery to ignite or burst. 	
<p>Keep xD-Picture Cards out of the reach of small children.</p> <p>Because xD-Picture Cards are small, they can be swallowed by children. Be sure to store xD-Picture Cards out of the reach of small children. If a child swallows an xD-Picture Card, seek medical attention or call an emergency number.</p>	

CAUTION	
<p>Do not use this camera in locations affected by oil fumes, steam, humidity or dust.</p> <p>This can cause a fire or electric shock.</p>	
<p>Do not leave this camera in places subject to extremely high temperatures.</p> <p>Do not leave the camera in locations such as a sealed vehicle or in direct sunlight.</p> <p>This can cause a fire.</p>	
<p>Keep out of the reach of small children.</p> <p>This product could cause injury in the hands of a child.</p>	
<p>Do not place heavy objects on the camera.</p> <p>This can cause the heavy object to tip over or fall and cause injury.</p>	
<p>Do not move the camera while the AC power adapter is still connected. Do not pull on the connection cord to disconnect the AC power adapter.</p> <p>This can damage the power cord or cables and cause a fire or electric shock.</p>	
<p>Do not use the AC power adapter when the plug is damaged or the plug socket connection is loose.</p> <p>This could cause a fire or electric shock.</p>	
<p>Do not cover or wrap the camera or the AC power adapter in a cloth or blanket.</p> <p>This can cause heat to build up and distort the casing or cause a fire.</p>	
<p>When you are cleaning the camera or you do not plan to use the camera for an extended period, remove the battery and disconnect and unplug the AC power adapter.</p> <p>Failure to do so can cause a fire or electric shock.</p>	
<p>When charging ends, unplug the charger from the power socket.</p> <p>Leaving the charger plugged into the power socket can cause a fire.</p>	
<p>Using a flash too close to a person's eyes may temporarily affect their eyesight.</p> <p>Take particular care when taking pictures of children.</p>	
<p>When an xD-Picture Card is removed, the card could come out of the slot too quickly. Use your finger to hold it and gently release the card.</p>	
<p>Request regular internal testing and cleaning for your camera.</p> <p>Build-up of dust in your camera can cause a fire or electric shock.</p> <ul style="list-style-type: none"> ● Contact your FUJIFILM dealer to request internal cleaning every 2 years. ● Please note this is not a free of charge service. 	



FUJI PHOTO FILM CO., LTD.

26-30, Nishiazabu 2-chome, Minato-ku, Tokyo 106-8620, Japan

<http://home.fujifilm.com/products/digital/>

Printed in Japan

Printed on recycled paper.

FGS-507102-FG